

刀模线

折线

出血线

型号:WLHP701

尺寸:180x95mm

⚠️ WARNINGS

- Only use the charging cable provided and a good quality USB power source.
- Charge the product in a well-ventilated area and avoid charging under pillows, blankets, or on flammable surfaces. Do not leave unattended while charging.
- To avoid damaging the headphones, please keep it away from direct streams of splashes and do not submerge into water.
- Do not expose this product to sources of heat. Do not expose to temperatures above 40°C, such as in a car on a hot day, or in direct sunlight.
- Prevent objects and debris from entering the device ports.
- To protect your hearing, keep the volume at a safe level and take regular breaks.
- Refer all servicing to qualified service personnel, which is required if this product is damaged in any way / is exposed to liquid, or does not operate normally.
- Children under age of 5 year must be supervised when using or handling this product.
- The battery is unreplaceable. If the battery is expanded, stop using and keep it away from children.

SPECIFICATIONS

Wireless version:	V5.4
Connection distance:	10 meters (barrier-free)
Speaker:	40mm
Built-in Battery:	400mAh
Sensitivity:	Kids mode - 85±3dB / Travel mode - 95dB±3dB
Charging Port:	Type-C
Play time:	About 30hrs at 50% volume
Charge time:	About 2hrs
Function:	Wireless/AUX-in/Siri/Kids/Travel modes
Product Net:	245g
Frequency:	2.402-2.48 GHz
Max ERIP:	
Working Temperature:	0-40°C




QUICK START GUIDE

WHAT'S INCLUDED:



1. CHARGE YOUR BOOMA ECHO


Before first use, fully charge the headphones using the supplied cable. The LED indicator will turn red while charging and will switch off once the headphones are fully charged.

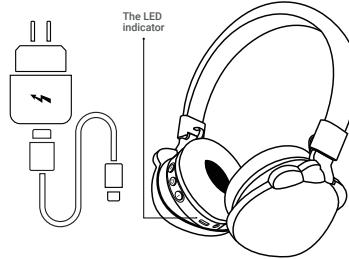


前面

2. CONNECT YOUR BOOMA ECHO


When the headphones are fully charged, press and hold the power button for 3 seconds. You will hear the sound "It's JellieMons" followed by "This is wireless mode." The LED indicator will then flash blue and red to signal that the headphones are ON and ready to pair.

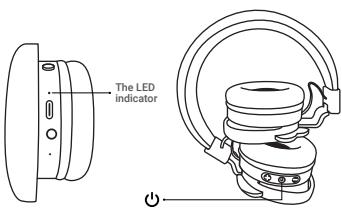

To connect, turn on Wireless in your phone settings and select BOOMA ECHO from the list of available devices. Once paired, you will hear a sound, "You are connected" to confirm a successful connection.

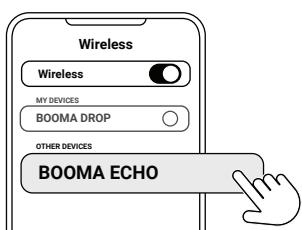


3. USE YOUR BOOMA ECHO

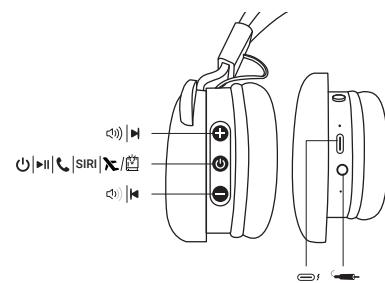

Turn ON/OFF	Press  for 3/5 seconds
Play/pause song	Press 
Previous track	Press and hold  for 1 second
Next track	Press and hold  for 1 second
Volume down	Press 
Volume up	Press 
Activate voice assistant	Press twice 
Answer/Hang up call	Press 
Reject incoming call	Press and hold  for 2 seconds
Change Kids/Travel mode (Effective in music mode ONLY)	Press triple 

4. USE AS WIRED HEADPHONES

Low battery? Connect the headphones to an audio source using the included cable to keep the music going nonstop!

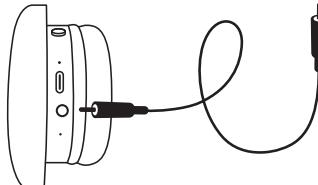

5. PRODUCT SUPPORT

For the latest assistance, simply scan this QR code to access product support.



CHECK OUT OUR WHOLE RANGE AT
JELLIEMONSCOM

JellieMons

背面