

刀模线
折线
出血线

型号:WLSP001
尺寸:180x95mm

⚠WARNINGS

- Only use the charging cable provided and a good quality USB power source.
- Charge the product in a well-ventilated area and avoid charging under pillows, blankets, or on flammable surfaces. Do not leave unattended while charging.
- To avoid damaging the headphones, please keep it away from direct streams of splashes and do not submerge into water.
- Do not expose this product to sources of heat. Do not expose to temperatures above 40°C, such as in a car on a hot day, or in direct sunlight.
- Prevent objects and debris from entering the device ports.
- To protect your hearing, keep the volume at a safe level and take regular breaks.
- Refer all servicing to qualified service personnel, which is required if this product is damaged in any way / is exposed to liquid, or does not operate normally.
- Children under age of 5 year must be supervised when using or handling this product.
- The battery is unreplaceable. If the battery is expanded, stop using and keep it away from children.

SPECIFICATIONS

Wireless version:	V5.4
Connection distance:	10 meters (barrier-free)
Speaker:	5W
Built-in Battery:	500mAh
Input USB-C:	DC 5V 1A Max
Play time:	8.5 hours (at 60% volume)
Charge time:	Approx 2.2 hrs
Product Net:	174g
Function:	BT mode/TF mode
Frequency:	2.402-2.48 GHz
Max EIRP:	
Working Temperature:	0-40°C

JellieMons

JellieMons BOOMA DROP Wireless speaker

WLSP001

BOOMADROP




QUICK START GUIDE

WHAT'S INCLUDED:



1. CHARGE YOUR BOOMA DROP SPEAKER


Fully charge before using for the first time. Connect the supplied cable to the speaker's charging port. The red light will turn on to indicate charging, and it will switch off once fully charged.

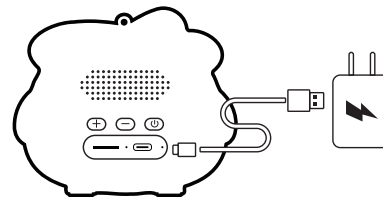


前面

2.CONNECT YOUR BOOMA DROP SPEAKER


When the speaker is fully charged, press and hold the power button for 3 seconds. You will hear the sound "It's JellieMons" followed by "This is wireless mode." The LED indicator will then flash blue light to signal that the speaker is ON and ready to pair.

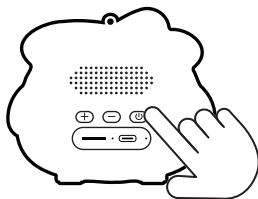

 Turn Wireless ON in your phone settings and select BOOMA DROP from the available wireless devices. The speaker will emit a sound "You are connected" to indicate it has successfully paired.

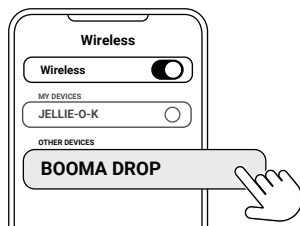

 3. USE YOUR BOOMA DROP SPEAKER

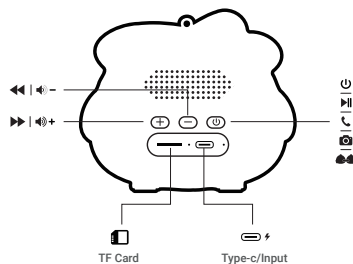

Speaker

Turn ON/OFF	Press for 3 seconds
Play/pause song	Press
Answer/Hang up call	Press
Reject incoming call	Press for 2 seconds
Take photos on phone	Press twice
TWS twins connect	Press twice
TWS twins disconnect	Press triple
Previous track	Press for 2 seconds
Next Track	Press for 2 seconds
Volume up	Press
Volume down	Press

4. CONNECTING TWO SPEAKERS

If you have two compatible BOOMA DROP speakers, you can link them to create a stereo pair. Begin by connecting the first speaker to your phone or other device using Wireless as usual.

Then, turn on the second speaker and wait a few seconds. Double-press the power button on the second speaker, and you will hear a tone indicating the speakers are now linked.

Your audio will play through both speakers for a richer sound experience. To unlink the speakers, simply double press the power button on either speaker.

5.PRODUCT SUPPORT

For the latest assistance, simply scan this QR code to access product support.



CHECK OUT OUR WHOLE RANGE AT
[JELLIEMONS.COM](https://www.jelliemons.com)

JellieMons

背面