

MINISO

USER MANUAL

使用說明書

Snoopy Colorful Vintage Collection

TWS Wireless Earphones

Snoopy Collection Vintage

Colorful Ecouteurs Sans Fil TWS

سماعات لاسلكية TWS سبوي الملون

Auriculares Inalámbricos TWS

Colection Snoopy Vintage Colorido

史努比繽紛復古系列TWS藍牙耳機

MODEL: Snoopy01

Accessories

Device*1, User Manual*1, USB-C Charging Cable*1

Product Parts

1. Charging Case Functional Button

2. USB-C Charging Port

3. Earphones Charging Contact

4. Touch Button (MFB Button)

5. Mic

6. Charging Case Digital Display

Function Parameters

BT Version	V5.4	Charging Time	1h
BT Name	MINISO-Snoopy01	Music Playback Time	Around 3h
Charging Port	USB-C	Transmission Distance	10m
Earphone Battery Capacity	30mAh	Charging Case Battery Capacity	400mAh

Functions

Function

Charging Case Instructions

Turn On

Turn Off

Pairing Mode

Play/Pause

Next Track

Previous Track

Answer/End Call

Open the lid of charging case

Put the earphones into charging case and close the lid

For first time connection, open the upper lid of charging case, the earphones enter into pairing mode automatically. Search for MINISO-Snoopy01 and choose to connect, there is a prompt after the earphones are connected successfully. The next time you turn on the earphones will connect automatically with the last device.

Press left/right earphone MFB button twice

Press right earphone MFB button three times

Press left earphone MFB button three times

Press left/right earphone MFB button twice

Use product prior to reading manual and user manual, and keep safe storage.

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT PROPERLY.

React Cell Activate Phone's Voice Assistant System (Siri/ Google Assistant/ Alexa Mode)	Press knighthi! earphone MFB button for 2 seconds Music/State/Standby State, press knighthi earphone MFB button for 2 seconds; when using a single earphone, press knighthi earphone MFB button for 2 seconds Music/State/Standby State, press right earphone MFB button for 2 seconds
Return to Factory Settings	Press knighthi! earphone MFB button five times
Indicator Light	Earphones Powered On: earphones with light blinks Left & Right Earphones Dual Connection Done: main earphones with light blinks, secondary earphones with light blinks once Bluetooth Connection Done: earphones light turns on Earphones Charging/Charged by Charging Case: earphones with light constantly on Earphones Charging/Charged by Charging Case: digital display constantly on, light, digital dim Press Once Charging Case Battery: digital display turns on, you can see touch battery level Press Twice Charging Case Battery: digital display turns off Charging Case Low Battery: digital display shows touch battery level Press Once Charging Case Battery: digital display shows touch battery level and blink Full Battery: 100% on the display
Charging Case Battery Display	

Cautions

1. Keep of reach of children, to avoid danger caused by improper use of the product.
2. Do not use the product under unreasonable voltage and time period to avoid "heating" damage. Do not use the product while driving, riding a bicycle, operating machinery, working on something that requires you to pay attention to external sounds, or when you are tired or under the influence of alcohol. The ambient temperature should be between -10°C to $+35^{\circ}\text{C}$ or higher than $+45^{\circ}\text{C}$. The maximum temperature is too high or too low may be harmful.
3. Avoid contact with water or other liquids to avoid damage to the internal parts of the product.
4. Do not disassemble, hit, squeeze the product, or throw the product into fire or water. If the battery bulges or leaks, stop using it.
5. Do not use the product during thunderstorms. Thunderstorms can cause abnormal operation of the device and increase the risk of electric shock, fire, or explosion. Do not use the product with other non-implemented devices (such as power amplifiers, etc.).
6. Do not use the product with advanced technology, the strength of the signal related to the specific use environment. If there are more overlapping wireless signals nearby or there is strong electromagnetic wave interference, the signal may be unstable or become unreliable or even disconnected.
7. The product will not be used for a long time, please charge the product every three months with a device that supports wireless-charge damage.
8. Do not use the product with both hands. Please use the product with one hand every month or a day, both hands for discharging.
9. It is recommended to use a charger from a brand manufacturer with certification 5V/2A or higher (e.g. Pseste) instead of fast-charging chargers with voltage exceeding 5V to avoid excessive charging from the external power source.

Troubleshooting

1. Wireless earphones fail to pair with the phone.
Solution: Check if the earphones are in pairing mode, and whether the phone is in pairing mode. Check the list on your phone, remove the earphones, and then pair them again. See the instructions in user manual to pair the earphones with phone again.

2. Cannot turn on the wireless earphones.
Solution: Check the battery to see if it is low.
Answer: No. Can the battery of the wireless earphones be recharged?
Answer: No. The lithium polymer battery in the earphones is implanted with a microchip. It cannot be recharged with the phone via USB.

3. The wireless earphones get disconnected with the phone without warning.
Solution: BT is wireless so that it is very sensitive to other nearby devices. Earphones and the connected device, Check if there are any metal objects or objects may affect the connection within the effective distance.

4. Cannot hear audio playing when the earphones are connected to computer.
Solution: Make sure whether the computer's audio output is already connected to the earphones and whether the Bluetooth is the active output protocol. Make sure the volume is up on your phone or computer.

5. Cannot operate the Apps by my phone through the earphones after I have connected the earphones to my phone.
Solution: Some Apps may not support being operated through the ear due to their settings.

FCO Warning

Any changes or modifications not expressly approved by the FCC for compliance could void the user's authority to operate the device. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including that which may cause undesired operation.

Note: Equipment has been tested and found to comply with Class B digital device, pursuant to part 15 of the FCC Rules designed to provide reasonable protection against harmful interference to residential installations. This equipment generates uses and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. It can be corrected by one or more of the following measures:

- The user is encouraged to try to correct the interference by the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the problem equipment is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure device can be used in portable exposure condition without

ity responsible agent, subject to the following limitations:

Interference from the limits for use in limited areas is a radiative radio with the following conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including such undesired operation of the device.

The device has been evaluated to meet general RF exposure limits can be used in portable exposure conditions with the following limitations:

The charging device is not included.

The power delivered by the charging device is 2 Watts required by the product, and order to achieve the maximum charging rate.

to be between min
and 2 Watts in
use.



Chargement
batteries

Nutrimétrie

Paramètres du Produit	
Version BT	V5.4
Nom BT	MINISO-Incroyable!
Port de chargement	USB-C
Capacité de la batterie du fluxeur	30mAh

Fonctions	
Fonction	Instructions Relatives aux
Activer	Ouvrir le couvercle du boîtier.
Désactiver	Placer les écouteurs dans le couvercle.
Mode Appairage	Pour la première connexion, le boîtier de chargement, les écouteurs et le MINISO-Incroyable! envoient un message vibratoire après 10 secondes. Lors de la prochaine mise en contact, le boîtier de chargement se connectera automatiquement.
Lecture/ Pause	Appuyer deux fois sur le bouton

		Plate Suivante	Appuyer trois fois sur
Temps de chargement	1h	Plate Précédente	Appuyer trois fois sur
Angle de lecture du code	Around 3h	Répondre Téléphone	Appuyer deux fois sur
Distance de transmission	10m	Répondre Appeler	Appuyer sur la touche d'appel
Capacité de la mémoire de l'état de chargement	400mAh	Relever le Récepteur	Appuyer sur la touche d'appel pendant 2 secondes
		Activer Appeler	Appuyer sur la touche d'appel pendant 2 secondes
		Vocal du Téléphone	Mode Musique Reculer d'un pas
		Changement de Mode	
		Notification de la batterie	
		Paramètres de Fabrication	Appuyer cinq fois sur
État de chargement			
État de chargement et fermer le			
Appuyer la couverture supérieure du téléphone pendant automatiquement 01 et choisissez de vos connecteurs, connectez les écouteurs, casque, les écouteurs se au dernier MFB de Recouleur gauche/droit			

[illegible][illegible]

	Réponses
nement d'utilisation spécifiques. S'il y a plus de rechargement à proximité ou s'il y a des tensions électromagnétiques, le signal reçu par le produit sera compromis. Il utilise pendant une longue période, veuillez le tenir tous les ans afin d'éviter que la batterie ne soit trop déchargée avant de le nettoyer ou de l'entretenir. Pour éviter un chiffon doux, propre et sec. Évitez un chargement d'une marque certifiée, avec une batterie d'origine. Évitez d'entraîner des changements à chargement rapide et supérieur à 5 V afin d'éviter tout dommage.	1. Les écouteurs Solution : Vérifier la connexion des écouteurs et des câbles. 2. La batterie Solution : Vérifier la charge de la batterie. 3. La batterie Réponses : Non 4. Les écouteurs Solution : Vérifier la connexion des écouteurs et des câbles. 5. Impossible Solution : Vérifier la connexion des écouteurs et des câbles. 6. Panser l'unité Réponses : Non 7. Les écouteurs

[illegible]

Assurance USED:

Il contient un (des) article(s) de(s) acceptat(eur) exemplé(s) de licence (s) conformé(s) au(s) RSE de l'innovation, des Sciences et du Développement Économique du Canada, L'Alliance est soumise aux deux suivantes :

serai ne doit pas causer d'interférences,

serai doit accepter toute interférence, y compris les interférences de provocation un fonctionnement indésirable de l'appareil a été évalué pour répondre aux exigences générales en matière aux radioélectriques, l'appareil peut être utilisé dans des d'exposition portable.

Le dispositif de chargement n'est pas inclus.

La puissance délivrée par le chargeur doit être comprise entre min (2 Watts requis par le produit, et max (2 Watts afin d'atteindre la vitesse de charge maximale.

خطوات:

1. إزالة الغطاء من المحول.

2. إدخال كابل USB-C في المحول.

3. إدخال المحول في منفذ USB-C الموجود على الخلف من الكاميرا.

4. تشغيل الكاميرا.

5. الضغط على زر التشغيل.

6. تحديد الصورة التي تريد نقلها.

وقت التفتيش	V5.4
3 دقائق	MINISO-SnappyV1
من 10	USB-C
من 600	مدة مراقبة حالة الشحن

[illegible]

مدار الوصف	الحس الاستراتيجي
إعداد الموقع	إعداد الموقع
المؤشر	المؤشر
عجلة الفرصة	عجلة الفرصة

[illegible][illegible][illegible][illegible][illegible]

problemas

con el teléfono, como el de que sus audífonos están en modo de emparejamiento, retire el **Bluetooth** está buscando un dispositivo de destino. Retire los audífonos de la lista y vuelva a conectarlos con su teléfono.

encender los audífonos, como el nivel de la batería.

reemplazar la batería de los audífonos inalámbricos? El palmero de entre los Bto de los audífonos no se puede quitar, conectar los audífonos con el teléfono a menos de 10 metros, por lo inalámbrico por lo que más sensible a los objetos entre dispositivos conectados. Compruebe si hay algún metal u otros objetos afectando la recepción de la antena de comunicación.

mejorar la reproducción de audio cuando los audífonos son más ruidosos.

si la calidad de audio de la computadora ya está conectada a audífonos de la computadora es compatible con el protocolo A2DP, el nivel de volumen de los audífonos a computadora no está bajo.

las aplicaciones de voz inalámbrica a través de los audífonos para que algunas aplicaciones no admiten el funcionamiento a teléfono debido a su configuración.

1. 充電盒充電線
2. USB-C 充電口
3. 耳機充電插電
4. 觸控搖桿 (MFB 鍵)
5. 掛帶孔
6. 充電盒蓋鎖開

產品參數			
原廠版本	V5.4	充電時間	1H
通訊配對方式	MINISO-Snoopy01	發接時間	854.5H
介面類型	USB-C	傳輸距離	10m
互聯網路容量	30mAh	充電電池容量	400mAh

[illegible]

注意事項

在使用本座於時，請與下列之注意事項(如5項)等，併作至少5個月的試驗，以瞭解其使用情形。欲瞭解其使用情形者，請向本公司索取說明書。此處所列之注意事項，係以本座之試驗結果，並參考其他電氣安全標準，將牙齒座與牙齒電氣裝置，併置於100萬伏特之電壓下，維持30分鐘之電氣安全試驗，然後將電氣裝置，置於100萬伏特之電壓下，維持30分鐘之電氣安全試驗，然後將電氣裝置，置於100萬伏特之電壓下，維持30分鐘之電氣安全試驗，然後將電氣裝置，置於100萬伏特之電壓下，維持30分鐘之電氣安全試驗。

1. 欲瞭解其使用情形者，請向本公司索取說明書。

2. 欲瞭解其使用情形者，請向本公司索取說明書。

3. 欲瞭解其使用情形者，請向本公司索取說明書。

4. 欲瞭解其使用情形者，請向本公司索取說明書。

5. 欲瞭解其使用情形者，請向本公司索取說明書。

故障排除

1. 欲瞭解其使用情形者，請向本公司索取說明書。

2. 欲瞭解其使用情形者，請向本公司索取說明書。

3. 欲瞭解其使用情形者，請向本公司索取說明書。

4. 欲瞭解其使用情形者，請向本公司索取說明書。

5. 欲瞭解其使用情形者，請向本公司索取說明書。

6. 欲瞭解其使用情形者，請向本公司索取說明書。

7. 欲瞭解其使用情形者，請向本公司索取說明書。

8. 欲瞭解其使用情形者，請向本公司索取說明書。

9. 欲瞭解其使用情形者，請向本公司索取說明書。

10. 欲瞭解其使用情形者，請向本公司索取說明書。



 UNIVERSITÄT
 MÜNSTER