

C13d 自拍杆三脚架

使用说明书

各部分说明

可分离手机夹
1/4"接口
不锈钢杆
三脚架
可拆卸补光灯
调节锁
遥控器

遥控器

取出遥控器

使用遥控器

开关键: 上推开机 下推关机

拍照键: 单击拍照/录视频

连接遥控器

初次连接:
开启遥控器,
指示灯闪烁进入配对状态,
手机搜索"Selfie"匹配,
配对成功后,指示灯熄灭。

在未连接状态下:
5分钟无操作自动关机
(重复拨动开关键开机)

自动连接:
开机可自动连接已配对手机。

可拆手机夹

安装手机

利用手机推动
夹子后固定

拆卸手机夹

将手机旋转至
竖屏后向上取出

手机支架

打开手机夹

手机支架

兼容广泛

1/4"接口可兼容运动相机、数码相机、
环形灯、魔术臂等;手机夹可搭配双补光灯。

可拆卸补光灯

前补光 后补光

长按开关按钮2秒开灯,
再按切换灯光模式。

灯光模式:
白光:柔光,强光
暖光:柔光,强光
混光:柔光,强光

任何时候长按开关键,灭灯并记忆,
充电时,红灯长亮,充满时灯灭。

使用三脚架

1 2 3 4

调节自拍杆

360° 260°

规格

自拍器型号	TOKQIG08
材料	ABS+不锈钢
折叠长度	227mm
总长度	1350mm
尺寸	227x70x46mm
产品重量	285g
电池	CR2032(可更换)

(电池不得暴露在诸如日照、火烤或类似过热环境中)

提醒

·遥控器兼容
Android 4.4以上 iOS 5.1以上

·Android设备设置
如果你在相机选项下改变了你的
“音量键功能”,请把它改为“默认”或者
“拍照”,让遥控器正常工作。

感谢您的支持!

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna
-Increase the separation between the equipment and receiver
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance, such modifications could void the user's authority to operate the equipment

The device has been evaluated to meet general Re exposure requirement
This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

C13d Selfie Stick Tripod

User Manual

Part Description

Detachable Phone Mount
1/4"Interface
Stainless Steels Rod
Tripod
Detachable Fill Light
Adjustable Lock
Remote Control

Remote Control

Take out the remote control

Use the remote control

Power Key:
Push up to turn on
Push down to turn off

Button:
Click to shoot photo/video

Connect Your Phone

First time connection:
Turn on the remote control and the light flashes to enter the pairing state. Search "Selfie" with your phone to match, after successful pairing, the indicator light will turn off.

In the unconnected state:
No operation of the remote control for 5 mins, it will automatically shut down.
(Repeatedly toggle the power key to turn on)

Automatic connection:
Turning on the remote control automatically connects the paired phone.

Detachable Phone Mount

Mount the phone

Use the phone to push the clip to clamp the phone

Remove the phone mount

Turn the phone selection to vertical screen and remove it upwards

Phone Holder

Open the phone mount

Phone holder

Widely Compatible

1/4"interface is compatible with sports cameras, digital cameras, ring light, magic arms, etc. Phone mount can be used with dual fill light.

Detachable Fill Light

Front fill light Rear fill light

Press the Light Bottom for 2 seconds to turn on the light, and then press to switch the light mode.

Light mode:
White light: soft light, strong light
Warm light: soft light, strong light
Mixed light: soft light, strong light

Press the light bottom for a long time at any time, turn off the light and remember, When charging, the red light is always on, and the light is off when fully charged.

Use the Tripod

1 2 3 4

Adjust the Selfie Stick

360° 260°

Specification

Remote Model	TOKQIG08
Main Material	ABS+Stainless Steels
Folded Length	227mm
Extended Length	1350mm
Product Size	227x70x46mm
Product Weight	285g
Battery	CR2032(Replaceable)

(the Battery must not be exposed to sunlight, fire or similar overheating environments.)

Remind

·Remote control compatibility:
Android 4.4 or above, iOS 5.1 or above

·Android devices settings:
If you change your "volume key function" on the camera, be sure to change it to the "default value" or "Shooting". Getting the remote control to work.

Thank you for your support!