

M-A25新说明书

折页尺寸: 19 X 39 CM

注意: 红边虚线为拆线位置 实际制作时需要去掉

Quick Installation Guide

Product Name : WiFi Extender
Product Name : M-A25

REV.2.0

Quick Installation

Working mode Diagram

Note: If you need to connect the network cable, please connect the network cable after the configuration is completed.

 
Repeater Mode: As a wireless signal extender

A. Extend your Wi-Fi signal without using any cables to reduce wiring troubles.



AP Mode: As a wired signal extender (access point)

Get better WiFi speed by connecting the router and the extender with network cable in the poor WiFi signal area.

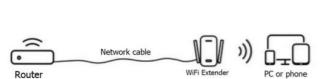


Quick Installation Guide

When the machine work normally, use the mobile phone to search and connect to Repeater-XXXXXX. (XXXX is the last 6 numbers of the repeater MAC address)

Note: If the mobile phone does not automatically jump to setting page after connecting, please click "forget" the wifi name that has been connected on the mobile in wifi manage, turn off the wifi and then reopen the wifi to search it, or input "192.168.11.1".

Step1 Click repeater mode to enter the network search page.

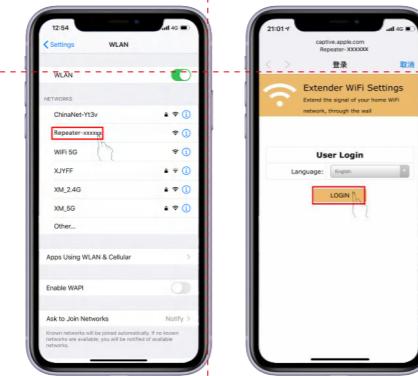

Wi-Fi Repeater mode setup

Step1 Click repeater mode to enter the network search page.




— 1 —

— 2 —

— 3 —


Step1: Select the wireless signal you want to expand if it is a hidden network, you need to add it manually.

Step2: Enter your router connection password and click "NEXT". If you don't want the same name as your router, please choose and input the new name.

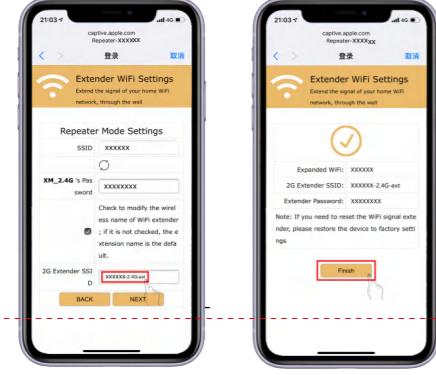


Step3: Click the "Finish" button to complete the relay mode configuration. (The extended WiFi's password is the same as the routers' by default)

Step4: Complete Repeater Mode setting.

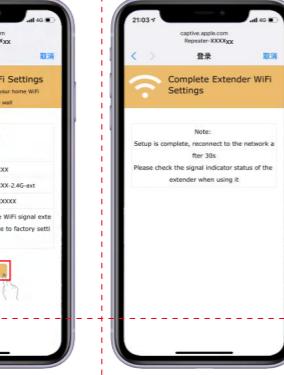

AP mode Setting

Step1: Click to Select "AP" mode to enter the setting page.

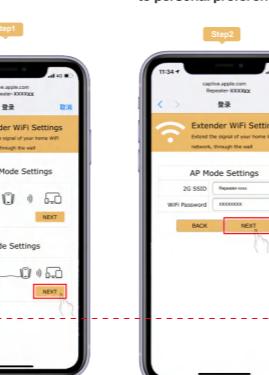

FAQ (Frequently Asked Questions)

Q1: What should I do if I cannot access the Repeater's web management page?

- A1: Make sure your computer is connected to the extended network.
- A2: Make sure your computer is set to obtain an IP address automatically.
- A3: If the Repeater has connected to the router, you should go to your router's DHCP client list to obtain the Repeater's current IP address.
- A4: Reset the Repeater.

Q2: Why does the wireless transmission rate speed down, when the wireless signal is stronger after repeated by the Repeater?



- A1: In compliance with the wireless transmission protocol, all the Repeater devices are set to work in half-duplex instead of full-duplex mode. In other words, the Repeater has to process one-way communication between your root Wireless router (or AP) and the terminal clients; so the transmission time will be double-increased, while the speed will be decreased. Recommends that you connect to the extender when your home network connection is poor, or when you want a larger wireless coverage to eliminate "dead zones".

Q3: Why the devices connected to the Repeater cannot get an IP address from the Repeater and cannot access the Internet?

- A1: Maybe you enabled a wireless MAC filter, wireless access control, or access control list (ACL) on your router. To solve this problem, please log into your router and disable the MAC filter, wireless access control or ACL.
- A2: Maybe the Repeater has not been successfully connected to your router, please reset the Repeater and Reconfiguration.
- A3: Maybe the IP address of the router is occupied or the wireless device connected by the router has reached the limit. Please reboot your router, then reset the Repeater and Reconfiguration.

Step3: Click the "Finish" button to complete the AP mode setting.

Step4: Complete AP mode setting.

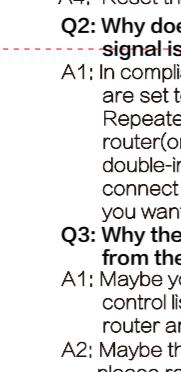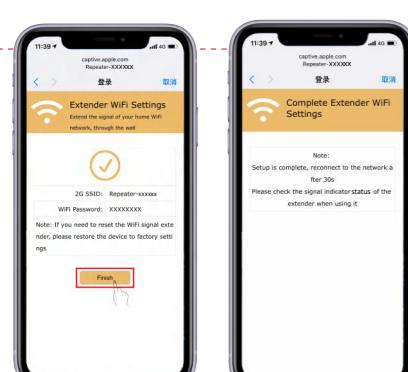

— 7 —

— 8 —

快速安装指南

指示灯说明

图标	作用	状态
电源指示灯	接通电源指示灯常亮	
WiFi指示灯	工作正常时灯常亮	
WPS指示灯	快闪连接中, 慢闪连接成功	
网口指示灯	常亮: 局域网端口连接正常 闪烁: 数据传输	

按钮说明

WPS按钮: 如果您的主机路由器支持WPS功能, 您可以按WPS按钮, 然后按WPS按钮的WPS按钮, 在主机路由器和WPS中继器之间建立安全连接。

重置按钮: 此按钮用于恢复中继器的工厂默认设置。随着中继器的启动, 使用一个复位针引脚按住并保持8秒。

局域网口: 一个10/100Mbps RJ45以太网端口用于将启用以太网的设备连接到Wi-Fi网络, 如互联网电视、DVR、游戏控制台等等。请注意, 此端口不能连接到路由器。

REV.2.0

快速安装手册

工作模式示意图

注意事项: 如果需要接网络, 请在中继器设置好之后再接插网络, 避免设置之前接插网络导致设置异常。

A. 中继模式: 作为一个无线信号扩展器

A. 在不使用任何线缆的情况下扩展你的Wi-Fi信号, 减少布线的麻烦, 但不能优化Wi-Fi速度



B. 在不使用线缆的情况下扩展你的Wi-Fi信号, 通过线缆让PC与扩展器建立稳定连接, 但不能优化Wi-Fi速度



AP模式: 作为一个有线信号扩展器(接入点)

在Wi-Fi信号较差的位置, 为获得更好的Wi-Fi速度, 可以用太网将路由器与扩展器连接起来



快速操作说明

第一步: 选择“中继模式配置”并点击“下一步”进入网络信号搜索页面

(XXXXXX是中继器的MAC地址的最后6个数字)

注意: 如果手机点击连接后, 不能实现旋转界面, 请点击

选择“忽略此网络”

然后点击

关闭一下WIFI, 然后点击一下

重新进行WIFI连接, 若此操作

仍然无效, 可在浏览器中手动输入网址“192.168.11.1”。

进入管理员登录界面后, 可选择语言: 中文(简体)

第二步: 选择“中继模式配置”并点击“下一步”进入网络信号搜索页面

(XXXXXX是中继器的MAC地址的最后6个数字)

注意: 如果手机点击连接后, 不能实现旋转界面, 请点击

选择“忽略此网络”

然后点击

关闭一下WIFI, 然后点击一下

重新进行WIFI连接, 若此操作

仍然无效, 可在浏览器中手动输入网址“192.168.11.1”。

进入管理员登录界面后, 可选择语言: 中文(简体)

第三步: 选择你的路由器连接密码, 点击连接; 如果是隐藏网络, 需要手动添加

第四步: 点击“完成配置”按钮, 完成中继模式配置

(扩展器的WIFI密码与路由器的默认密码一致)

第五步: 完成中继模式设置, 等待30秒, WiFi扩展器自动重启。

第六步: 点击“完成配置”按钮, 完成AP模式配置

完成AP模式配置

第七步: 选择“AP模式配置”并点击“下一步”进入设置页面

第八步: 选择无线名称和8位数以

模式, 点击“下一步”进入设置页面

第九步: 点击“完成配置”按钮, 完成AP模式配置

完成AP模式配置

FAQ (常见问题解答)

Q1. 如果不能访问Repeater的网页管理页面, 我该怎么办?

A1: 确保您的计算机连接到此扩展网络设备上。

A2: 确保您的计算机设置为自动获取IP地址。

A3: 如果中继器已连接到路由器, 则应转到路由器的DHCP客户端列表以获得中继器的当前IP地址。

A4: 重新设置中继器。

Q2: 为什么无线传输速率下降, 而无线信号在重启后更强?

A1: 在符合无线传输协议中, 所有中继器设备都设置为半双工工作,

而不是全双工模式, 换句话说, 中继器处于跟无线路由器(或AP)

和终端客户端之间的单向通信; 因此传输时间将加倍增加, 而速度将

降低。当您的家庭网络连接很差, 或者当你想要一个更大的无线覆盖

来消除“死区”时, 建议您重启扩展器。

Q3: 为什么连接到中继器的设备无法从中继器获得IP地址, 无法访问Internet?

A1: 也许您的上级路由器上启用了无线MAC过滤器、无线访问控制或访问控制列表。

为了解决这个问题, 请登录到您的路由器, 并禁用MAC地址过滤、无线访问控制或移除控制列表。

A2: 中继器还没有成功地连接到您的路由器, 请重置中继器和重新配置。

A3: 路由器的IP地址被占用了, 或者路由器连接的无线设备已经达到极限, 请重新启动路由器, 然后重置中继器和重新配置。

正面 英文

背面 中文

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC 's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.