

DANCE PAD WITH LAMPS OPERATION SPECIFICATION

(ENGLISH VERSION)

PRODUCT PROFILE:

Name: Bluetooth DANCE MAT Model: MODEL.2024

1. Only English version; 2. Double power amplifier and double suona; 3. 8 pieces LED lamps on the control box; 4. Pad with lamps; adopt PMMA side light guide technology; 5. Bluetooth connection; 6. Three bytes LED digit tube display; 7. Volume size adjustable; 8. Mute function; 9. Dormant mode; 10. Provides dual power supply mode.

1 BATTERY INSTALLATION

Use cross screw driver disassemble the control box battery cover screws, correctly install 4 pieces 4 x DC 1.5V AA non chargeable batteries according to the figure shown and battery polarity; and lock the battery cover;

Directly powered by USB cable without battery.

Input parameters: voltage 5.5V, current 1A, power 5W

2 KEY FUNCTION DESCRIPTION: SHOWN AS FIG 2

3 OPERATING INSTRUCTION

1. Press ON/OFF key to start machine, system enter into mode selection, press the corresponding keys to select; Mode 1~Mode 5; Press the Vol+ or Vol- key on the pad to adjust the volume to the appropriate level; 6 levels in total, default level 2 at power on.

2. MODE 1 free dancing mode

Press the MODE key on the pad, music ring out after enter into Mode 1, the player dancing according to the music rhythm, the key lamp on pad lighting up with the player stepping key, press the left key sounds "CHA", and the right key sounds "DONG" rhythm music effect. Make players completely dissolve into the music. Mode 1 internally configure 3 pieces songs.

3. MODE 2 four keys break the level mode

Press MODE on the pad to enter Mode 2 and select the level, total has three levels. Each level 1 minute counts down. 4 pieces LED of positions 1, 3, 4 and 5 on the control box and the lights on the control box are lit according to the program. Press the corresponding keys on the pad before the LED lights turned off.

4. MODE 3 eight keys dancing mode

Press MODE on the pad to enter Mode 3 and select the level, total has three levels. Each level 1 minute counts down. The 8 LEDs light up with the program, step on the corresponding keys on the pad before the LEDs turned off.

● MODE 2 and MODE 3 scoring rules: finish all keys with lighting lamps before LED lamps turned off, value accumulate 1 point; not step key or step one key error then not scoring. Error times is greater than 5, it means that the level is failed. It is not possible to advance automatically to the next level. Errors less than or equal to 5 means that the level has been successfully cleared and you will automatically advance to the next level.

5. MODE 4 memory pass mode

Press the MODE key on the map to enter MODE 4. The player step on the keys in sequence after the players remembering the order in which the different colored lights on the pad are lit; if the sequence same to the sequence which provided by the program, the game continues and increases difficulties; otherwise, give up and reset the game.

6. MODE 5 electric drum set

The electronic drum set consists of a bass drum, cymbals, marching drums, hang cymbals, rhythm cymbals, step cymbals and so on. The drummer presses or steps on the keys on the pads according to the drum score, and the key lights on the pads light up to produce the musical effects of the drum set.

4 SENIOR OPERATION: BLUETOOTH OPERATION MODE

1. Bluetooth connection

① Press the "BT" key on the keyboard to enter the Bluetooth mode (play blue-tooth mode); ② Turn on the Bluetooth switch of your cell phone, search for "BT" and click pairing to connect; ③ When the connection is successful, the speaker will emit a beep sound of successful Bluetooth connection (play blue-tooth connection); ④ Press the "BT" button again to exit Bluetooth mode (play du-du, please press mode button to select mode);

Default connection to the phone that last used the device.

2. Bluetooth mode operation instruction

① After a successful Bluetooth connection, open the music player on your phone, select your favorite music and click the play button to play it;

② Press the MODE key on the pad to access the levels for selection. Select the level according to the key light reminder on the pad, there are 4 levels, Level 1, electronic drums; Levels 2-4, from easy to hard. (please select level, level1/2/3/4);

Level 1: the same as the Mode5 Electronic Drum Mode, there are no points, press or step on the buttons on the pads, the button lights on the pads light up and a gong set musical effect is produced.

Levels 2-4: 3 minutes countdown for each time, 8 LEDs light up with the program, step on the corresponding key on the pad before the LEDs turned off.

③ Select the level, the dance board starts to play your favorite music on the phone, before the lights turned off, according to the position and number of lights lit on the control box or the dance board, press or step on the corresponding keys on the dance board, the LED display shows the total scores of the game.

④ Scoring rules: finish all keys with lighting lamps before LED lamps turned off, value accumulate 1 point; not step key or step one key error then not scoring. When the game time is over, error times is greater than 8, it means that the level is failed. It is not possible to advance automatically to the next level. Errors less than or equal to 8 means that the level has been successfully cleared and you will automatically advance to the next level.

3. Warmly reminding

① In the work, if the music player in the phone is replaced or disabled by other programs, the dancing pad may occur that no music or error sound, operate on phone to make the music player be at working status then okay; Due to the bluetooth version, matching between bluetooth devices, connection distance, different music player working mode cause delay, these are normal phenomenon. ② When the battery is low, the product may work abnormally or may not be able to connect to Bluetooth devices effectively, so please replace the battery with a new one in time;

5 BLUETOOTH LOUDSPEAKER BOX MODE

After successfully connecting the machine in Bluetooth mode, open the music player on your cell phone, press the Vol+ key on the pad for a long time for more than 3 seconds, the LED display shows "888", the system will automatically play your favorite songs via Bluetooth, adjust the volume on the cell phone, and then you can change the volume of the music. Press Vol- or Vol+ on the dance pad for a short time, you can switch the next song playing on your cell phone. Long press Vol+ again for 3 seconds to exit sub-mode into Bluetooth operation mode.

6 MUTE FUNCTION

Long press the Volume - key for more than 3 seconds to enter the mute function. Short press Vol+ or Vol- to exit mute mode. Automatic power off after 3 minutes when mute under the Bluetooth loudspeaker box mode. Restart after power off then will automatically recover to default mute.

7 SLEEP POWER OFF SAVING POWER FUNCTION

The system will one time remind per 20 second when no operation under power on status, if still no any operation exceed 14 times then system will automatically power off and enter into power saving mode;

8 MAINTAIN AND MAINTENANCE

The product formed with electric and plastic accessories, can't have water enter into; please use the clean and soft dry cloth wipe it when finish operation or cleaning, forbid to put the pad into water or washing machine to wash; can't use the solubility chemical products clean this product.

9 WARINING

- Please correctly install or use according to specification or packing instruction requirements, partial parts need be assembled by adults;
- Please use it in the company and under the guidance of an adult;
- The product contains small parts that may pose an accidental ingestion or choking hazard;
- Packaging materials are not part of the toy, please retrieve them promptly to avoid injury to children;
- The terminals should not be short-circuited; a fixed time is required to check the cord, plug, housing or other parts, and if damage is found, stop using it until it is repaired;
- Do not play on standing water or rainy, wet and slippery surfaces; these parts may malfunction or become dangerous due to moisture;
- Use DC 1.5V x 4 AA batteries, install or replace batteries according to the correct type and polarity; Non chargeable batteries can't be charged;
- Do not mix old and new batteries or different types of batteries;
- Remove the batteries when they are depleted or when the product is not used for a long period of time;
- Do not short-circuit, disassemble or throw the battery into fire; discarded toys and batteries should be sorted out or disposed of by qualified recycling companies;
- Laser radiation, please do not look directly at the beam;
- Forbid to wear high heeled shoes to use this product and forbid to use sharp objects hurt this product;
- This manual or package contains important product information, please keep it in a safe place;



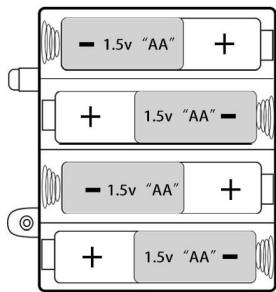


Figure 1

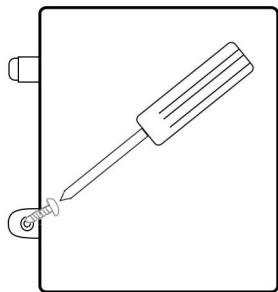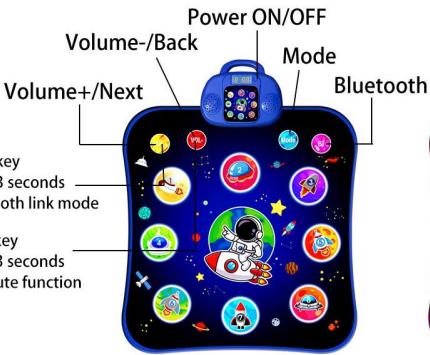

Figure

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.