


HUMIDIFIER

User Manual

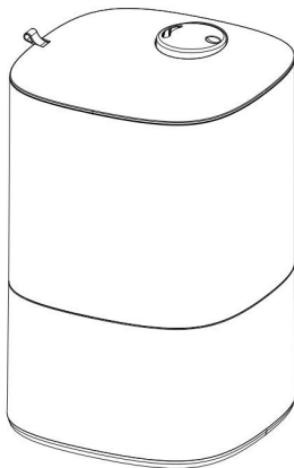

CF-2130TS

READ AND SAVE THESE INSTRUCTIONS AND WARNINGS

**FAILURE TO COMPLY WITH THE WARNINGS LISTED BELOW MAY
RESULT IN ELECTRIC SHOCK OR SERIOUS INJURY.**



This product should be used only in accordance with the specifications outlined in this manual. Usage other than what has been specified here may result in serious injury. When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

ATTENTION!

- This product should be used only in accordance with the specifications outlined in this manual. Usage other than what has been specified here may result in serious injury.
- Check the household voltage to ensure it matches the units rated specification before operating.
- DO NOT add water from moisture outlet directly, or it will hurt the unit.
- Do not allow children to play with any product packaging, such as plastic bags. To avoid fire hazard, NEVER put the cord under rugs, near heat registers, radiator, stoves, or heaters.
- DO NOT place humidifier near heat sources such as stoves, radiators, and heaters. Do locate your humidifier on an inside wall near an electrical outlet. The humidifier should be at least 10cm away from the wall for best results.
- Do not attempt to refill humidifier without first unplugging the unit from its electrical outlet.
- DO NOT operate any appliance with a damaged cord or plug, after the appliance malfunctions, or if it has been dropped or damaged in any manner. Return appliance to manufacturer for examination, electrical or mechanical adjustment, or repair.
- Always place humidifier on a firm, flat, level surface at least 60cm away from the floor.

- DO NOT allow the moisture outlet to directly face the wall.
- NEVER tilt, move, or attempt to empty unit while it is operating.
- Shut off and unplug before removing the water tank and moving the unit.
- DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.
- Do not plug in the cord with wet hands: electric shock could result.
- NEVER use detergent, gasoline, glass cleaner, furniture polish, and paint thinner, or other household solvents to clean any part of the humidifier.
- Do not pour water in any openings other than the water tank.
- Excessive humidity in a room can cause water condensation on windows and some furniture. If this happens, turn the humidifier OFF.
- Never place housing under water flow or immerse in liquids.
- Regarding maintenance, filling, cleaning and descaling of the appliance, thanks to refer to the related chapter of the manual.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- The appliance is only to be used with the power supply cord provided with the appliance.
- Unplug the appliance during filling and cleaning.
- The excess of moisture may wet the surface where the humidifier is placed.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not permit the area around the humidifier to become damp or wet. If dampness occurs, turn the output of the humidifier down. If the humidifier output volume cannot be turned down, use the humidifier intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.

- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
- NEVER place the base under water flow or immerse in liquids.
- Never leave water in the reservoir when the appliance is not in use.
- Empty and clean the humidifier before storage. Clean the humidifier before next use.
- Empty the tank and refill every third day. Before refilling, clean it with fresh tap water or cleaning agents if required by the manufacturer. Remove any scale, deposits, or film that has formed on the sides of the tank or on interior surfaces, and wipe all surfaces dry.

TECHNICAL DATA

- Model number: CF-2130TS
- Power supply: 120V~, 60Hz
- Power consumption: 25W
- Tank capacity: 3L
- Mist output: Low 100ml/h, Med 200ml/h, High 300ml/h
- Dimensions: 183*183*263 mm / 7.2*7.2*10.35 inches
- WEIGHT: 1.35 kgs/ 2.98 lbs

CORRECT DISPOSAL OF THIS PRODUCT



Please dispose of this product after its service life pursuant to the Waste Electrical and Electronic Equipment Directive 2012/19/EU- WEEE. The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste but must be returned to a collection point for recycling electrical and electronic products.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC& IC Radiation Exposure Statement:

This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.




This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Déclaration d ' IC sur l ' exposition aux radiations:

Cet équipement est conforme aux limites d ' exposition aux radiations définies par le Canada pour des environnements non contrôlés. Cet équipement doit être installé et utilisé à une distance minimum de 20 cm entre l ' antenne et votre corps.

Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre antenne ou un autre émetteur.

GET TO KNOW THE BREEZE +

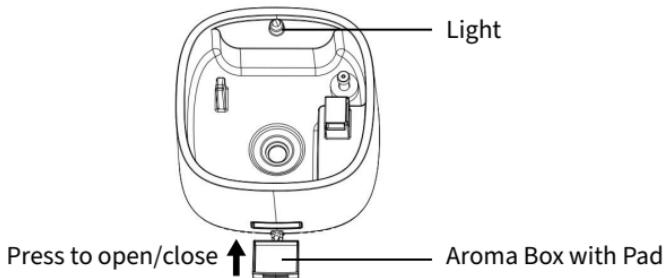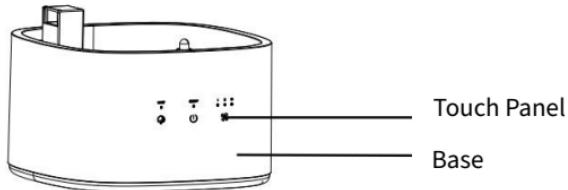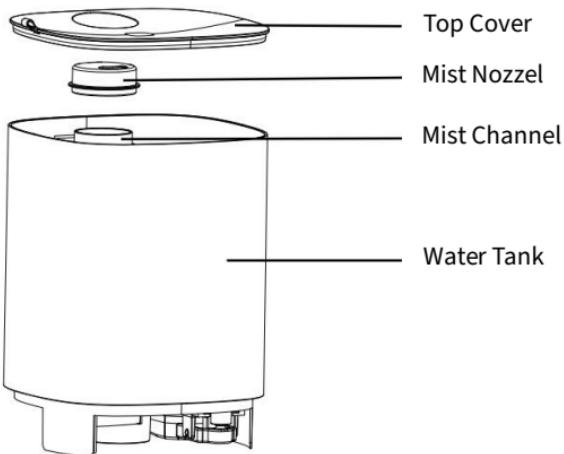

HOW TO OPERATE THE BREEZE +



Power: Press to turn on/off device.
Long press (2s) to turn on pairing mode.



Mist Level: Low / Med / High



Night Light: Press to turn on/off light.

Sleep: Long press (2s) to enter sleep mode.
Press any button to wake up.

PAIR BREEZE+ WITH YOUR PHONE

Before Pairing

- Make sure your phone is connected to WIFI and bluetooth is on during pairing.
- Long press power button for 5 seconds to turn on Breeze + 's WIFI. The green indicator light blinks while WIFI is on and ready for connection.

1. Download “My Miko app” and register/log in your account.
2. Select “add device” and add Breeze+ to your Miko app.
3. Follow the instructions on the app to pair with your phone.
4. Select Breeze + on app's device list. Now you can operate and schedule Breeze + on your phone anytime anywhere.

PRIOR TO FIRST USE

1. Place the device upright on a solid, level, and water resistant surface.
2. Keep the device away at least 4 inches/10 cm from walls for best results.
3. To ensure optimum performance of the device, please ensure that the mist outlet, air inlet and outlet are not covered.
4. Inspect the power cord to ensure that it is not damaged.
5. Add water to the water tank and ensure water level not exceeding the “MAX” mark.
6. Connect the power cord to a power outlet. When connected, the buzzer sounds and all lights flash in a flash. Then the device enters into standby mode, you can simply press the Power button to start using the Myst.

No Water in Water Tank or No Water Tank

If there is no water in the water tank or no water tank, the buzzer sounds, the red indicator light on Power Button will flash at the same time, the device will stop producing mist automatically while the fan keeps working. Refill water or place the water tank back to resume normal operation.

CLEANING REMINDER



There is a built-in cleaning reminder. Cleaning frequency is determined based on the water type you select in the APP.

When it's time to clean the humidifier, the App will prompt a notification, and the unit's mist level indicator lights will blink. Long press to reset the reminder timer after proper cleaning.

HOW TO CLEAN THE BREEZE+

ATTENTION!

ALWAYS POWER OFF AND UNPLUG THE DEVICE BEFORE CLEANING THE DEVICE.
WIPE THE SURFACE OF THE DEVICE WITH A SOFT AND DAMP CLOTH IF NEEDED.

Water tank

Remove the water tank cover, empty the water tank. Use water, vinegar solution or dish soap to wash the inside of the water tank. Use a cloth or a cleaning brush if needed, then rinse it until clean.

Water tank cover

Remove and wash the cover with water or vinegar solution. Use a cloth or a cleaning brush if needed, then rinse it until clean.

Filter inside the water tank

Take out the filter set from the water tank. Wash the filter which may accumulate large particles. After cleaning, assemble it back to the water tank.

Base

Carefully pour excess water out of the base. Clean the base with a cleaning brush or a soft damp cloth. DO NOT submerge the base into water and AVOID water entering the base inside through the air inlet or air outlet.

Ultrasonic transducer

ONLY use the enclosed cleaning brush to gently clean the ultrasonic transducer to remove the build-ups and deposits thoroughly. Do not scrub or scrape the ultrasonic disk.

WARNING!

Do not clean the device with cleaning chemicals of any kind as they may contain bleach. Use water, dish soap or vinegar solution ONLY.

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

PRODUCT TROUBLESHOOTING

PLEASE NOTE: IF YOU EXPERIENCE A PROBLEM, DO NOT ATTEMPT TO OPEN THE HOUSING BY YOURSELF. DOING SO MAY VOID YOUR WARRANTY AND CAUSE DAMAGE TO THE HUMIDIFIER OR RESULT IN PERSONAL INJURY.

ISSUE	CHECKLIST	POSSIBLE SOLUTION
No mist	Whether power is on	Press the power button.
	Whether power plug is plugged tightly	Unplug and then plug again. When the power is returned, try again.
	Whether water tank is not empty or attached to the base correctly	Add water and make sure the tank is correctly attached to the base.
	Whether the ultrasonic transducer is not covered by white dust, scale or other objects.	Clean the ultrasonic transducer or remove the objects on it.
Air blows but no mist	Whether the ultrasonic transducer is not covered by white dust, scale or other objects.	Clean the ultrasonic transducer or remove the objects on it. Suggest to use soft or distilled water if your area has hard water.
The humidity has a bad smell	Whether water is clean and no foreign objects in the water	Clean the device thoroughly, and fill it with fresh water.
White dust is forming on	Whether your area uses hard water	Use distilled water if this becomes a nuisance. Remember to clean the filter after use for a short time.
Device has stopped working	Whether water tank is not empty or attached to the base correctly	Add water and make sure the tank is correctly attached to the base.
Water is accumulating outside of the device or the surrounding area.	Whether device is level	Unplug and place on level surface. Lower mist level setting and point mist nozzle away from objects. Raise device on a water-resistant level surface 2-3 feet off of floor.
Water drips when refilling	Whether water remains on the bottom of the tank	Wipe tank or tilt to drain before transporting.
Increased noise level	Whether device is placed on a flat, level, hard surface	Unplug and place on level surface. Make sure it is NOT placed on a soft or absorbent surface.

