

正面

FCC Warning Statement
Changes or modifications not expressly approved by the party responsible for compliance could void the user’ s authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement
To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any otherantenna or transmitter.

Attivazione funzione TWS (come associare tra loro due FIRE)
Assicurarsi che gli speaker non siano associati a nessun dispositivo esterno.
Accendere i due altoparlanti e selezionare la modalità Wireless Audio (BLUE sul display).
Premere a lungo il tasto Play / Pausa / TWS sullo speaker per avviare l'associazione TWS, un suono confermerà l'associazione.
Dopo aver eseguito l'associazione gli speaker si accoppieranno automaticamente tra loro se accesi contemporaneamente.
Per disattivare la funzione TWS e disaccoppiare gli speaker premere a lungo il tasto Play / Pausa / TWS sullo speaker dopo aver eseguito l'associazione.



Made in China

Instruction manual

 
Thank you very much for using our products

Please keep this manual safe for future reference

背面

IMPORTANT SAFETY MEASURES

Before using this machine , please read all the safety and operating instructions meanwhile , please observe all the indications about safe operating These and safety;





- 1 .Protection of electric power supply line: Be aware that the electric power supply line and outlet on the machine DO NOT lengthen the electric shock . DO NOT pull or drag the power supply line;
 - 2 .Ventilation:This set must be put in ventilated place DO NOT put disk on it or cloth to cover it the distance away from the wall should not be less than 10 centimeters DO NOT put this set on the bed;
 - 3 .Casing Dismantling: DO NOT dismantle the casing if one touches the inner components , he will probably get serious electric shock;
 - 4 .Unusual smell when you discover unusual smell and smoke , cut power supplies u=immediately and pulls out the plus from the outlet on the wall Contact the sell shop or nearest repairing center;
- Attention: This sat applies to AC 110~220V 50Hz-60Hz power supply Use standard power supply, Please be sure for the correct power supply before use it;

PRODUCT FEATURES

1. High output power;
2. With Karaoke function;
- 3 .The treble is clear, natural and bass is powerful; ·
- 4 .Compatible to DVD/VCD/CD/TAPE/Audio/MP4/AUX;

REMOTE CONTROL

  - 1.Standby state;
- 2.Mode conversion (Media player/AUX/FM) ;
- 3.Mute;
- 4.Play/pause in Video/Music mode;
Long press for 2 seconds to automatically search for channels in FM mode;
- 5.Short press for Previous song in Video/Music mode;
Long press for Rewind in Video/Music mode;
Short press to Manual search of channels in FM mode.
- 6.Short press for Next song in Video/Music mode;
Long press for Fast forward in Video/Music mode;
- 7.Short press to adjust EQ in Audio mode
- 8.Decrease volume;
- 9.Increase volume;
- 10.Repeat song in audio mode;
11. USB/SD;
- 12.0-9 Directly select the channel which has saved in the

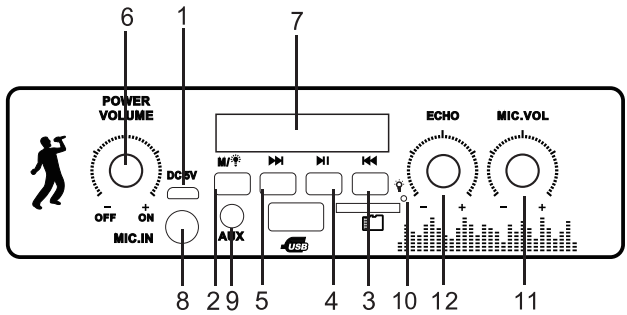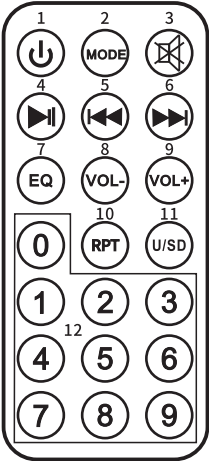

FUNCTION INTRODUCTION

1. DC 5V input;
- 2 . Mode: Select Input AUX/USB/TF/FM/LED;
- 3 .Previous Song/Volume-;
- 4 .Pause/Play
- 5 Next song /Volume +;
- 6 .Mainly Volume +/-
- 7 .Digital display;
- 8 .Wired Mic Input
- 9 . AUXInput;
- 10 . Charging Display Light
11. Ajuste de Volume Microfone
12. Ajuste de Eco Microfone

USE INSTRUCTION

1. Connect the marked power cable according to the connection instructions on the rear panel.
2. Make sure the voltage is correct. Insert the power cable and turn on the power switch button.
3. Adjust the function keys to achieve the best sound effect you are satisfied with;

PRODUCT EQUIPMENT LIST

- | | |
|------------------------|------------------|
| 1 .Speaker; | 2 . Power cable; |
| 3 .Remote control; | 4 . User manual; |
| 5 .Wireless microphone | |