

Введение в дистанционное управление



		Включение/выключение	Остановка/авто двигателя
1: Красный и зеленый лазер. Одноцветные и двухцветные лазеры прыгают + одноцветный, двухцветный и трехцветный светодиод прыгает. 2: Красный лазер загорается в течение 10 секунд и гаснет в течение 3 секунд, зеленый лазер прыгает + одноцветный, двухцветный и трехцветный светодиод прыгает.			
1. Управление звуком при выключенном свете. Светодиод и лазер меняются в соответствии с ритмом, когда есть звук. 2. Управление звуком при включенном свете. Светодиод и лазер всегда включены и меняются в соответствии с ритмом, когда есть звук. 3. Голосовое управление при мигании света. Светодиод и лазер всегда включены и меняются в соответствии с ритмом, когда есть звук.			
1. Медленный стробоскоп 2. Быстрый стробоскоп 3. Самый быстрый стробоскоп			
Переключатель, R красный, G зеленый, RG красно-зеленый			
Переключатель светодиодов, A1 красный, A2 зеленый, A3 синий, A4 желтый, A5 красный и синий, A6 желтый и синий, A7 автоматическая смена трех цветов			

Примечание: Стрелки указывают на способ замены резервной батареи.

РУКОВОДСТВО



1. Регулируемая подставка
2. Светодиодный светильник «Магический шар»
3. Выход красного лазерного луча
4. Выход зеленого лазерного луча



5. Функциональная кнопка
6. Разъем Dc 5V
7. Отверстие для приема звука
8. Индикатор работы

Controller Panel Instruction




		Light on/off	Motor stop/rotation
1: Red and green light, single color and double color jump + LED single color, double color, three color jump. 2: Red light is always on for 10 seconds and off for 3 seconds, green light jump + LED single color, double color, three color jump.			
1. Shut off light and sound control, LED and laser light up when there is sound and change with the rhythm. 2. Open light and sound control, LED and laser are always on, and change with the rhythm when there is sound. 3. Strobe sound control, LED and laser are always on, and strobe with the rhythm when there is sound.			
1. Slow strobe 2. Fast strobe 3. Fastest strobe			
Switch, R-red, G-green, RG-red&green,			
LED switch, A1 red, A2 green, A3 blue, A4 yellow, A5 red and blue, A6 yellow and blue, A7 three-color automatic change			

Note: the clipper head refers to the spare button battery which can be replaced.

Disco Party Light User Manual



1. Adjustable bracket
2. LED magic ball light outlet
3. Red light outlet
4. Green light outlet

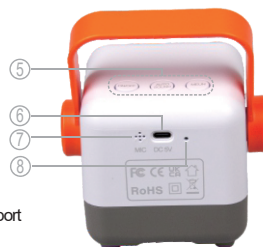

5. Function buttons
6. DC 5V power port
7. Voice control receiving port
8. Working indicator light

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.