


135.00


## CD PLAYER

JaekAudio C20  
Instruction


90.00

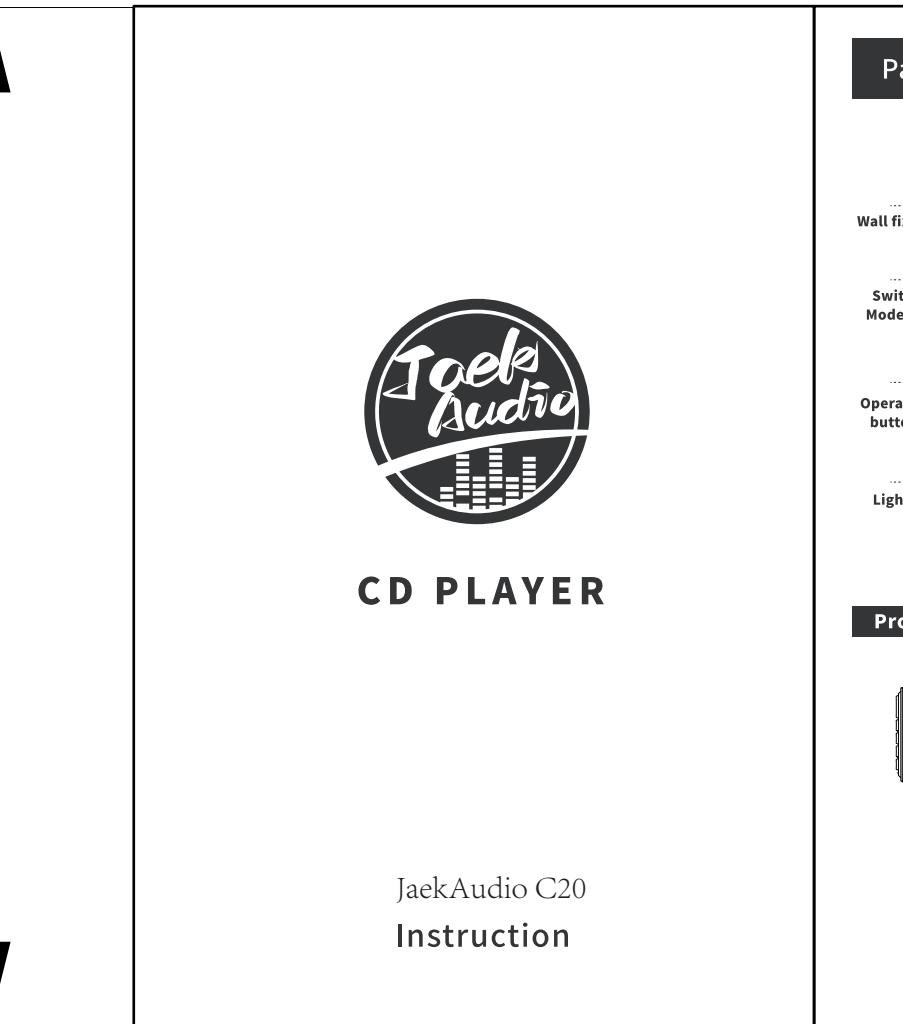

## Parts Description

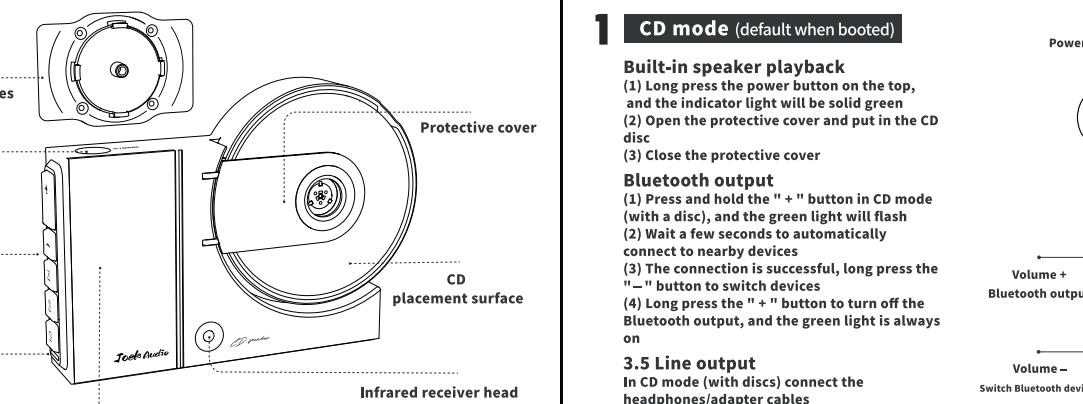

## Product list

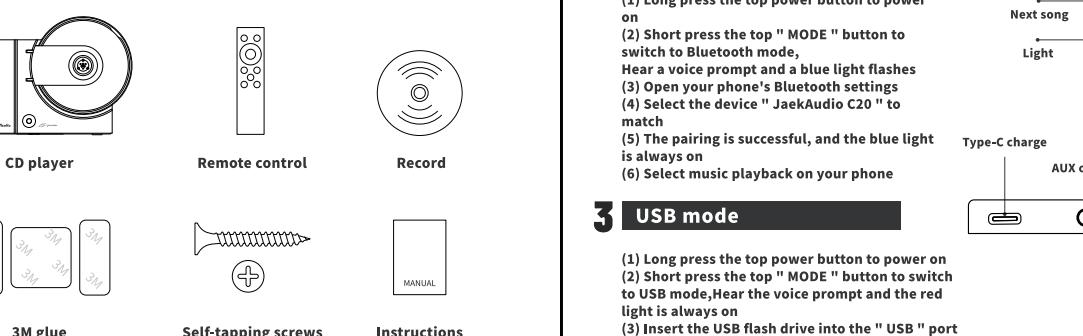

## Functional operation instructions

## 1 CD mode (default when booted)

## Built-in speaker playback

- Long press the power button on the top, and the indicator light will be solid green
- Open the protective cover and put in the CD disc
- Close the protective cover

## Bluetooth output

- Press and hold the "+" button in CD mode (with a disc), and the green light will flash
- Wait a few seconds to automatically connect to nearby devices
- The connection is successful, long press the "-" button to switch devices
- Long press the "+" button to turn off the Bluetooth output, and the green light is always on

## 3.5 Line output

In CD mode (with discs) connect the headphones/adaptor cables

Plug in the "AUX" port (Bluetooth transmitter priority playback)

## 2 Bluetooth mode

- Long press the top power button to power on
- Short press the top "MODE" button to switch to Bluetooth mode, Hear a voice prompt and a blue light flashes
- Open your phone's Bluetooth settings
- Select the device "JaekAudio C20" to match
- The pairing is successful, and the blue light is always on
- Select music playback on your phone

## 3 USB mode

- Long press the top power button to power on
- Short press the top "MODE" button to switch to USB mode, Hear the voice prompt and the red light is always on
- Insert the USB flash drive into the "USB" port

## Buttons/Lights Introduced

keystroke	Short press	Press and hold
MODE	Toggle modes	Boot
+	Volume+	Bluetooth transmitter
-	Volume-	Toggle the Bluetooth transmitter device
△	Previous song	
□	Play/Pause	
▽	Next song	



## Wall mounting instructions

## 5 45 degree angle snap in

Tilt the CD player to 45 degrees, shake it lightly and press to snap into the card slot

## 1 Detach the wall mount

Place the wall mount on the back of the CD player counterclockwise  
Rotate 45 degrees to remove the wall mount vertically

## 6 Complete the installation

Rotate the CD player 45° clockwise to complete the installation  
(Disassembly can be completed by rotating 45° counterclockwise after installation)

## 2 Tear off 3M release liners

Remove three pieces of 3M adhesive release liner from the wall mount

## 3 Sticking to the wall fixture

Attach the wall fixing frame horizontally to the target wall and press it moderately to make the adhesive surface fit

## 4 Hole alignment

Align and insert the round table with the raised center of the wall mount and insert it into the round hole on the CD player

## Four ways to present

The card slot can be snapped into the card slot at a 45° angle in any direction, and four wall mounting methods can be displayed according to preference

## Introduction to the remote control buttons



## Product parameters

Power	10W	Battery capacity	400mAh
Vocal unit	5-inch speaker 4Ω 2W		
Input	Bluetooth input, USB input		
Output	Bluetooth output, 3.5-line output		

