

Installation steps of baby swing

Step 1 Take out all parts.



Step 3 Screw reinforcement screws on the back of the base.



Step 5 Put the seat cushion on and attach the Velcro on the back.



Step 7 Adjust seat belt with Velcro on both sides



Step 2 Fit the metal pipes on both sides to the main unit.



Step 4 Connect two curved steel pipes, make sure that the holes on the pipes are in the same side.




Step 6 Insert the swing seat into the top base of the main unit, aligning the D-shaped buckle with the D-shaped screw on the base. Once inserted, gently swing the seat left and right. **If the swing stops at a certain angle, the installation is successful. If the swing can rotate 360°, it means the seat is not properly aligned with the base. Re-align and press down firmly until it locks into place.**



Step 8 Connecting via Bluetooth

1. Power on to connect to Bluetooth;
2. Turn on the Bluetooth function of the mobile phone, search for TICCI-Baby or TI-BB19, and hear the prompt indicating that the Bluetooth connection is successful;
3. Turn on music in the mobile phone, our swing will play the currently selected music, and the swing volume can also be controlled by the volume key of the phone.

Use Remote Control

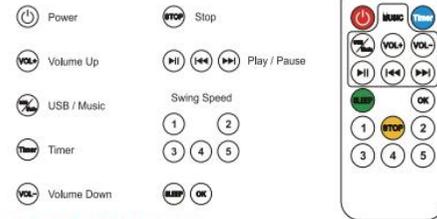

Care and Maintenance

1. The product can be wiped with wet cloth and soapy water.
2. Do not use undiluted neutral detergent, gasoline or other organic solvent to wash the product, it may cause damage to the product.
3. Do not use bleach.
4. From time to time, check your product for worn parts, torn material or stitching. Replace or repair the parts as needed.
5. If the product is not in use for a long period of time, please store it in the shade where your child cannot access it.

Bluetooth Name

TICCI-Baby or TI-BB19, one of them.

Turn on the mobile phone to search for Bluetooth signals

TICCI-Baby or TI-BB19, and then use the mobile phone to pair bluetooth and connect.

FCC Compliance Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

TICCI



FULL TOUCH SCREEN ELECTRIC SWING

Bluetooth

ASTM F2088-21 Standard & ASTM F2167-22 Standard

Thank you for purchasing Swing and congratulations on becoming part of Swing Baby family. Swing is a full touch screen with built in Bluetooth function soft electric swing. It moves left and right like a mother always hold the baby in her arms. The smart swing is certified to ASTM F2088-21 Standard & ASTM F2167-22 Standard(CPC)



Thank you for purchasing this product. Please read the manual carefully before use so that you can use this product correctly. Thanks!

IMPORTANT!

1. Adult assembly required
2. Please read all instructions before assembly and use of the product
3. Care should be taken in unpacking and assembly
4. Examine product frequently for damaged, missing or loose parts
5. DO NOT use if any parts are missing, damaged or broken


WARNING!

1. Do NOT use this product once your child can sit up unaided or weighs more than 9kg (approximately 6-6 months).
2. NEVER leave the child unattended. Always keep your child in view.
3. Do not use the product once your child can sit unaided.
4. It is dangerous to use this product on an elevated surface e.g. a table.
5. Never use this product on an elevated surface (e.g. a table).
6. Always use the restraint system.
7. This product is not intended for prolonged periods of sleeping.
8. This product does not replace a cot or a bed, when your child needs to sleep, it should be placed in a suitable cot or bed.
9. DO NOT let children play with this product.
10. DO NOT move or lift this product with the baby inside it.
11. Be aware of the risk of open fire and other sources of strong heat such as electric bar fires, gas fires, etc in the vicinity of the product.
12. To avoid strangulation, DO NOT place items with a string around your child's neck, suspend strings from this product, or attach strings to toys.
13. All assembly fittings should be unfolded completely and tightened properly before using the product.
14. DO NOT use the product if any parts are broken, torn or missing.
15. DO NOT use accessories or replacement parts other than those approved by the manufacturer.
16. Non-rechargeable batteries are not to be recharged.
17. Rechargeable batteries are to be removed from the product before being charged.
18. Rechargeable batteries are only to be charged under adult supervision.
19. Different types of batteries or new and used batteries are not to be mixed.
20. Batteries are to be inserted with the correct polarity.
21. Exhausted batteries are to be removed from the product.
22. The supply terminals are not to be short-circuited.
23. Change batteries when product ceases to operate satisfactorily.
24. Keep the batteries out of children's reach.
25. To prevent possible injury by entanglement, remove the toys when the child starts trying to get up on its hands and knees in a crawling position.
26. To avoid suffocation, remove plastic bag and packaging materials before using this product. The plastic bag and packaging materials should then be kept away from babies and children.

What's in the box



Assembling Guide

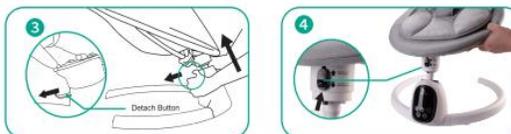

1. Install the three parts of base frame and tighten the bottom four screws with tools to ensure stability
2. Insert the seat frame into the base, make sure the D shape rod is aimed at the D shape hole in the base.
3. To detach the seat frame from the base, pull the detach button then pull out the seat frame.
4. To lock the swing or prevent it from moving, push up to lock. If product does not swing left and right, check if the button is locked.

Use Wall Plug or Powerbank



Warning! Please use AC power adaptor provided by the manufacturer. Unauthorized AC power adaptor may damage product. Alternatively, you can power product with powerbank.

Use Touchscreen Panel



Warning! Do not operate the touchscreen with wet, oily or dirty hands. If the screen has any moisture or if your fingers are wet, the touch screen may not respond or an incorrect operation may occur. A damage may result and it is not covered under warranty.

1. Power ON/OFF
2. Swing speed, 5 swing speed available.
3. Timer, 3 settings: 8/15/30 mins.
4. Music ON/OFF.
5. Smart Sensor. When this button is turn on, Swing can detect a baby's movement and response automatically by swinging at the lowest speed at the same time playing music for 5 minutes. This feature is only activated when Swing is completely stationary for at least 3-5 seconds.

Note:



Swipe up to unlock when swinging

Swipe down to lock when stop swinging



Customer satisfaction is our number one priority.

If you have any questions about this product, please feel free to contact us.

Our team will provide you with timely assistance and support.

We look forward to providing you with quality service!

The email address is ticcic@163.com