 



T1 PRO Manual

Thank you for purchasing our Glutton Sanding Dust Collector.
In order to provide best user experience and ensure your safe operation of this product, please read instruction manual carefully before use.


Packing Details

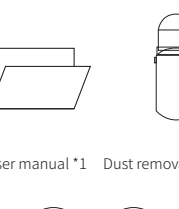

 
Glutton Sanding Dust Collector *1




Dust removal cloth *1

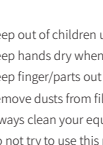





User manual *1

 

Dust removal brush *1

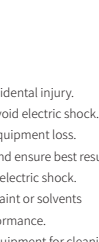

Power adaptor *1

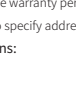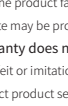  

Socket converter *4

Precautions

- Keep out of children under 14 years of age to avoid accidental injury.
- Keep hands dry when plugin/out your equipment to avoid electric shock.
- Keep finger/parts out of fan blades to avoid injury or equipment loss.
- Remove dusts from filter in time to keep off bacterial and ensure best results.
- Always clean your equipment AFTER plug out to avoid electric shock.
- Do not try to use this product as water curtain box as paint or solvents may cause damage of the equipment or affect its performance.
- Read instructions carefully before disassemble your equipment for cleaning.

Warranty notice:

- The warranty covers Glutton sanding dust collector's noumenon, not including freebies, filter and/or other products.
- The warranty period of this product is 12 months from the date of purchase.
- Should the product fails under normal use during the warranty period, a purchase certificate may be provided, and sent the product to specify address for free repair.

The warranty does not cover following situations:



- Counterfeit or imitation of our product.
- No correct product security code can be provided.

Free repair service does not cover following situations:

- Over 12 month warranty period from date of purchase.
- Product malfunction caused by self disassembly.
- Damages/malfunctions caused by human factors including immersion or dropping.
- Damages/malfunctions caused by natural disaster or force majeure.
- Damages/malfunctions caused by irregular operations.

Get Ready

- Plug power cord into the socket at rear end of the collector.
- Select a compatible converter, align the 'OPEN' mark with release button on the power adaptor and turn clockwise to lock. For unlocking , push down release button then turn the converter counterclockwisely.

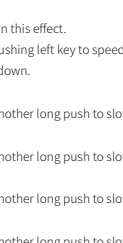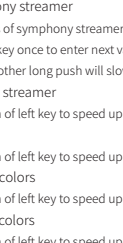


Instruction

I. Function key

There are two touch buttons plus one USB power supply (5V/1.5A) socket on the control panel of this sanding dust collector.

- The left button is used for wind speed adjustment. Touch this button when power on to start the fan, then keep pressing on this button to raise the wind speed, keep pressing this button again will lower the wind speed. (meanwhile, wind speed would be displayed on the lighting belt by means of percentage.) A brief touch on this button again will turn the fan off.

- The right button is used for lighting control. The light belt will automatically glow once the unit is power on. A brief touch on the button would turn light be off, touch again to turn it on. Once light is on, keep pressing this button will turn lights brighter, pressing it again to dim the lights.

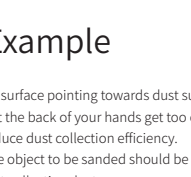

II. Lighting set up

- Push left and right key simultaneously for 3 seconds to enter lighting set up mode. You may customize your lighting effect under this mode.

- Push left key once under set up mode to enter next lighting effect.

①Symphony streamer

8 variations of symphony streamer are available in this effect.

Push right key once to enter next variant. Keep pushing left key to speed up the rhythm, another long push will slow the rhythm down.

②Colorful streamer

A long push of left key to speed up the rhythm, another long push to slow down.

③Raining

A long push of left key to speed up the rhythm, another long push to slow down.

④Pulsing colors

A long push of left key to speed up the rhythm, another long push to slow down.

⑤Waving colors

A long push of left key to speed up the rhythm, another long push to slow down.

⑥Color sequence

A long push of left key to speed up the rhythm, another long push to slow down.

⑦Marquee

A long push of left key to speed up the rhythm, another long push to slow down.

⑧Breathing light

A long push of left key to speed up the rhythm, another long push to slow down.

A long push of right key for stepless RGB color changing, release key to finish.

⑨Meteor

A long push of left key to speed up the rhythm, another long push to slow down.

⑩Streamer

A long push of left key to speed up the rhythm, another long push to slow down.

A long push of right key for stepless RGB color changing, release key to finish.

⑪Visor

A long push of left key to speed up the rhythm, another long push to slow down.

⑫Continuous monochromatic

A long push of right key for stepless RGB color changing, release key to finish.


⑬Continuous lighting

A long push of right key for stepless color temp changing, release key to finish.

Usage Example



Try to put grinding surface pointing towards dust suction port where possible. Do not let the back of your hands get too close to the suction port, which will reduce dust collection efficiency.

For best results, the object to be sanded should be kept within a distance of 15 cm to the dust collecting duct.

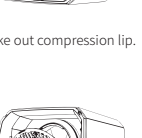




Intelligent Control

- Download DSPIAE Hub APP (available for ios 14, Android 8 and up) iOS Users may scan the QR code below, or search 'DSPIAE Hub' at App Store to download. Android users may scan the QR code below, or search 'DSPIAE Hub' to download.

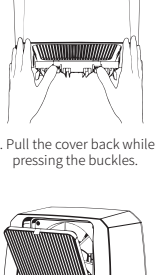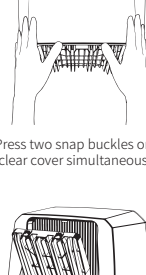

- After registering the application, press 'solaris chroma' icon to enter configuration interface. (Please turn on the Bluetooth of your phone)

- Click on the drop-down menu to select product name for connection. Default wireless connection mode of this product is always on, so you don't need to open it manually. Enter control interface after connection.

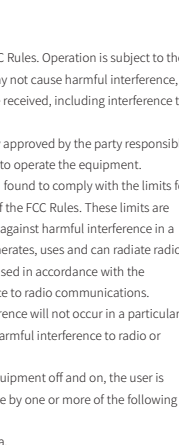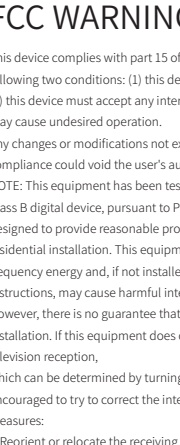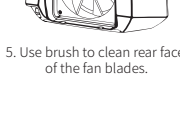

- Now you may start customizing your sanding dust collector once you are in the control interface. For more details on operational instruction, click 'manual' button on the upper right corner of the screen.

Maintenance & Cleaning

(Always clean your equipment AFTER plug out)

Cleaning the front end

