



FR

ÉLÉMENTS D'EMBALLAGE
À SÉPARER ET À DÉPOSER
DANS LE BAC DE TRI



FR

Cet appareil
et ses piles
se recyclent

À DÉPOSER
EN MAGASIN



À DÉPOSER
EN DÉCHÈTERIE



OU

Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !




UN38.3

File version: V1.2.1

Made in China

White Sound Machine

 User Manual

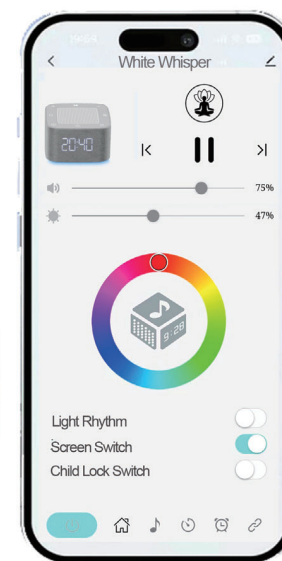

App Control Interface

- White Noise Tracks: 32
- APP Smart Control: White Whisper
- Custom Music: Bluetooth Playback
- Lighting: 8 colors + Rainbow Breathing Light

Warranty

We will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials. This guarantee does not cover damage caused by improper use, normal wear, or defects that have a negligible effect on the value or operation of the appliance.

The guarantee becomes void if repairs are carried out by unauthorized persons or if original parts from our company are not used. To obtain service within the guarantee period, please contact us at **aftersales-help@outlook.com** to reach customer service. The purchaser is responsible for all postage, freight charges, and any other expenses incidental to claiming against this warranty.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and the receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction

Greeting

Thanks for your purchase of Sound Machine. Please read this user manual carefully and keep it in a safe place for future reference. If you need any help, please contact us.

Instructions Before Use

To reduce the risk of burns and electrocution, especially when children are present, always follow basic safety precautions, including the following:

1. Prior to using the Sound Machine, make sure to fully charge it.
2. Refrain from charging the device with wet hands to reduce the risk of electrocution.
3. Keep the charger and Sound Machine away from water or any other liquid. Do not submerge or drop them into liquid.
4. Only connect the Sound Machine to a voltage system consistent with the specifications mentioned on the device or charger. Using improper voltage may cause damage, void the warranty, and compromise safety.

5. Prior to charging, inspect the charger cord for any signs of damage. Do not use if the cord is compromised.
6. Keep the charging unit and its cord away from heated surfaces to prevent potential damage or hazards.
7. Do not attempt to open or disassemble the Sound Machine, as this action will void the warranty and pose safety risks.
8. Exclusive use of accessories recognized by our company to ensure optimal performance and safety.

Quick Start

Step 1: Connect Power

1. Connect the white noise machine using the provided USB power.
2. Plug the power cable into a USB power port (such as a phone charger or computer USB port) to start the charging process.cable.

Step 2: Download the App

 
1. Scan the QR code below using your phone's camera.
2. Download the App to your phone from the provided link.



Step 3: Connect Your Sound Machine


1. Turn on the power switch button on the white noise music machine.
2. Open the downloaded App on your phone.
3. Agree to Bluetooth permissions when prompted.
4. Initiate a search for the Sound Machine within the App
5. If the "🔗" icon is in a disconnected state, it indicates that the connection was not successful. Please check if the Bluetooth function is turned on.

Note: For Android OS, ensure you also allow location permission to connect to Bluetooth as the Android OS rules.

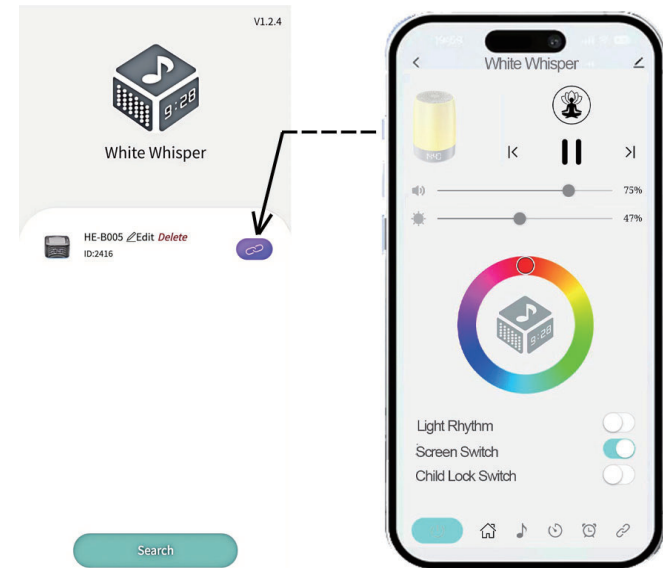

Click the “🔗” button to enter the main control page.

 
Product Structure

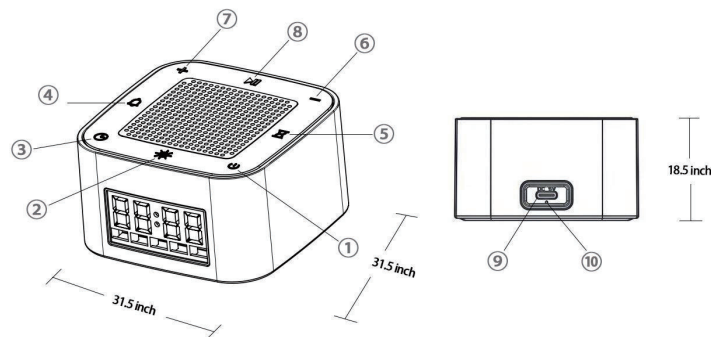

- | | |
|--|----------------------------|
| ① Power Switch & Display brightness adjustment | ② Light Control & Snooze |
| ③ Time Setting | ④ Alarm on/off switch |
| ⑤ Countdown Timer Shutdown | ⑥ Volume -/Next Sound |
| ⑦ Volume + / Previous Sound | ⑧ Pause/Bluetooth |
| ⑨ Charging Port | ⑩ Charging indicator light |

Screen

- | | |
|-------------|---------------|
| ① Hour | ② Minute |
| ③ AM | ④ PM |
| ⑤ Bluetooth | ⑥ Alarm clock |
| ⑦ Countdown | |

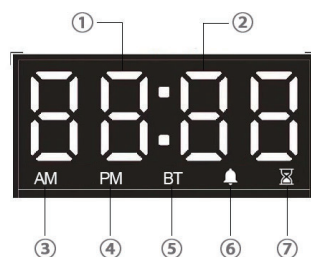 

When the function icon appears, it indicates that the function is enabled. If it is not enabled, the icon will not be displayed.

Instructions

① ⏻ Power Switch & Display brightness adjustment

1. Long press the power button to turn the device on/off.
2. Short press to adjust the main screen brightness in four levels: 100%, 50%, 10%, OFF.

② ✨ Light Control & Snooze

1. Short press the "🌟" button to cycle through light colors: Red - Green -Blue - Pink - Yellow - Light Blue - 7-color breathing.
2. Long press the "🌟" button to turn off the light.
3. When the alarm rings, short press to snooze for 9 minutes.

③ ⌚ Time Setting

1. Long press the "⌚" button to enter time setting, then short press the "⌚" button to set the following in order: 12H/24H format, hour, minute.
2. Short press the "⌚" button to adjust 12H/24H, AM/PM.

④ 🔔 Alarm on/off switch

1. Short press the alarm button to turn the alarm on/off.
2. Long press the alarm button for 2 seconds to enter alarm settings.
3. Short press the alarm button again to cycle through settings in the following order: hour, minute, ringtone, volume, workday.
4. Adjust the values using the +/- keys.

⑤ ⌚ Countdown Timer Shutdown

1. Short press the "⌚" button to start the timer.
2. Short press again to cycle through timer durations: 30/60/90/120/240/OFF (minutes).

⑥ ⏮ Volume - / Next Sound

Short press the "⏮" button to decrease the volume, long press the "⏮" button to switch to the next track.

⑦ **⏮ Volume + / Previous Sound**

Short press the "⏮" button to increase the volume, long press the "⏮" button to switch to the previous track.

⑧ **⏸ Pause / Bluetooth**

Short press to pause the music, long press the "⏸" button for more than 2 seconds to enter Bluetooth mode.

⑨ **🔌 Charging Port**

⑩ **💡 Charging indicator light**

Charging

If the device fails to turn on or automatically powers off shortly after turn on, it indicates that the battery is depleted and requires recharging.

1. **Connect the USB Power Cable**

Utilize the provided USB power cable to connect the Sound Machine.

Plug the cable into a USB power port, such as a mobile phone charger or a computer USB interface, to initiate the charging process.

 
2. **Charging Indicator**

A red light will illuminate during the charging process.

The charging indicator light will turn off once the device is fully charged.

Note:

It is necessary to charge more than 1 meter (3 feet) away from children to avoid danger.

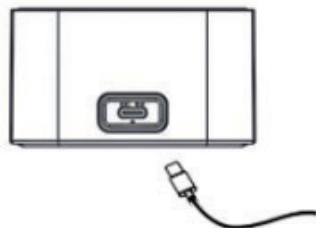

Specifications

Model: HE-B005

Input Voltage: DC 5V/1A

Battery: 800mAh/3.7V

Working Power: 2W

Speaker: 52MM-4Ω-5W

White Noise Tracks: 32

Custom Music: Bluetooth Playback

Lighting: 8 Modes + RGB Breathing (Sky Blue, Green, Dark Blue, Pink, Yellow, Red, White, Purple, Rhythm), 3000 Color Temperatures

Jieli AC6951 (Dual Channel): Bluetooth 5.3, Ultra-low Power Bluetooth Smart Chip

App Smart Control: White Whisper

Timer: 30min/60min/90min/120min/240min

Charging Time: 1-2H

Usage Time: 8H

Materials: ABS+PC+Silicone+Fabric

LED: 5050 RGB Light

Charging Port: Type-C

Product Dimensions: 31.5*31.5*18.5 inches

Net Weight: 0.47 lb

Color Box Dimensions: 4.13*4.13*2.6 inches

Gross Weight: 0.7 lb

Outer Carton Dimensions: 17.13*17.13*8.4 inches

Outer Carton Gross Weight: 37.5 lb

Quantity per Carton: 48 units

Standard: GB4706.1-2005

Packing List

White Noise Machine x1
USB Power Cable (31.5inches) x1
User Manual x1

Troubleshooting

1. Alarm is set in the app, but the device didn't activate?

- ① Please check if the alarm date has been selected (unselected background is white, selected background is dark gray).
- ② Check if the "Date Repeat" switch for the alarm is turned on.

2. Noise during playback?

Ensure the device has enough power. The charging indicator light will turn off when fully charged.

3. The device shows a countdown icon?

Yes, if it's not displayed, check if the countdown setting is enabled.

4. Mobile app connection failed?

- ① Confirm that Bluetooth and location services are enabled on your phone.
- ② Open the app's device search screen, delete all previously connected devices, and search for and reconnect to the device.
- ③ Check if the device is connected to another phone.

5. No response from the app after connecting?

Power off and restart the device, then reconnect to the app.

6. The device frequently shuts down after powering on?

Check if the countdown timer in the app or on the device is enabled. If you're not using this feature, turn it off immediately.

7. No response when pressing buttons on the White Noise Machine?

Open the app and check if the child lock is enabled.

8. How to check if a function is enabled?

Check the display screen to see if the corresponding icon is shown.

9. How to turn on Bluetooth and connect the White Noise Machine?

Press and hold the pause button until "BT" appears on the screen, indicating that Bluetooth is on. Then, connect your phone to the device.

10. How to set the time on the White Noise Machine?

- ① Turn on Bluetooth and connect the device to your phone. The system will automatically sync with the phone's time.
- ② For manual operation, press and hold the time button on the device until the time digits flash on the screen, then adjust the time using the "+" / "-" buttons.

11. Why is the volume sometimes too loud or too soft at startup?

Our White Noise Machine has a memory function, so it will return to the settings used during the last shutdown each time it is powered on.

12. Why can't I connect to play custom music via Bluetooth?

To play audio via Bluetooth, you need to first pair the device in your phone's settings.

If issues persist, refer to the user manual or contact customer support at **aftersales-help@outlook.com**