

DOG TRAINING COLLAR

User Guide



Model: P18

About the battery

- Do not place the product in a high temperature environment for a long time, when the battery is in an environment over 60°C for a long time, it may explode, causing life danger.
- When the equipment shows that the power is low, it should be charged as soon as possible. • After fully charged, please unplug the power supply as soon as possible to avoid long charging.
- Do not repair or remove the battery by yourself when it is damaged.
- Charging time is about 2 hours, the first charge is at least 4 hours. Tip: When not using the product, manually shutting down the product can increase the battery life time.
- The product uses 433MHz frequency to send and receive signals, with a far transmission distance.
- Distance is suitable for most canine training environments, such as indoor, courtyard, park, etc.
- The received signal may be shortened due to the interference of the environment, weather, obstacles and other factors.
- When the remote control sends a signal, hand to prevent obstacles. It also affects distance if you use it inside or under the pocket.

Sleep mode

- After no operation for 30 seconds, the receiver enters the hibernation mode and maintains extremely low power consumption.
- When the remote control transmits the command signal, it can press any button to directly wake up the sleep mode within 1-2 seconds.
- Dormant mode is usually used for dogs to rest briefly, or to sleep, without a manual shutdown. Outdoor waterproof
- The receiver achieves IP67 waterproof performance, suitable for any rain and fog weather.
- Suitable for swimming (1 m), not allowed for more than 1 hour. Tele-controller control panel


WARN!

- Please do not use the traction rope on the receiver collar, wear it for no more than 12 hours a day, take it off and relax every day.
- For the first use, start with the shock at the lowest gear and observe the dog's reaction.
- We strongly recommend that you use the vibration or sound training method before using the product electric shock function and then slowly start the electric shock from the lowest gear. If you follow this training method, your dog will generate the awareness of electric shock after the vibration, so the product can also stop the bad behavior of the dog through vibration or sound without the electric shock.
- This product is only suitable for training and interactive entertainment, animal abuse is strictly prohibited.

Trouble shooting

When I push my pet doesn't respond to the button?

- Make sure that the remote control and receiver are open, check that you are currently in the matching channel, and switch the 1 / 4 button to select the channel you want to control.
- If the four channels are uncontrollable, check if they are currently paired. You can manually rematch them, please see the product pairing instructions. Why does the remote distance measurement not reach the actual distance?
- The current environment may have barriers that affect the signal distance.
- The current environment may have signal interference, how do you know if the electric shock is effective?
- The indicator light will illuminate when the remote control and receiver are working.
- You can use the test light to test whether it works.

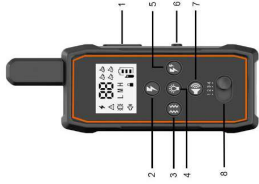

- ① Electric shock level adjustment key. In electric shock mode, the intensity can be adjusted in a range of 1-60 levels, and the appropriate level intensity can be selected.
- ② Weak shock button; press this button shock intensity is suitable for smaller dogs.
- ③ Shake button: press the button to deliver vibration to stimulate your pet, similar to continuous shock, even if you hold the button, vibration will automatically stop after 10 seconds.
- ④ LED Light Button; press the button to turn on / off the LED light on the receiver.
- ⑤ Strong shock button: press the button, the receiver performs a continuous shock, when you hold the button, it will always shock your pet. Autostopped after 10 seconds to avoid injury.
- ⑥ Safety lock key; can effectively prevent the remote control in the pocket or bag when the collision and touch.
- ⑦ Sound button: pressing the button to send the drops to the receiver, when your dog is trained, the sound button can effectively interact with the dog.
- ⑧ Channel Switching Key: If you have two collars, press the Channel Switch Key button to select between collar 1 and collar 2; note that one collar can only work with one channel, see product pairing instructions on how to pair a new channel system.

Please attention to Please charge the product for at least 4 hours before the first use

- Shock have no effect?
- 1. Test the normal electrical shock with the test light.
- 2. Change the long conductive column.
- 3. Before taking the receiver collar, remove the dog hair and move the collar left and right to adjust the position. The two contact points are positive and negative, and you must contact the dog's skin at the same time.
- 4. The power shortage of the receiver and the remote control will also affect the electric shock function.
- 5. Please adjust the tightness of the strap appropriately; after the dog wears the collar, put one or two fingers into the strap. 6. If the above doesn't work, try cutting your dog's hair short or wet your dog's hair before wearing the product.

Security lock key

Security lock key: The safety lock key can effectively prevent the remote control in the pocket or bag, and push the lock button down to lock all the keys; push the lock key up to remove the lock.

Security lock key



Product matching instructions

This product works by wireless signal, only when the remote control and receiver remain in the same channel. If the remote control and the receiver base contact due to the pairing signal interruption or power failure, please match manually.

Paired instructions:

1. Select the channel you want to control by using the channel switch button on the remote control. Long press the receiver power button until the green light often flashes, do not let go for 5 seconds after entering the pairing mode. LED light flash for 0.5 seconds, press the remote control panel function button: sound, vibration, shock any button to match. After successful pairing, the receiver will vibrate and the LED flash stops.
- Tip: If you buy a two dog trainer, you can pair two receiver collars on channel 1 and channel 2. If you buy four dog trainers, you can pair four receiver collars on channel 1 and channel 3 and channel 4; follow step 1 to synchronize four receivers. You can use the channel switch button on the remote control to control different dogs. Training function description: Electric shock mode 1, before the first use, use the test bulb to test the normal current, pick up the test lamp and place the metal wire on the contact point of the receiver.
2. Press the shock button on the dog remote control. The test light will illuminate, indicating that the electric shock is working. Different dogs have different resistance values; when you start using the device, you can gradually adjust the shock level to find the right shock intensity for your dog. Grade 1~100 is adjustable. Level 1~30 it can be used to warn; Level 40~60 it can be used to punish; Grade 70~100 it can be punishment and deterrence.

Vibration and sound modes

1. Before using a static shock, you can use sound and vibration modes, which allows the dog to form a conditioned reflex to stop the current wrong behavior after feeling the vibration or sound. This is the safest training method.
2. Available sound, vibration function combined with reward training recall function or other series of actions.
3. The intensity cannot be adjusted in vibration mode and sound mode.

Wear the receiver correctly

1. The dog training collar is not designed to carry frequently, and we recommend that you only use the collar in active training. Always remove the collar when your dog is unattended.
2. Wear the collar to your dog to be comfortable.

Switch & indicator light

The LED icon for the remote control displays: When the sound / shock / vibration / bulb function key is pressed, the LED screen "shock, vibration, sound" icon of the remote control is lit up to indicate the successful transmission signal.




Open / Close the receiver: Short pressing the power button to "vibrate" and start the receiver, often press the power button again to vibrate again, namely turn off the receiver.




The LED indicator light for the receiver: When the receiver is on and enters the working state, the green indicator light flashes every 2 seconds. When connected, when the receiver receives the remote control signal, the green light is on and starts / accepts the signal. After the indicator light flashes 15 times, the light goes off in the paired state, long press the power button until the green light flashes, when the power is below 10%, the red light lights on; when the receiver is fully charged, turn to the green light.



Remark: The light is changed to green

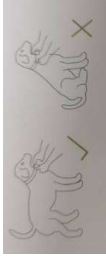

3. Place the receiver in the center of the dog's neck close to the chin to ensure that the two electrostatic contacts contact the skin at the same time and avoid easy release.

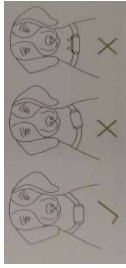

4. Place a finger between the collar and the dog's neck to determine if the collar is properly light, with the width of one or two fingers in.



Regular maintenance

1. When not used, dog training products must be placed in a dry place like other electronic devices.
2. In order to prevent battery damage, charge the dog trainer regularly even when not in use. Charging time should not exceed 3 hours.
3. It is recommended to clean the contact nails weekly.
4. It is recommended to check your dog's neck for discomfort every day.

List of accessories:

- Remote control x1 contact nail x4 Receiver x1 receiver
- remote control charging cable x1 Dog belt x1 leash x1 test light x1