 
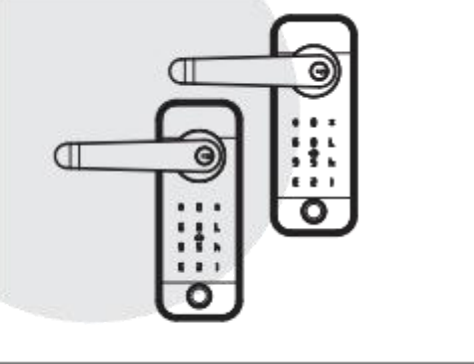 
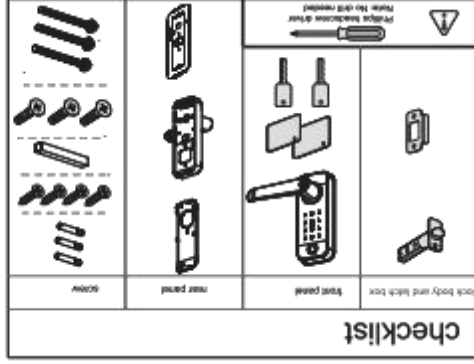 
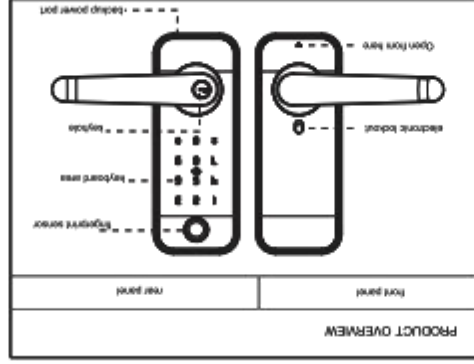 
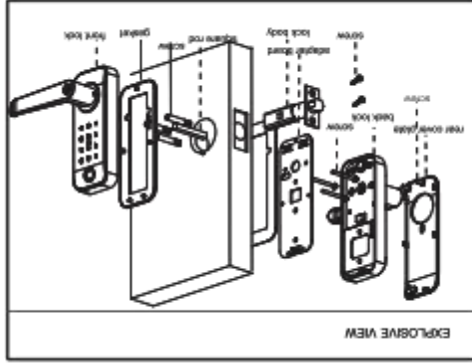 
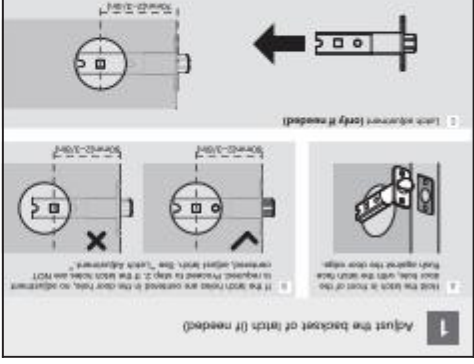 
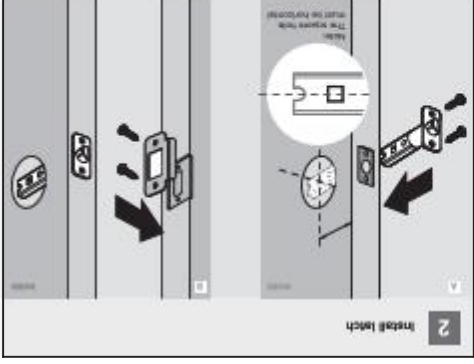 
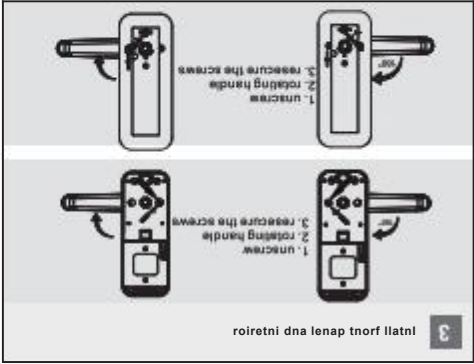 
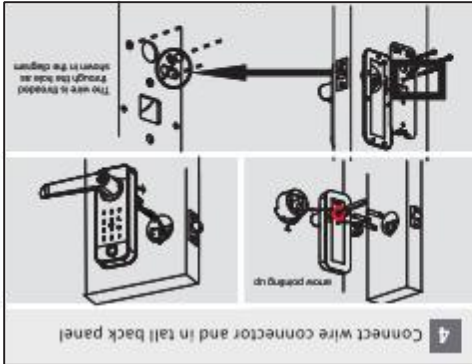 
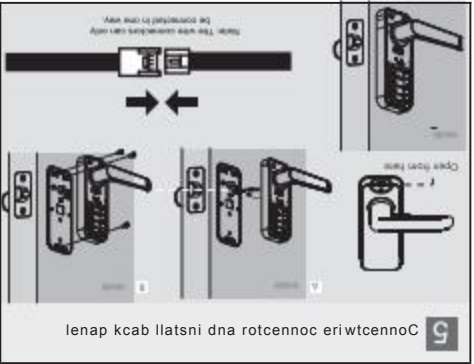 
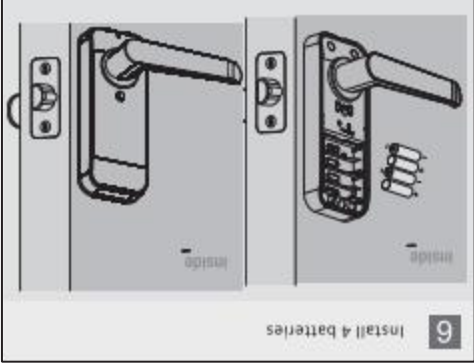 
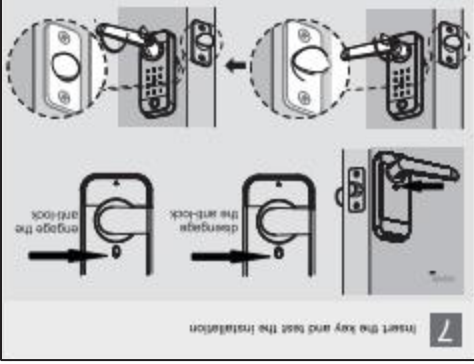 


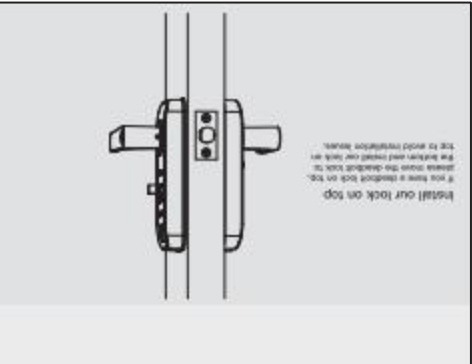

Language conversion operations in the nine countries in a system with no registered user status, press: 555 666 880 #> English 5556666881 #> Vietnamese 5556666885 #> Thai 5556666882 #> Portuguese 5556666886 #> Spanish 5556666883 #> Arabic 5556666887 #> French 5556666884 #> Russian 555 666 888 #> Chinese

 
User Settings

Preliminary Work

When using it for the first time, please fully charge the battery first, put the battery into the battery box, cover the battery cover, and the smart lock enters the standby state.

First Use

Press the key briefly, then press the # key, the voice prompt will say "Please enter administrator information" (the initial administrator password is: 123456), press the # key to confirm.

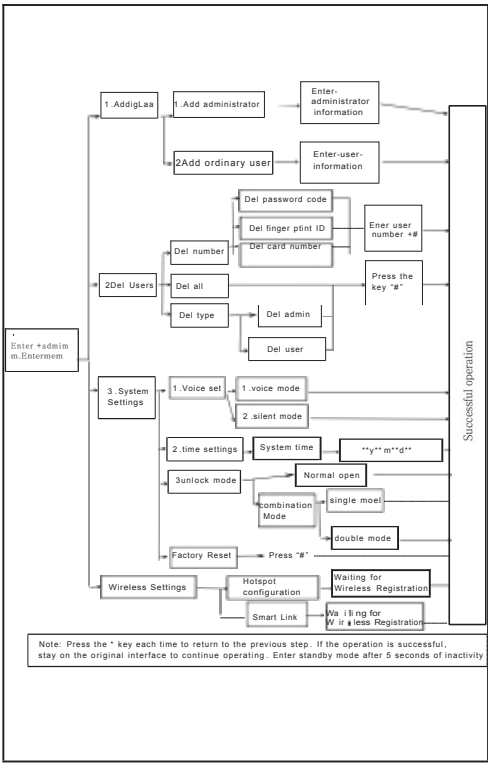

Configuration Description

1.1 Doorbell Function

Touch the doorbell button with your finger, and the smart lock will ring the doorbell.

1.2 Factory Reset

Press and hold the SET button on the back panel, the voice prompt will say "Restoring to factory settings, confirm by pressing the # key, cancel by pressing the * key", press the # key to confirm, the system will restart to the factory mode. In the factory state, any fingerprint, password, or card can unlock.

1.3 Low Battery Alert

When the system battery is less than 25%, the system will give a voice prompt "Low battery, please replace the battery" when unlocking. The battery can still unlock about 50 times, but please charge (or replace the battery) in time.

1.4 External USB Emergency Power Supply

When the battery is out of power or the power is too low, you can connect the data line to a power bank and insert it into the USB port on the front lock body to power the lock as an emergency power supply. The fully automatic USB emergency power supply solution adopts the method of recharging the charging battery, which will take about 30 seconds to unlock.

1.5 Illegal User Alarm

If an incorrect fingerprint, password, or card is entered continuously 5 times, the system will prompt. After the 5th alarm, the system will be locked for 5 minutes, during which it will not respond to the same type of user information. If the fingerprint is locked, you can unlock with a password. Or unlock after 5 minutes.

1.6 Virtual Password

The door lock adds a virtual number function to the digital password. When unlocking with a password, users can add numbers before and after the correct password, press the # key to confirm, which can increase the security of the digital password, but the total length of the input should not exceed 32 digits. For example, if the password is "010010", you can enter "001001000" to unlock.

Normal Open Mode: In the normal open mode, you can unlock without entering any user information, just press down the handle. Enter any correct user information to cancel the normal open mode.

Single Open Mode: Unlock by entering any set of user information.

Double Open Mode: Administrator users can use it normally. Ordinary users need to enter two different sets of user information continuously to unlock normally.

Restore Factory Settings: Restore to factory settings according to the voice prompt. After restoring to factory settings, all information of the door lock will be cleared.

Note: Use this function with caution.

Adding Users

Language prompt "1 Add user", then press "1 Add administrator" to enter the user addition page. The first user added must be an administrator, fingerprints and passwords can be used as administrator information, cards cannot be added as administrator users.

Language prompt "1 Add user", then press "2 Add ordinary user" to enter the user addition page. Language prompt "Please enter user information", record fingerprints, passwords, or cards according to the operation.

Recording instructions:

1 Add fingerprint. The user places the finger on the fingerprint sensor, the voice prompt says "Please enter administrator information", the user places the same finger on the sensor, the voice prompt says "Please enter again", enter six times continuously, the voice prompt says "Operation successful, number xxx". You can continue to enter user information.

2 Add password. The voice prompt says "Please enter user information", the user enters a 6-digit password, press the # key to confirm, the voice prompt says "Please enter the same password again", the user enters the same password. The voice prompt says "Operation successful, number xxx". You can continue to enter user information.

3 Add card: The user brings the card close to the touch keyboard IC card induction area, the system automatically reads and saves the card information, and the voice prompt says "Operation successful, number xxx". You can continue to enter user information.

Deleting Users

2 Del Users

Del all

Del type

Del admin

Del user

Del password code

Del finger print ID

Del card number

Enter user number #

Press the key #

Number deletion: The method to query the number is to use the user information that needs to be queried to unlock, press the "5" key after starting, and the voice prompt says "Number xxx".

All deletion: Operate according to the language prompt, after confirmation, all user information will be deleted, including administrator and ordinary users, fingerprints, passwords, and cards.

Note: Please confirm clearly before using this function and use it with caution.

Deleting Administrator: After deleting the administrator, the administrator is reset to "123456". Please re-enter the administrator information before using it again to ensure the normal use of the smart lock. Ordinary users can unlock normally after deletion, and ordinary users cannot be added before re-entering the administrator information.

Deleting Ordinary Users: According to the language prompt, all ordinary user information will be deleted after deletion. Only administrator users can use it normally.

System Settings

3 System Settings

1 Voice set

1 voice mode

2 silent mode

2 time settings

System time

11:11:11

3 Unlock mode

Normal open

combination Mode

single mode

double mode

Voice Mode: There are voice or prompt tones during use.

Silent Mode: There are no voice or prompt tones during use (voice navigation is still available when entering the menu page).

Time Setting: Enter the time recording function according to the language prompt. Style: June 25, 2020, 14:32, the way to enter the time is 20-06-25-14-32.

Normal Open Mode: In the normal open mode, you can unlock without entering any user information, just press down the handle. Enter any correct user information to cancel the normal open mode.

Single Open Mode: Unlock by entering any set of user information.

Double Open Mode: Administrator users can use it normally. Ordinary users need to enter two different sets of user information continuously to unlock normally.

Restore Factory Settings: Restore to factory settings according to the voice prompt. After restoring to factory settings, all information of the door lock will be cleared.

Note: Use this function with caution.

download-the"TuYa Smart"APP

Method 1: <https://smartapp.tuya.com/tuyasmart/>

Method 2: Scan the QR code below.

Wireless Settings

Wireless Settings

Hotspot Configuration

Waiting for Wireless Registration

Smart Link

Waiting for Wireless Registration

Wireless settings: smart lock according to voice navigation into the wireless settings, into the wireless link mode "5" button began flashing, while using the phone to open the "tuyasart" APP

Go to the homepage of the app and click "Add Device"

Enter the device search interface to wait for a period of time, the interface back to the need to add a smart lock, click on the device to start adding.

The mobile phone needs to link to the Wifi that needs to be added, enter the corresponding Wifi account password, and only support 2.4G Wifi to ensure the accuracy of the input account and password.

After waiting for one end of the time, the smart lock will automatically link to Wifi, click "Done" to confirm.

The battery power can be displayed through the app, and the power display may be accurate offline for a long time, and you need to re-connect to update the status.

Can add family members, quick management

Multiple passwords can be set remotely

It can be managed with other smart homes.

After-sales Service

Our company provides lifelong maintenance services for the products we sell. Within one year from the date of purchase, our company provides free warranty services for clothing, for products beyond the warranty period, our company provides paid maintenance services.

1. Maintenance and Service Statement

1.1 Within one year from the date of purchase, if the user uses the product correctly and there are quality problems with the product, the whole lock is free for warranty (parts fee, service fee).

1.2 The quality guarantee period for the maintenance quality of the service provider is 3 months. If the same failure occurs within three months, regardless of whether it exceeds the warranty period, the service provider authorized by our company should provide free maintenance services.

1.3 The free warranty does not include the following conditions, and the service provider can charge maintenance fees according to the standard:

Products beyond the warranty period; products without a valid warranty certificate;

(2) The product model or number on the quality guarantee certificate does not match the actual object;

(3) The original product serial number and warranty label are damaged, and the production date cannot be determined;

(4) Unauthorized changes to the warranty certificate, number, label; damage caused by external forces;

(5) Products not installed or used according to the product instruction manual;

(6) Products damaged due to unauthorized replacement of hardware; products damaged without authorization;

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.