

Operating Manual of Remote Control Toys Series

Thank you for using our products. In order to get a better understanding of this product, Please read the following instructions carefully before using them, which will bring you a different sense of operating experience.

Attention

- Electric control product: This product is suitable for 6 years old and above. It is assembled/charged by adults and then played by children.
- Please use the product under the supervision of adults. Please do not dismantle or modify the product without authorization. Any modification may cause the product to be unable to be used normally.

 
Precautions for Use

1. The toy car uses a 3.7V rechargeable lithium battery, the remote controller uses 2X1.5V "AA" unchargeable batteries, the Watch remote control uses 2X1.5V "AAA" unchargeable batteries.
2. Battery removal and loading. should be carried out correctly according to the polarity and voltage in the toy battery box.
3. Uncharged battery not rechargeable.
4. The rechargeable battery must be charged under adult supervision.
5. The rechargeable battery should be taken out of the toy before charging.
6. Different types of batteries or old and new batteries can't be used in mix.
7. The car body must use the original configuration of battery, And the original' USB cable must be used to charge the battery.
8. The run out of battery should be removed from the toys, If you haven't used it for a long time, please remove the toy's battery.
9. The power terminal shall not be short-circuited.
10. Use a screwdriver turned on the remote control battery cover screw, across the electrodes in the correct polarity into the battery, use a screwdriver on the battery cover screw drive at the end of the screw, the battery plug wire connected to the body the power cord in the correct polarity.
11. Repair and maintenance: this product is a plastic, hardware and electronic components, shall not enter the water or placed in a humid environment or use for a long time,regularly check the wires, plugs, casing and other parts for defects and found defects should stop using, and restored.

2.4G Automatic Code Matching Specification

1. Install the battery on the remote control and press the remote control switch, then the indicator light flashes, turn on the switch of the remote control car, and it enters the state to be connected. When the connection is successful, the indicator light of the remote control is off, and the indicator light of the remote control car is always on. Note: If the connection is not successful, please repeat the above operation.
2. One remote control corresponds to a car, when the connection is successful, it will not be disturbed. Note: Not connect to many cars at the same time.
3. When the code matching of the remote control fails, it will enter sleep mode 45 seconds later, and it will enter sleep mode 5 minutes later when there is no operation after the code matching.
4. When it is necessary to match other remote controls or remote controlled vehicles of the same model, press and hold the remote control switch for 2 seconds and turn off the power switch of the remote control vehicle before re-matching.

Description to the Functions of Remote Control

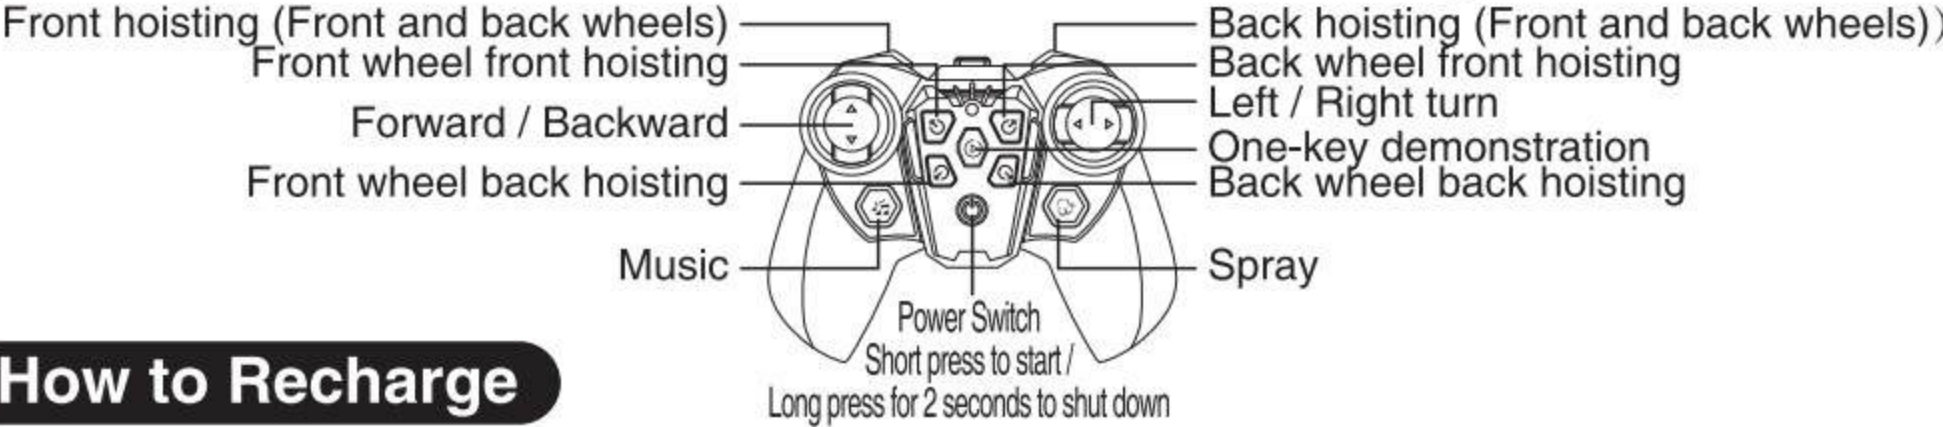

How to Recharge

 
1. This 3.7V lithium battery is new, before playing please charge the battery, remote control distance about 25m.
2. Need to first plug the battery cord in accordance with the correct polarity connection in the charger plug, and then plug the charger in the socket. (Note: Do not use the quick-charge charging device to charge, to avoid burning out the USB charging cable.)
3. It takes 2-3 hour to fully charge the battery, Charging plug with indicator light, red light on when charging, light off when full. Please don't overcharge, Charging for a long time will not increase the power.
4. Check toys and batteries regularly. If accessories, batteries, charging cables, etc. are damaged, stop using them immediately. After repairing or renewaling, can continue to using.

How to Install Batteries

1. Remote controller
 - (1) Open the battery cover of the remote control and load 1.5V AA battery according to the positive and negative polarity of the battery compartment.
 - (2) Cover the battery cover and lock the screws.
2. Remote control vehicle
 - (1) Open the bottom battery cover and connect the rechargeable battery to the power outlet and load it into the bottom of the car.
 - (2) Cover the battery cover and lock the screws.

Operations of Remote Control and Cars


Operate the "Forward / Backward" lever, the remote control car Forward / Backward.

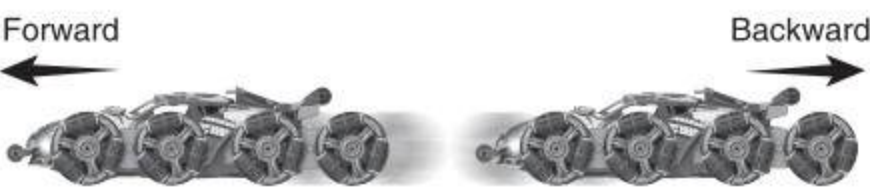

Press down "Front hoisting" key, remote control car forward rolling, press down "Back hoisting" key, remote control car backward rolling.



 Press down "Back wheel front hoisting" or "Back wheel back hoisting" keys, remote control car back wheel forward / backward rolling.

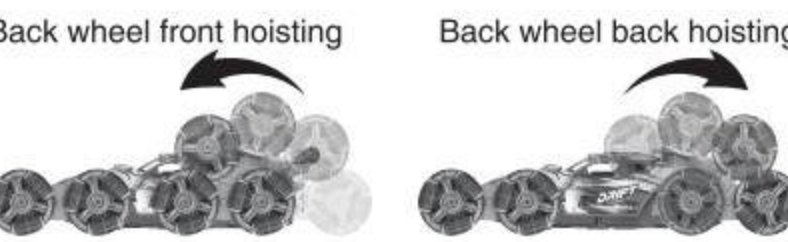


Open water filling cover, use water filling deice align to the hole to fill water. operate "Spray" key, short time press to start and close spray+fog lamps. each one time Spray time at 5 minutes.




Operate the "Left turn / Right turn" lever, singly press operation to remote control car Left turn / Right turn, cooperate with "Forward / Backward" lever to realize turning.



 Press down "Front wheel front hoisting" or "Front wheel back hoisting" keys, remote control car front wheel forward / backward rolling.

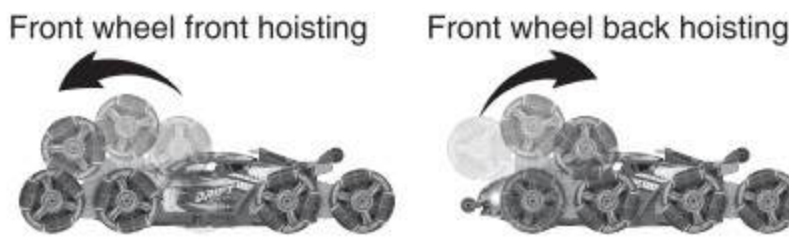

 Remote control car start music when press down "Music" key. start machine and default music, not add background voice, short time press music switch then start background music 1-2-3 in sequence fourth short time press then close all sounds.

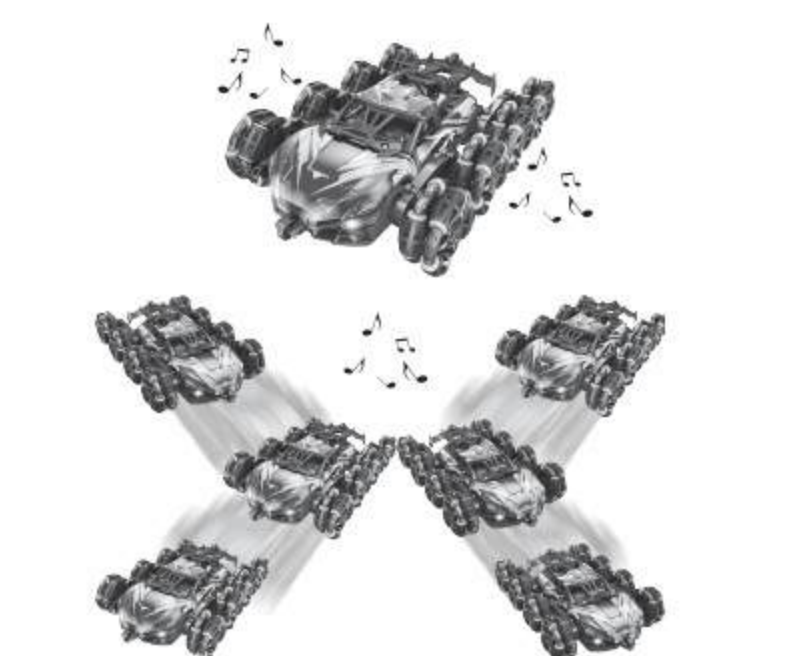

Operate "One-key demonstration" key, short time press then all function automatic demonstration one time, actions able to be freely assorted, every one time demonstration time is 30s, short time press again then turn to next one background music, 3 background musics circling, automatic enter into standby after demonstration finished.



Instructions

The toy battery charger should be checked before use to prevent damage to wires and other components. If there is damage, it must be repaired before use.

General Fault Handling		
Symptoms	Fault cause	Treatment method
The vehicle cannot be operated	1. The remote control is not connected or the remote control car switch is not on. 2. The battery is not properly installed. 3. The rechargeable battery is weak.	1. Open the car switch, contact the remote control again. 2. Properly load the battery into the remote control and the car. 3. The car battery is charged.
The vehicle is not controlled and the distance is close by remote control	1 .Remote control or car battery,lack of electricity. 2. There may be a source of disturbance near the site.	1. Replace the battery in your remote control or recharge your car battery. 2.Replace the site.
Abnormal protection	When the function of the remote control vehicle is hindered by external forces or the power is insufficient, circuit battery short circuit.	Re-turn on the power switch or take out the battery and reload it after it is powered off.

To consumers

1. When playing with remote control cars indoors, please be careful not to damage furniture or glass.
2. Please play in a safe place outdoors. Don't play with remote control cars on the road and in crowds, so as to avoid danger.
3. When you hear thunder when playing in a remote control car outdoors, you should stop playing immediately.
4. When the wheels rotate, don't stretch your hands close to avoid injury, and don't get involved in hair, clothes, etc.
5. Do not drive the remote control car at people.
6. Do not throw or collide the remote control car.
7. Keep away from fire sources and high temperatures when placing remote control vehicles.
8. This car uses complex electronic circuits and a large number of meta-accessories. Please do not disassemble or modify the circuit board at will.
9. When the remote control car is covered with dirt and dust after playing, it must be gently wiped with a wet cloth.
10. Don't put the toy in water, it will damage the electronic components.

! WARNING: The contained widgets are at risk of suffocation and are not suitable for children aged 3 and under to play with. Adults must be present when using them for supervision and guidance. This manual contains important information, which cannot be discarded for inquiry.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the followingmeasures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:
The equipment complies with FCC Radiation exposure limit set forth for uncontrolled environment. The device shall be operated and installed without restrcition.