

Manual

ARTWORK AT 100% DO NOT STRETCH OR SKEW

Size: 100 x 300 mm
100 x 100 mm (Folded)



INTAPRINT
Black & White Instant Print
Wireless Printer

Please read the instructions carefully before using this product. The specifications are for reference only; the actual operation may vary.

INSTRUCTION MANUAL

Introductions

Welcome and thank you for choosing our product. To help you understand and use it more effectively, we recommend reading this manual carefully before use and keeping it for future reference. Please follow all warnings and precautions outlined in the manual. If there are any discrepancies, please note that the design or content may change without prior notice.

This product is a uniquely designed, easy-to-use digital printer for children. It is specifically created to inspire creativity and imagination, allowing children to enjoy and explore the fun of digital printing.

Key Functions

Long Press - Power button
Doble Click - Print




Power indicator status

	Long Press/Double Click	Power on or off/Print
	Red light is always on/off	Charging/Charging completed
	Blue light flashing/Always on	Bluetooth disconnected/connected


Use Printing Application

- First, charge the device. To turn it on or off, press and hold the power button for three seconds.
- Double-click the power button to print a paper displaying the Bluetooth pairing name: YHK-xxxx.
- Search for 'WalkPrint' on Google Play or the Apple App Store to download the app.
- After enabling Bluetooth, use the app downloaded on your phone to connect to the Bluetooth printer in the 'My Printers' tab. Once the connection is successful, you can print.

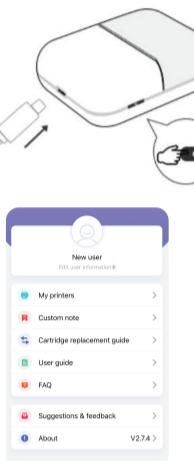

Paper Replacement

- Open the loading bin manually.
- Remove the old paper roll and insert the new one as shown, making sure the paper is aligned straight and not crooked. (Note: The new thermal paper should extend about 2 cm beyond the edge of the paper bin to allow the machine to automatically feed the paper when the bin is closed.)
- Close the paper bin, and the machine will automatically feed the paper for normal use.
- Once the above steps are completed correctly, the machine will be ready to print normally.

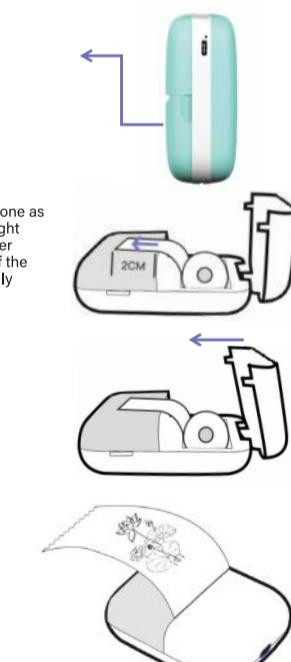

Battery Warning

- Please use a 5V charger as specified to avoid damaging the machine.
- Disassembly, impact, compression, or exposure to fire is prohibited.
- If severe bulging occurs, do not continue to use the device.
- Do not expose to high temperatures. If the battery has been immersed in water, do not use it.
- Using the wrong type of battery can be hazardous and may cause an explosion. Be sure to follow the instructions for properly disposing of used batteries.

Important Safety Instructions

- When charging, please insert or remove the charging cable gently to avoid damaging the port with excessive force.
- After charging, please unplug the charging cable promptly.
- To avoid danger, do not use or charge the device in high-temperature, high-humidity, or dusty environments, such as bathrooms, steam rooms, or near open flames.
- Improper charging may cause damage to the print head.
- Do not touch the print head to avoid the risk of overheating and burns.
- The paper cutter blade is sharp; please handle with care and avoid touching it.

Safety instructions for transformer toys

- Toys should not be given to children under 3 years of age due to choking hazards.
- Toys should only be used with the recommended transformer.
- Transformers are not toys and should not be used as such.
- Toys that can be cleaned with liquid should be disconnected from the transformer before cleaning.
- Toys should not be connected to a power supply exceeding the recommended voltage.
- Regularly check the wires, plugs, casing, and other components for damage. If any damage is found, stop using the toy until it has been properly repaired.

Designed in USA, Made in China.
Distributed by JME & CO, NYC, LLC, New York, NY 10018 USA
©2025 JME & CO, NYC, LLC. All Rights Reserved. MVMT and MVMT logo are registered trademarks of JME & CO, NYC, LLC. hello@meandco.com

The artwork and design of this package are protected by United States Copyright law and may not be reproduced, distributed, displayed, published, or used for any purpose without prior written permission. You may not alter or remove any trademark or copyright notice from this package. Because of continuous improvements products may differ slightly from package.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
1- This device may not cause harmful interference, and
2- This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Noted: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
1- Reorient or relocate the receiving antenna.
2- Increase the separation between the equipment and receiver.
3- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
4- Consult the dealer or an experienced radio/TV technician for help.

FCC CE RoHS

FCC ID: 2BMOI-MA1134