

Music Boxing Machine

specification




Please read the instructions carefully before using

CONTENTS

Product introduction	01
Introduction to use	01
Installation instructions	02
Troubleshooting instructions	02
Matters needing attention	03

Product introduction

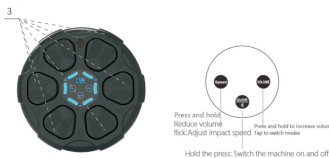

1、megaphone 2、Type charging port 3、Impact zone

Instructions for use

1. Boot within 3 minutes is not hit, the digital tube light in the middle of the horizontal "—", 10 minutes is not hit into the automatic shutdown
2. By default, the background music is played when the Bluetooth is connected. When the background music is turned off, the background music starts to play after the Bluetooth is disconnected. Can be used while charging, while charging the digital tube display "Chg" full display "FUL"
3. It can be used while charging. When charging, the digital tube displays "Chg" full of "FUL".
4. Button function
TK1-- Long press volume increase/short press mode switch, digital tube display P01-P09
TK2-- Long press 3 seconds switch function, boot default fixed background music, Bluetooth can be searched
TK3-- Long press volume to reduce, short press speed mode, digital tube display H01-H09

Music Boxing Machine

Installation instructions

Installation method 1:

1. First, tear off the double-sided tape attached to half of EVA.
2. EVA paste is aligned on the back of the product.
3. Remove the double-sided tape on the bottom half of EVA.
4. Put it in a good position and stick it on the wall.

Installation method 2

1. Stick the glue on the back of the product.
2. Tear off the top half of the double-sided tape.
3. Put it in a good position and stick it firmly to the wall.

troubleshooting

number	Fault phenomenon	Cause analysis	Elimination method
1	No light and silence	Product not started	Tap the on button
2	No light and silence	Battery loss	Please charge it
3	Light flicker	Low power	Please charge it
4	Short press the switch to not turn on	The capacitor is not powered on for a long time	Press the switch repeatedly
5	An internal crash	Emitted by internal activity	Normal phenomenon

Matters needing attention

1. Please fix the product on a solid and reliable wall. When hitting, please hit the area and do not hit the corner area to avoid hand injury or equipment damage.
2. this product is suitable for adults, children please use under the guidance of adult supervision.
- 3, beginners should not be too strong to avoid hand injury. During the exercise, first pay attention to safety, beginners should not be too strong, and it is strictly prohibited to hit legs and knees.
- 4, do not hit the horn area.
- 5, the device can not be turned on or abnormal please check whether the power is too low, should be charged in time, charging time should not exceed 8 hours, long-term use is recommended to charge once 1-2 months.
- 6, this product is not waterproof, wipe boxing target need to use a thousand cloth do not touch water.
7. Please take good care of the instructions for emergency use.

Music Boxing Machine

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device

must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.