



 
Item #LED-O00140

SKU #1013338838

Model #HS-9016

USE AND CARE GUIDE

OUTDOOR PORTABLE LED SPEAKER LAMP

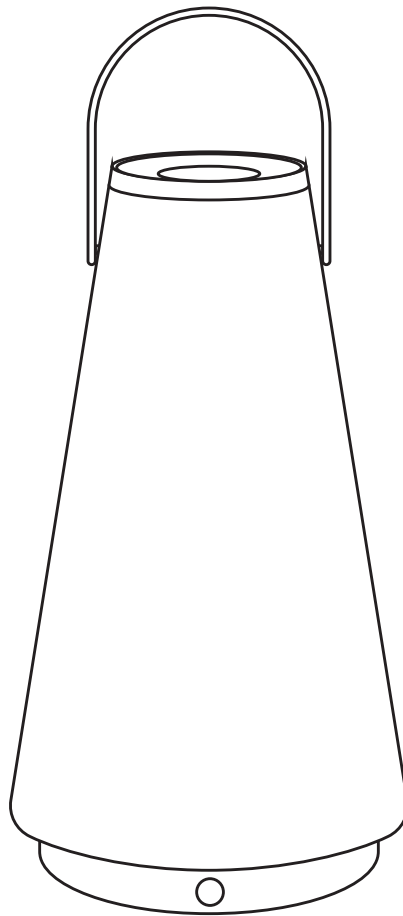

Questions, problems, missing parts? Before returning to the store,
call Monteaux™ Lighting Customer Service
8 a.m. - 6 p.m., EST, Monday-Friday

1-800-446-9092

THANK YOU

We appreciate the trust and confidence you have placed in Monteaux™ Lighting through the purchase of this light. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Monteaux™ Lighting!

Table of Contents

Table of Contents.....	2	Package Contents.....	3
Safety Information.....	2	Operation	4
Warranty.....	2	Care and Cleaning	4
Pre-Installation	3	Troubleshooting.....	4
Planning Installation.....	3		

Safety Information

- ☐ Consult a qualified electrician if you have any electrical questions.
- ☐ This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- ☐ This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC ID: 2BMPGCG178541HS140A



CAUTION: Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation. Please call our Customer Service Team at 1-800-446-9092.



WARNING: Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

Warranty

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of one (1) year from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect, or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.

 
Contact the Customer Service Team at 1-800-446-9092.

Pre-Installation

PLANNING INSTALLATION

- ☐ Read all instructions before installation.
- ☐ To avoid damaging this product, assemble it on a soft, non-abrasive surface, such as carpet or cardboard.
- ☐ Keep your receipt and these instructions for proof of purchase.

PACKAGE CONTENTS

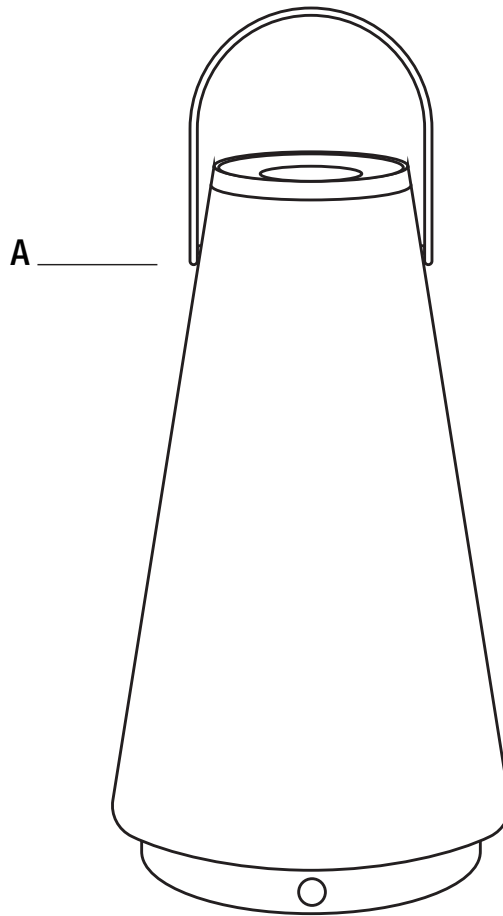

Part	Description	Quantity
A	Light Fixture	1

Operation

 
1 Turning the light on and pairing

- ❑ Touch the top of the light to turn on and switch brightness (3 brightness settings)
- ❑ Press and hold the Bluetooth button for 3 seconds to turn on pairing mode. The light is now discoverable on pairing devices as "Bel-Air Speaker," select to connect.
- ❑ When the red light flashes, the battery is low. Open the silicone cover on the back to charge.



NOTE: Charging must use a minimum 5V MIN 2A Type C adapter. Be careful not to break the charging silicone cover when opening it

- When the red light is always on: charging is underway
 - When the light is green: charging is complete
- ❑ After full charge as speaker only: up to 6H
After full charge light only: up to 2H
After full charge using light and speaker: up to 1.5H

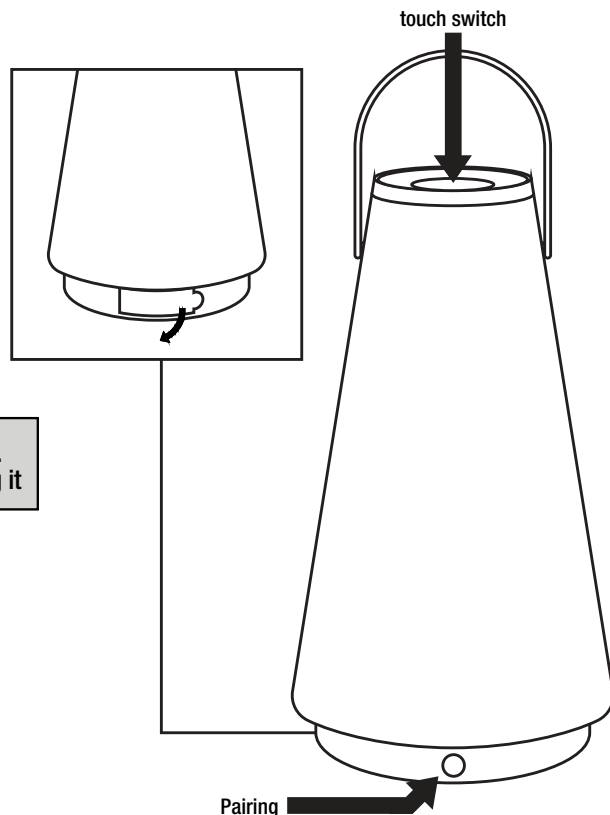

SPECIFICATIONS
LIGHT OUTPUT : 100 LUMEN MAX
BATTERY RUNTIME : 2 HOURS DENPENDING ON USE
CHARGE TIME : UP TO 3 HOURS
SPEAKER WATTAGE: 3W MAX
POWER ADAPTER OUTPUT : 5V MIN 2A
BLUETOOTH VERSION : 5.4
BLUETOOTH RANGE:10 M
After the bluetooth function is turned on, if there is no use within 2 minutes, the bluetooth function will automatically turn off.

Care and Cleaning

- ☐ Clean the lamp with a soft, dry cloth.
- ☐ Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution
The bluetooth speakers will not pair with smart device.	The bluetooth feature is turned off on the smart device.	Press and hold the bluetooth button for 3 seconds to turn on the pairing mode. Charge up the device being paired with the light. Smart power management may have turned off the Bluetooth function when low on power.
	Another bluetooth device is connected	Disconnect or power off the other bluetooth device.
	The smart device is out of range of the bluetooth speakers.	Be sure the light is within 33 ft. (10 m) of the smart device.
	The smart device did not automatically connect to the bluetooth speakers.	Confirm the device's "Discoverable" mode is turned on to allow the light and smart device to recognize each other. Go to the pairing list on the device and manually connect the device to the light.
	Interference is causing confusion with the connection.	Power both the device and the bluetooth and back on. Power off other devices the light has previously been connected to. Delete the light from the smart device and rediscover it. Move away from Wi-Fi routers or computers that could be causing interference.
	The bluetooth function of the lamp is automatically turned off when it is not used for a long time	The default setting of bluetooth on the light is: it will automatically turn off if you do not use the bluetooth function for 2 minutes. Please press and hold the bluetooth button for 3 seconds to turn on the pairing mode again.
There is no sound or poor sound quality from the speakers.	Music settings on the smart device need to be adjusted.	Turn music on from the smart device. Turn volume up from the smart device.
	The bluetooth feature is turned off on the smart device.	Ensure the bluetooth function is turned on within the device settings. A bluetooth symbol should be visible somewhere on the device screen. Charge up the device being paired with the light. Smart power management may have turned off the bluetooth function when low on power.
	The bluetooth device is too far away from the shop light speakers.	Move the device closer to the shop light/speakers.
	Interference is causing confusion with the connection.	Power both the device and the bluetooth off and back on. Re-pair the device and the light speakers. When successfully paired, the speakers will emit a brief series of tones to indicate that your device is connected. Power off other bluetooth devices within a 33 ft. (10 m) proximity range. Only one device can be connected to the shop light/speakers at a time.
Power is ON ,and light does not illuminate	Bluetooth and lights are controlled separately	You can turn on only the light, or only use bluetooth to play music, or use both the light and Bluetooth at the same time.



Questions, problems, missing parts? Before returning to the store,
call Monteaux Lighting™ Customer Service
8 a.m. - 6 p.m., EST, Monday-Friday

1-800-446-9092

Retain this manual for future use.