
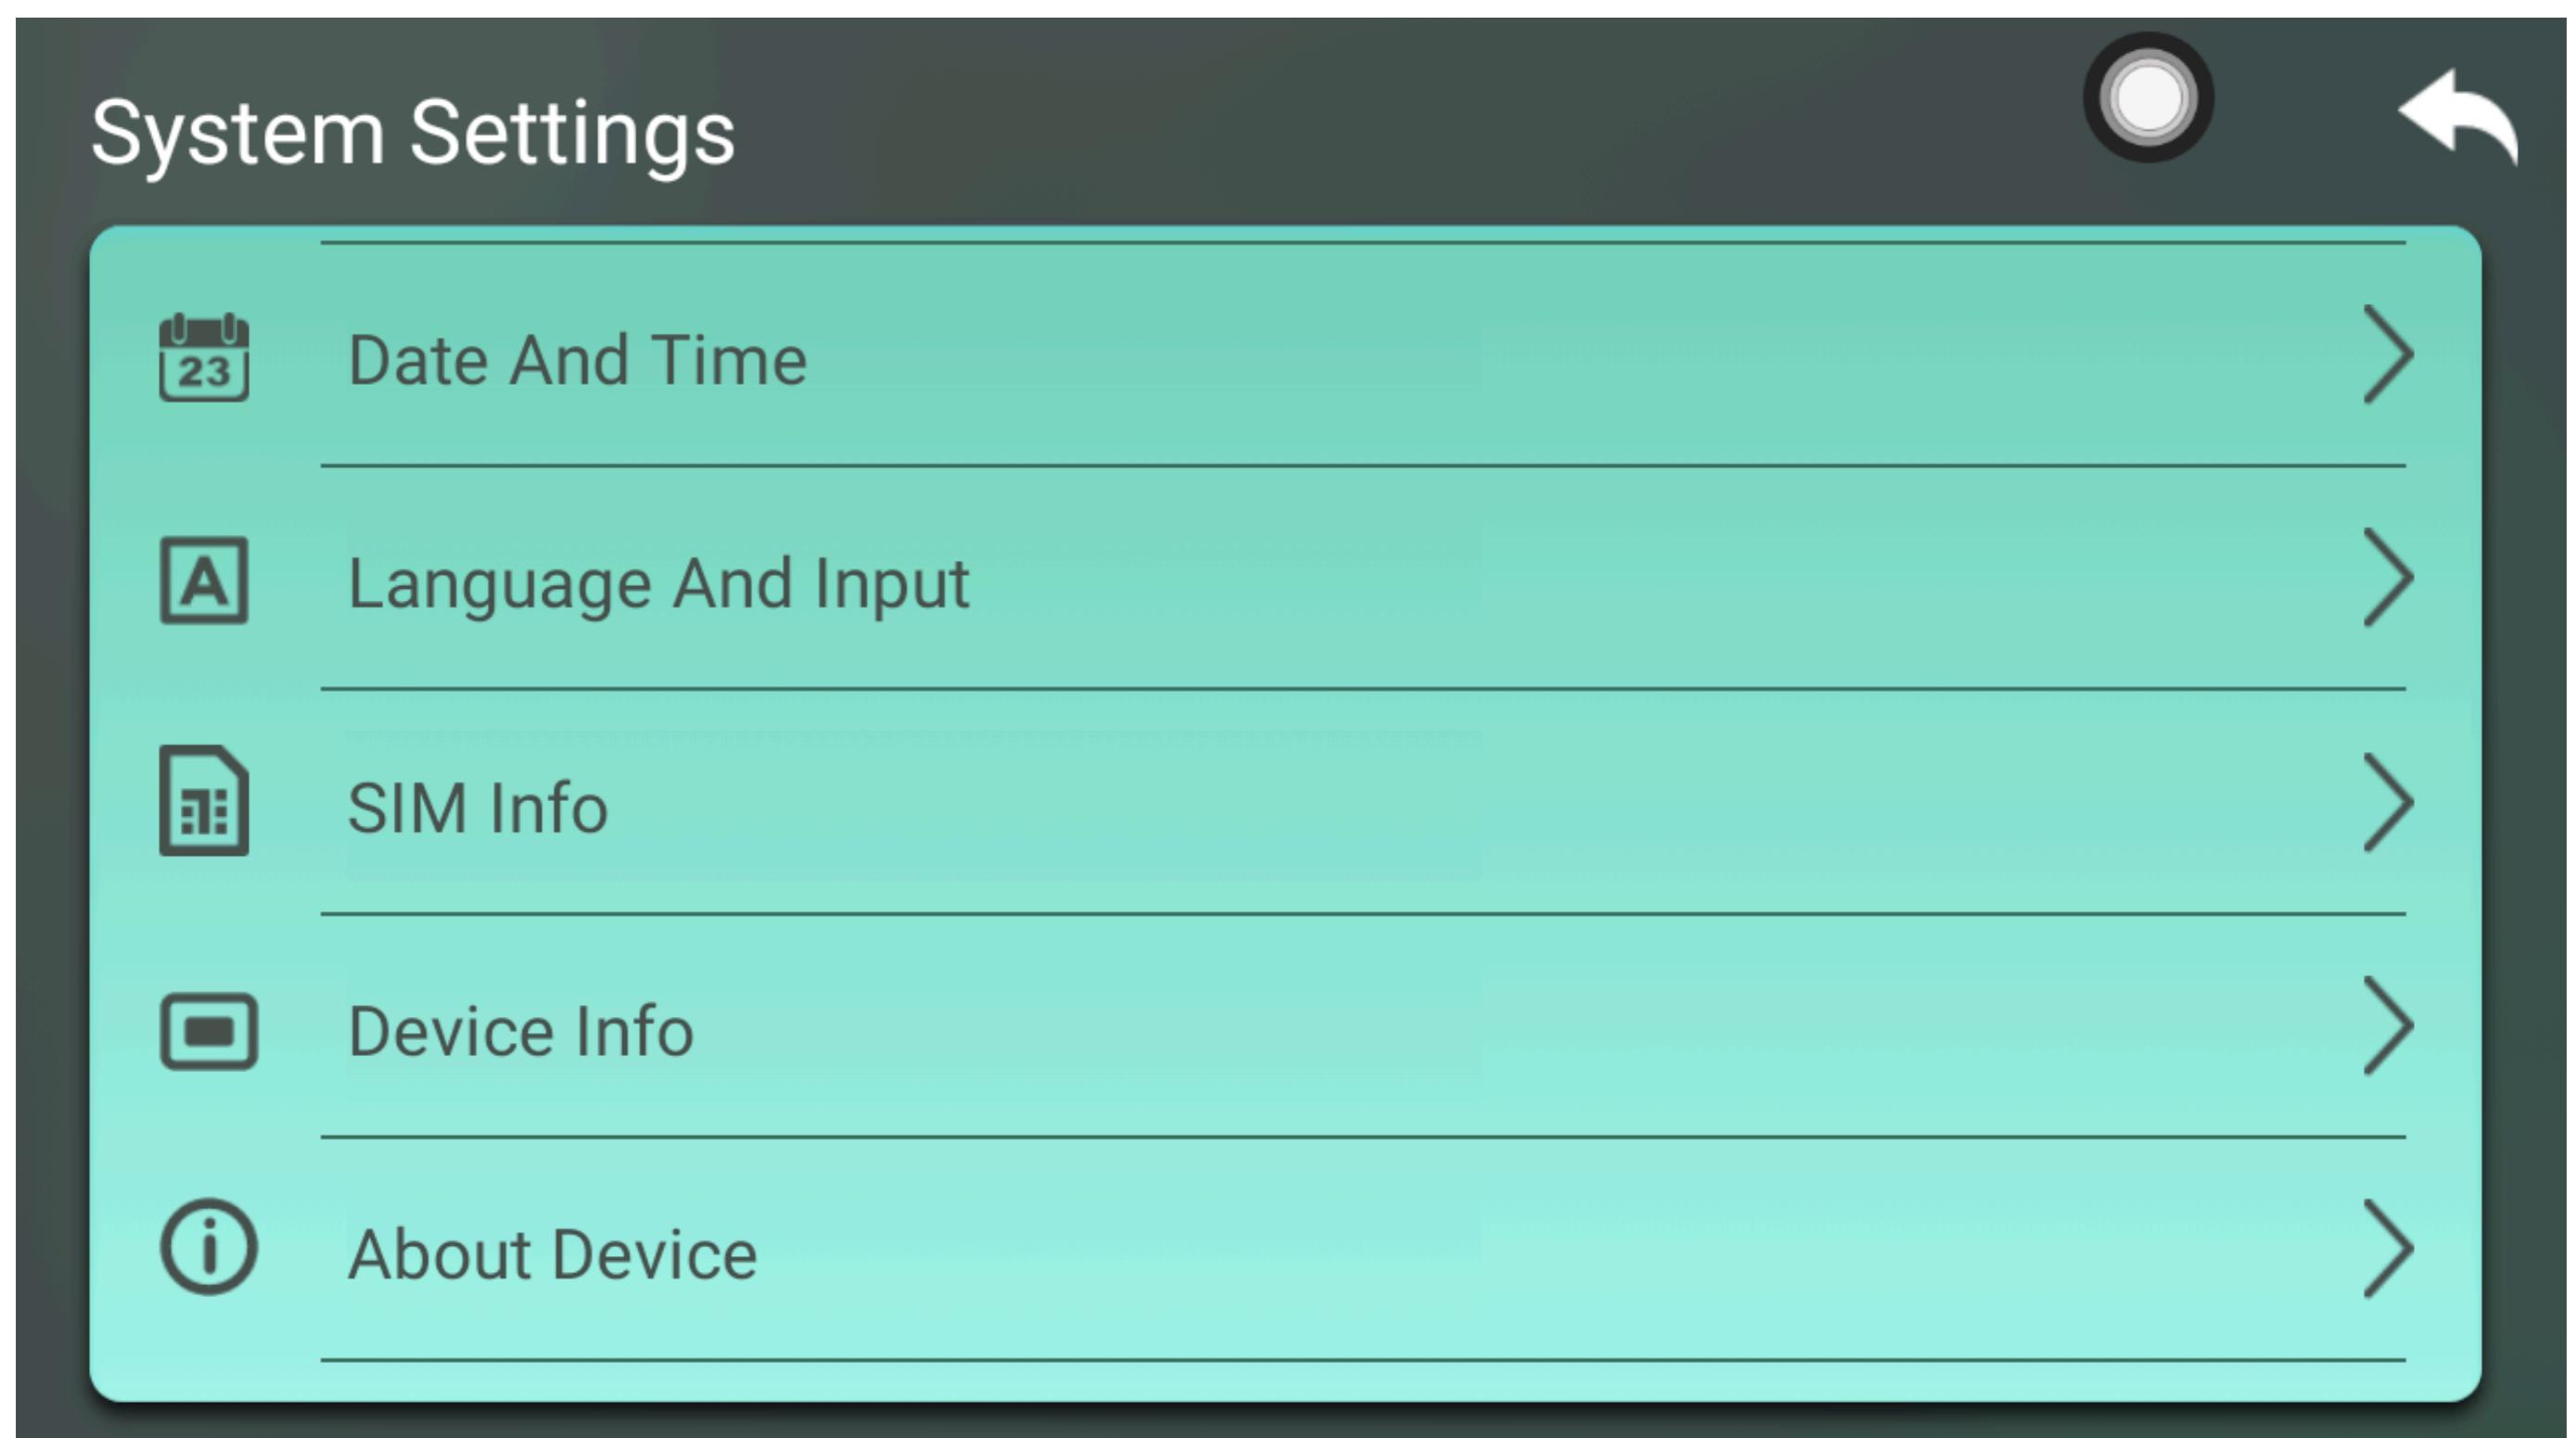


User Settings


System Settings

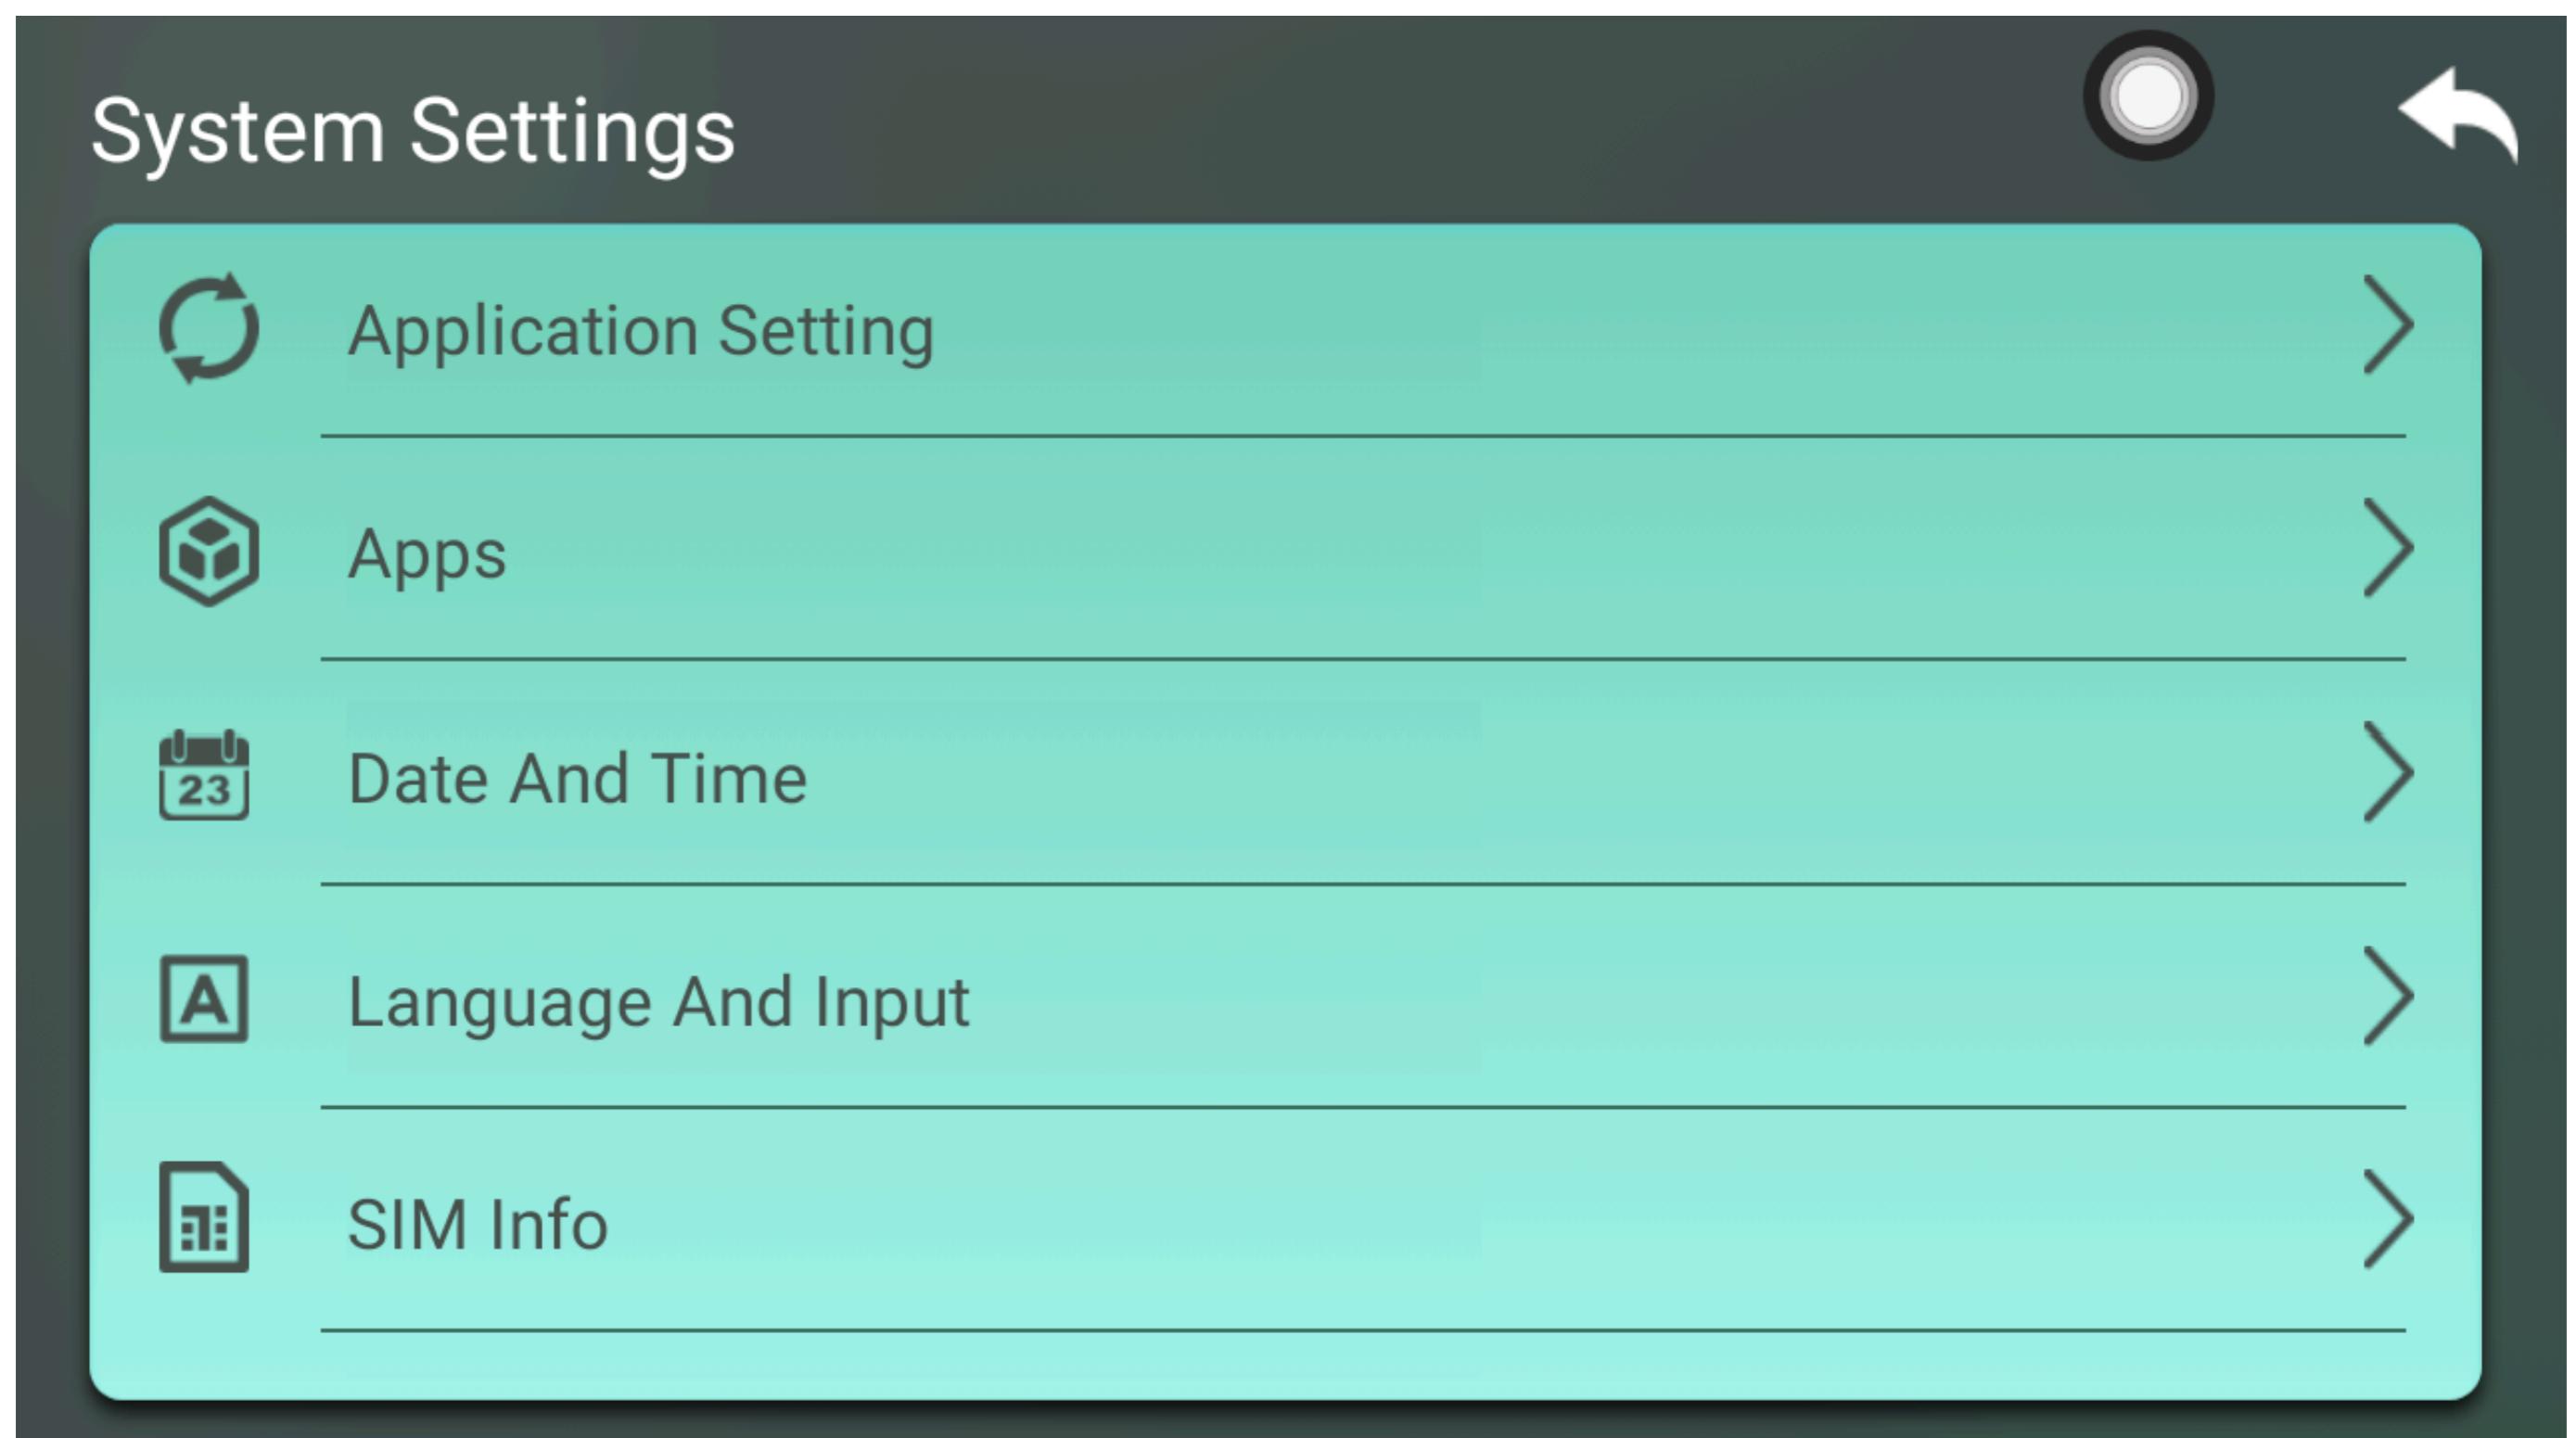

User Settings


Network Settings

Click the  WLAN key to enter network settings, as shown below.

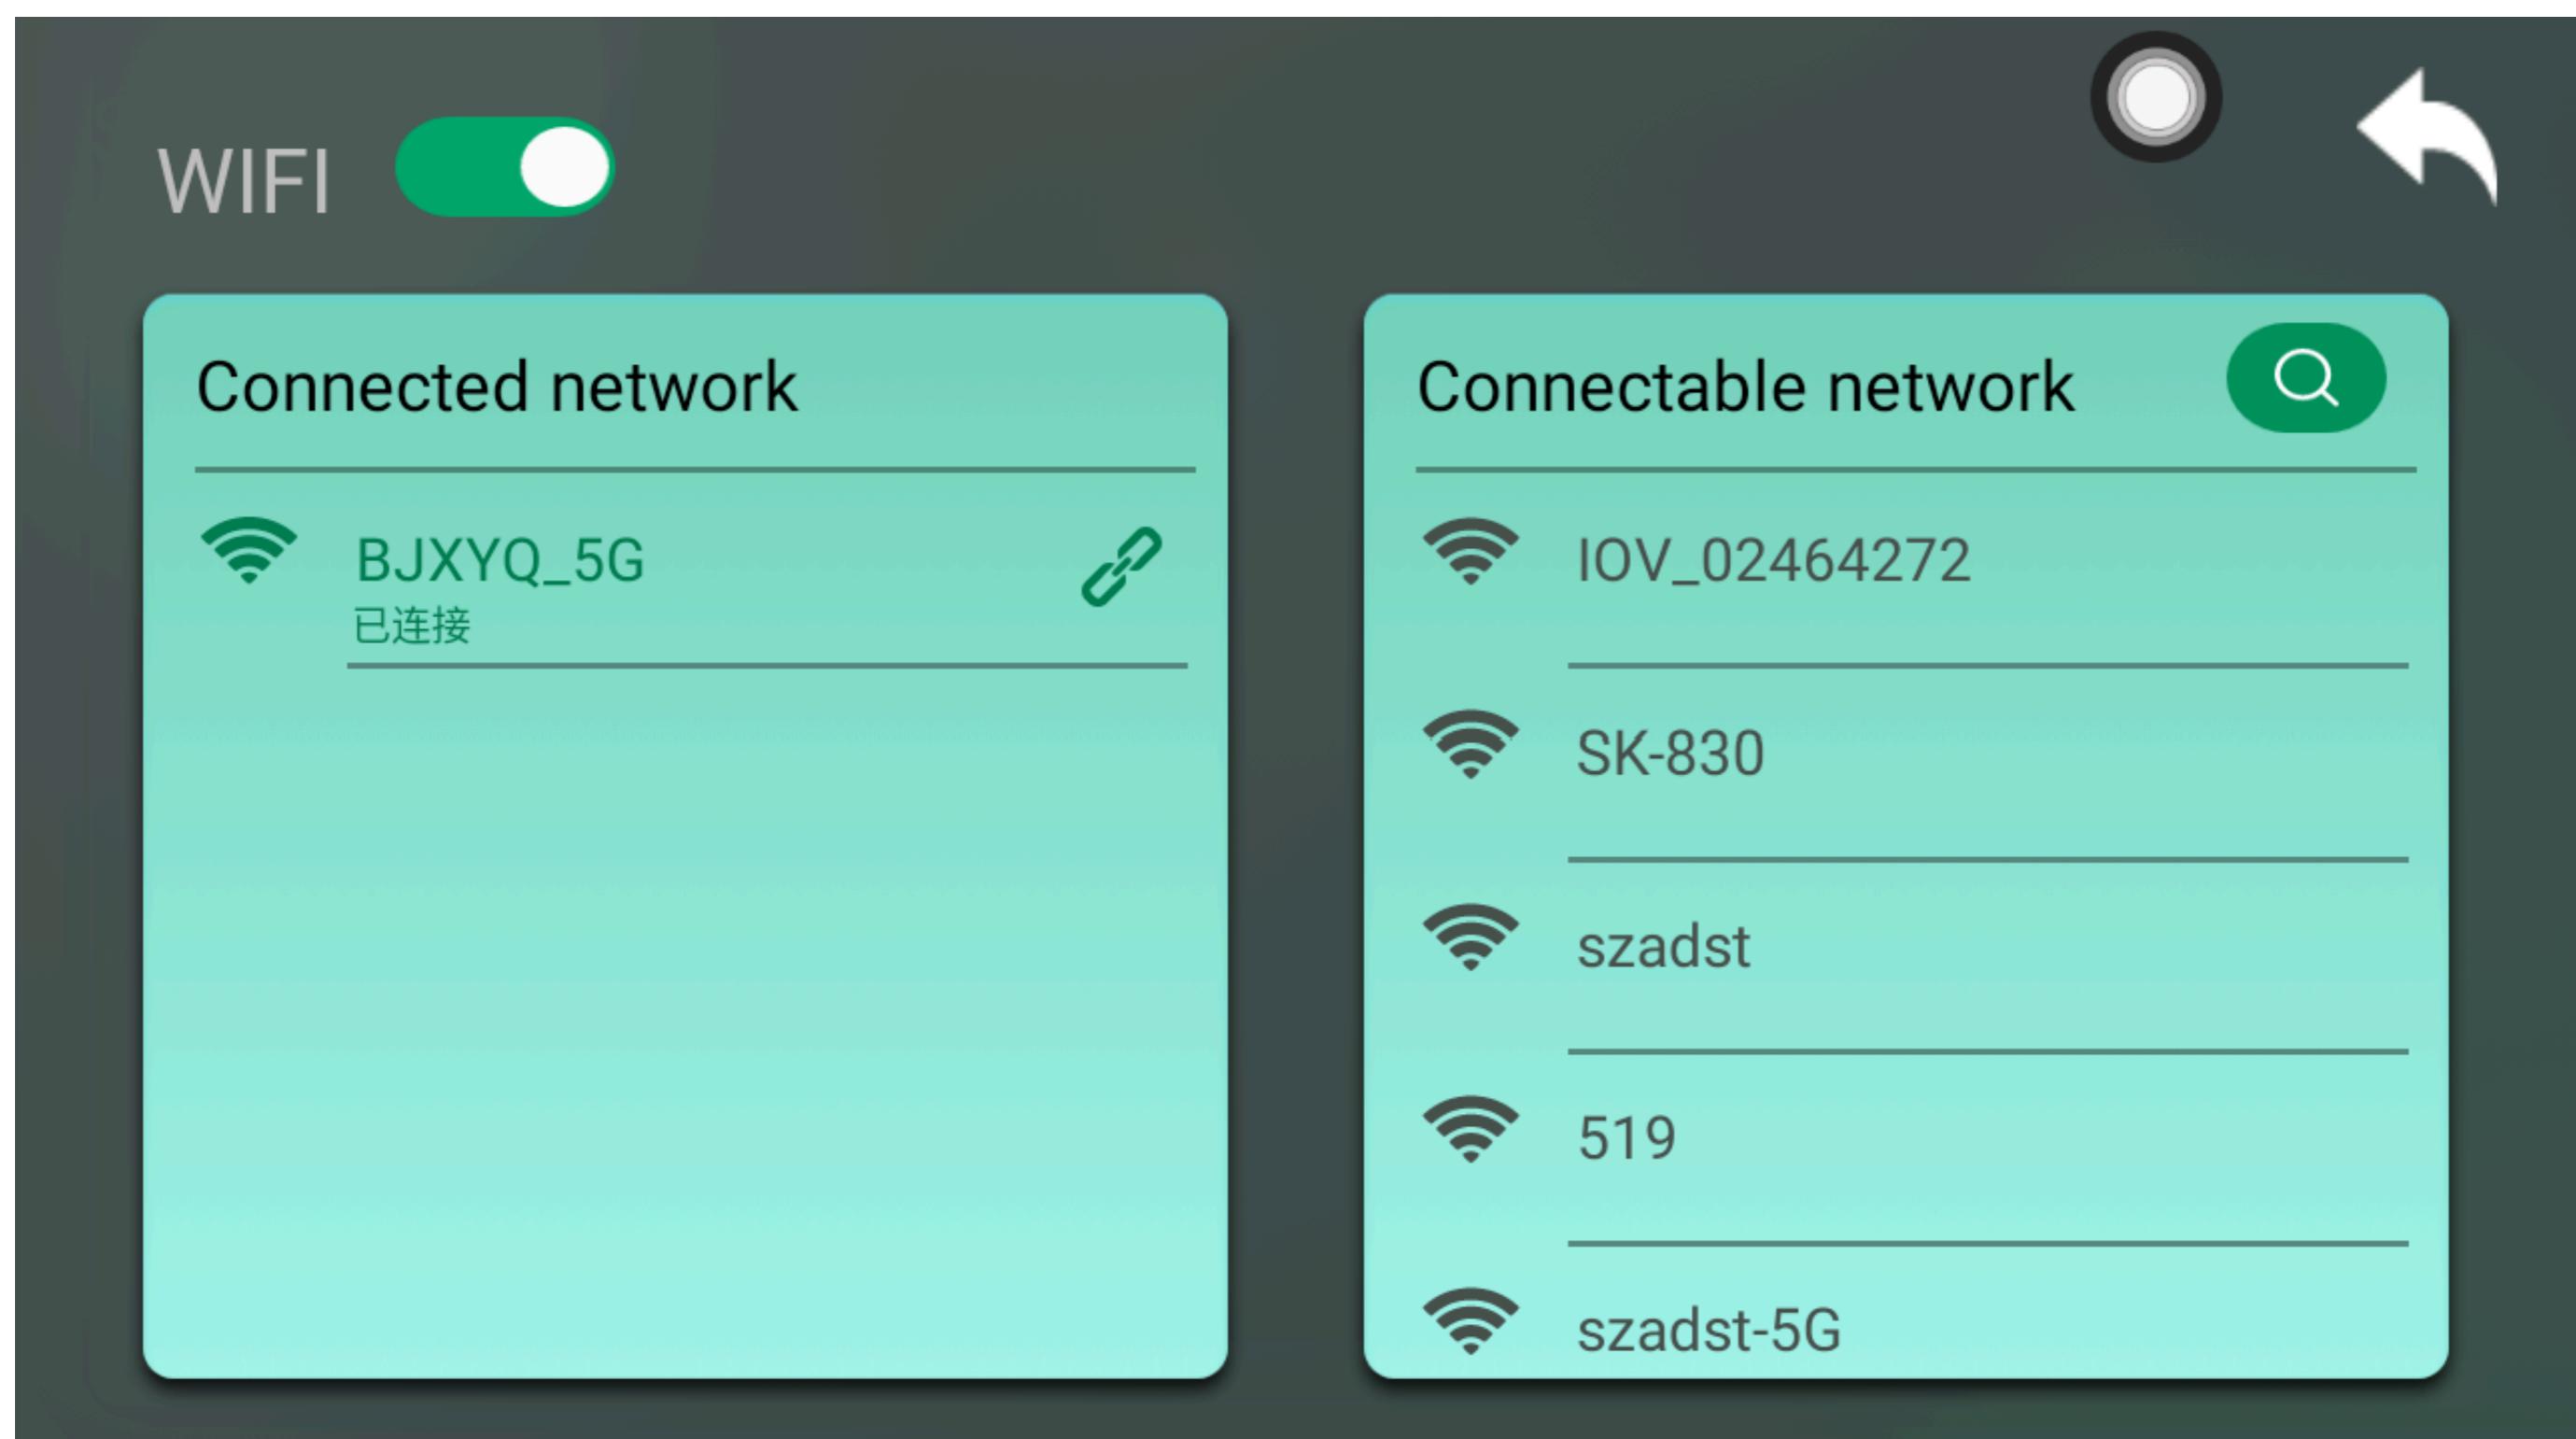

Bluetooth Mobile Phone Connection

Click the  Bluetooth mobile phone connection key to enter the Bluetooth connection interface, as shown below.

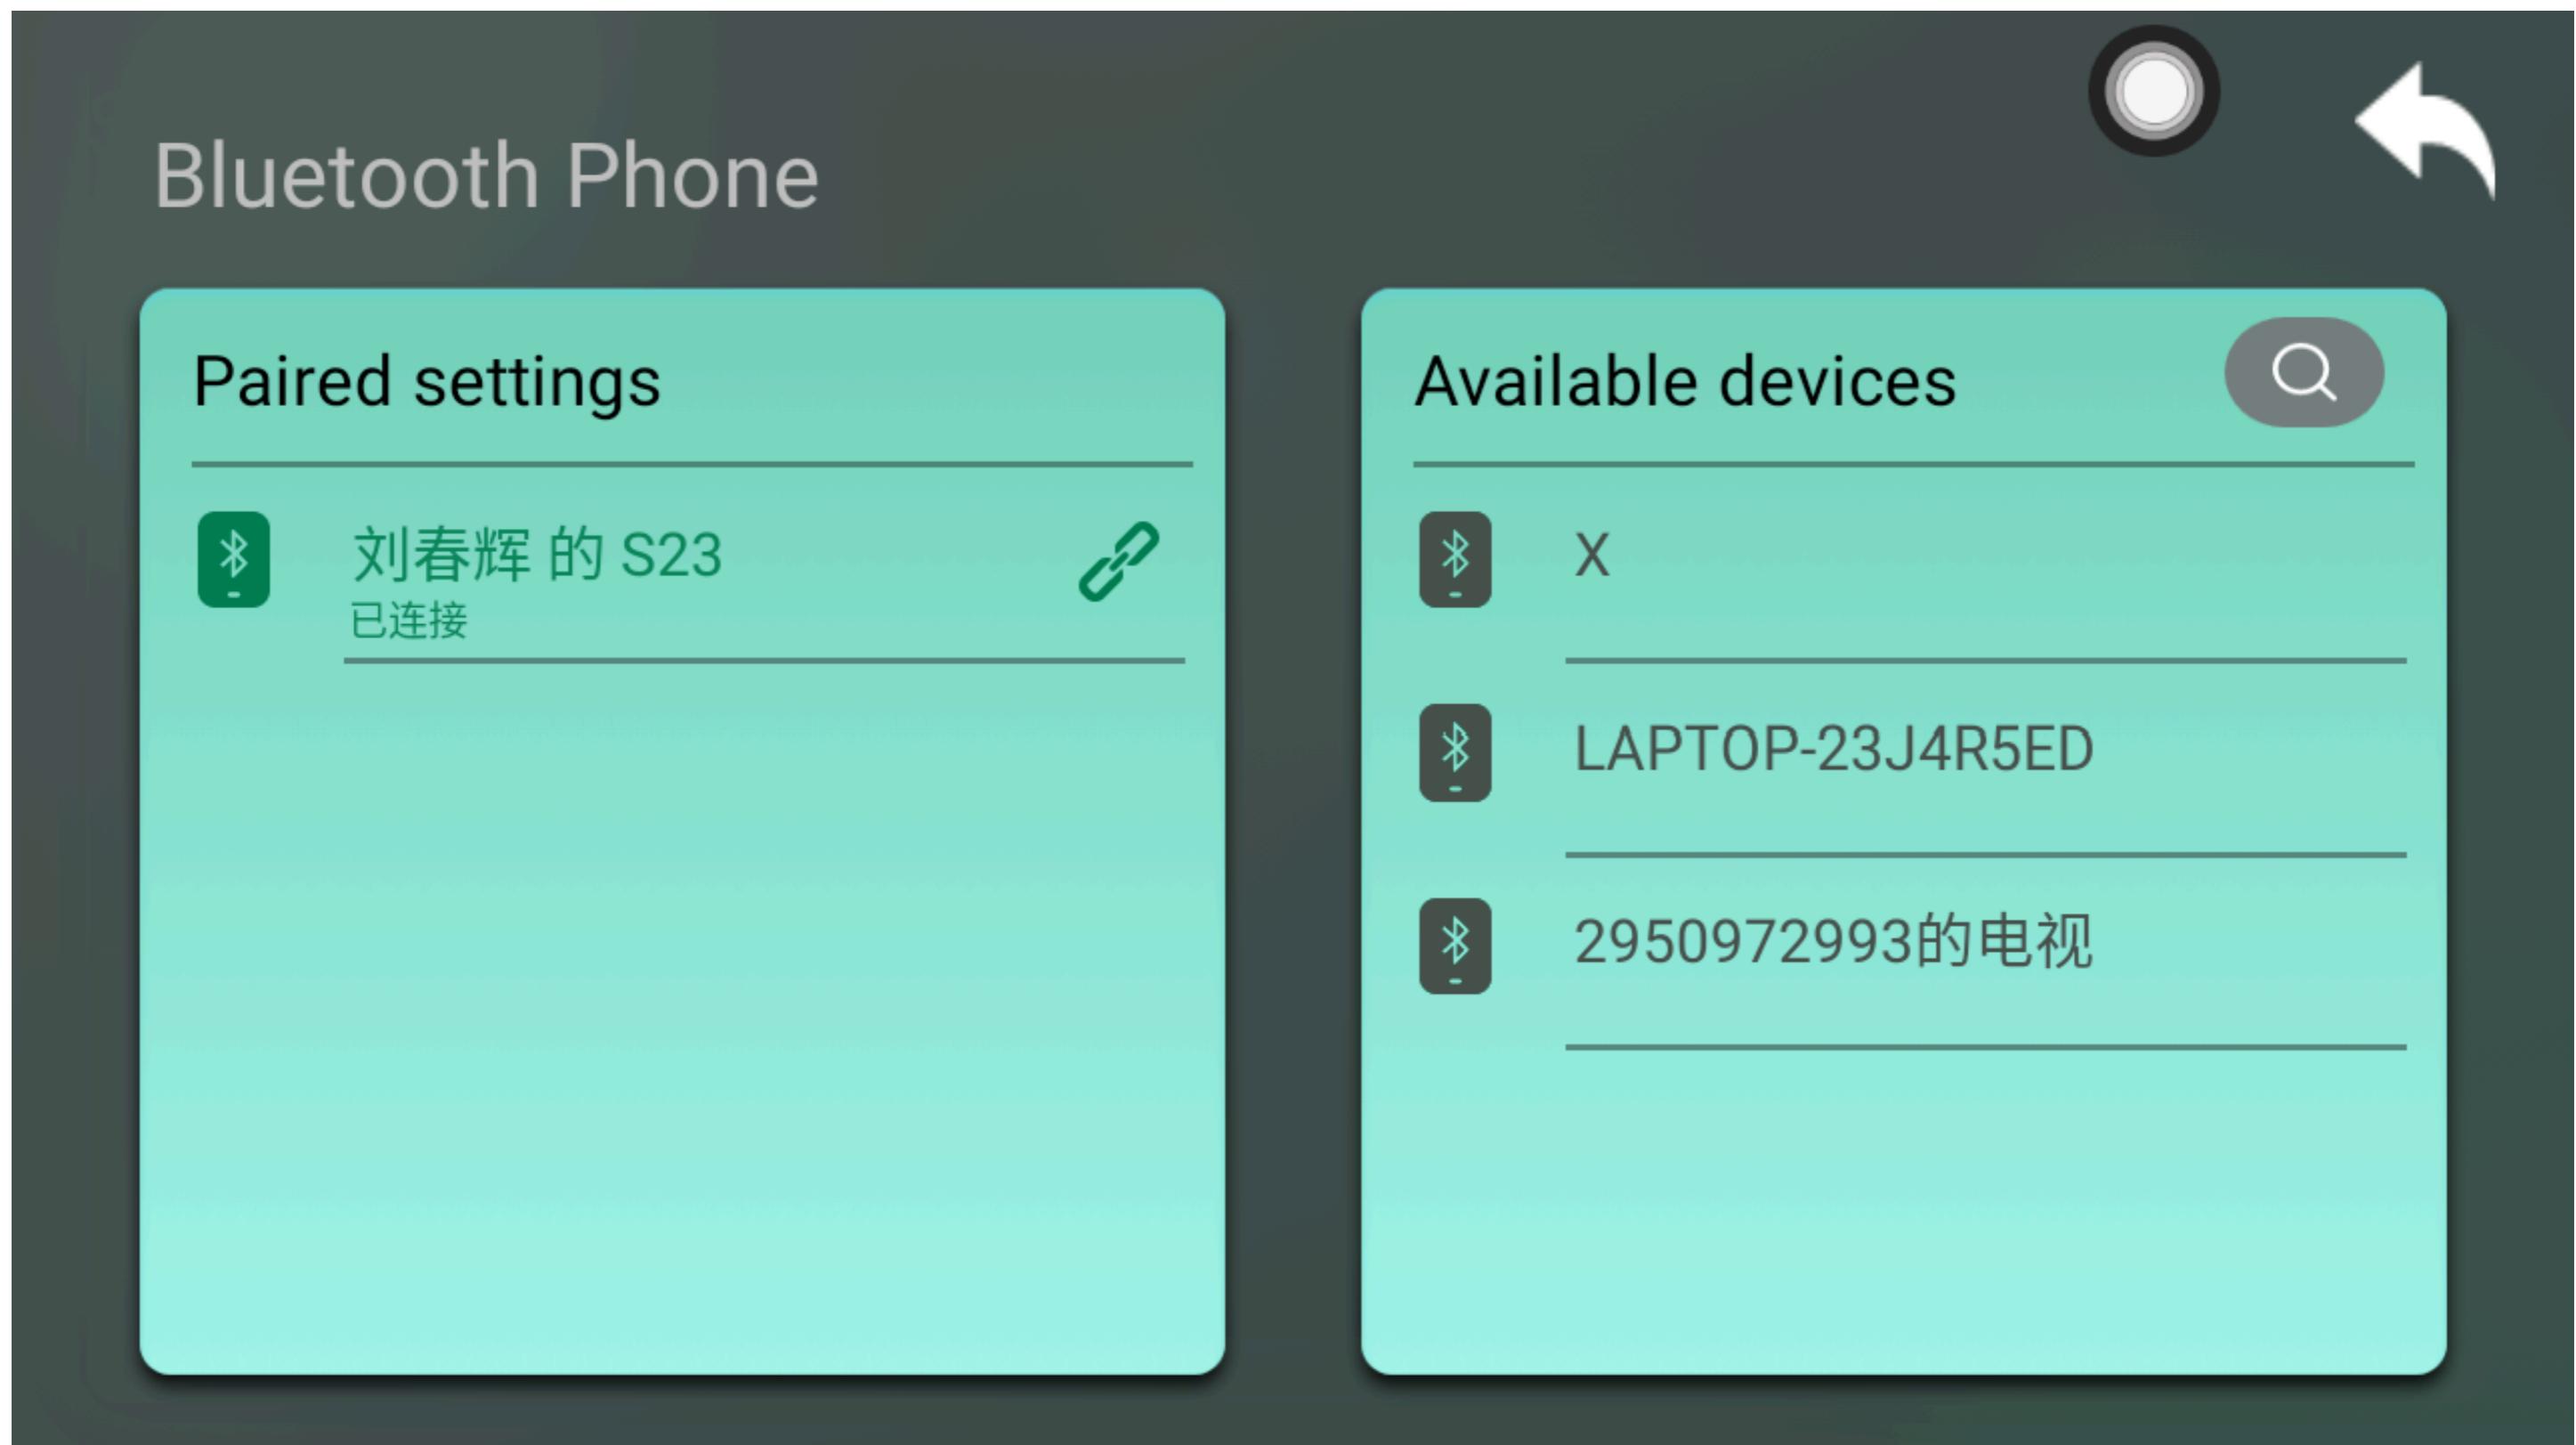


- 1. Turn on the connected device.**
- 2. Turn on the mobile phone's Bluetooth (on/off).**
- 3. Click the "Search" button.**
- 4. Select the Bluetooth mobile phone name to complete the pairing.**

Note: You can also directly use the mobile phone to search for the device. The device name is: Absolute Rider.

User Settings

Bluetooth Earphone Connection

Click the  Bluetooth headset connection key to enter the Bluetooth connection interface, as shown below.

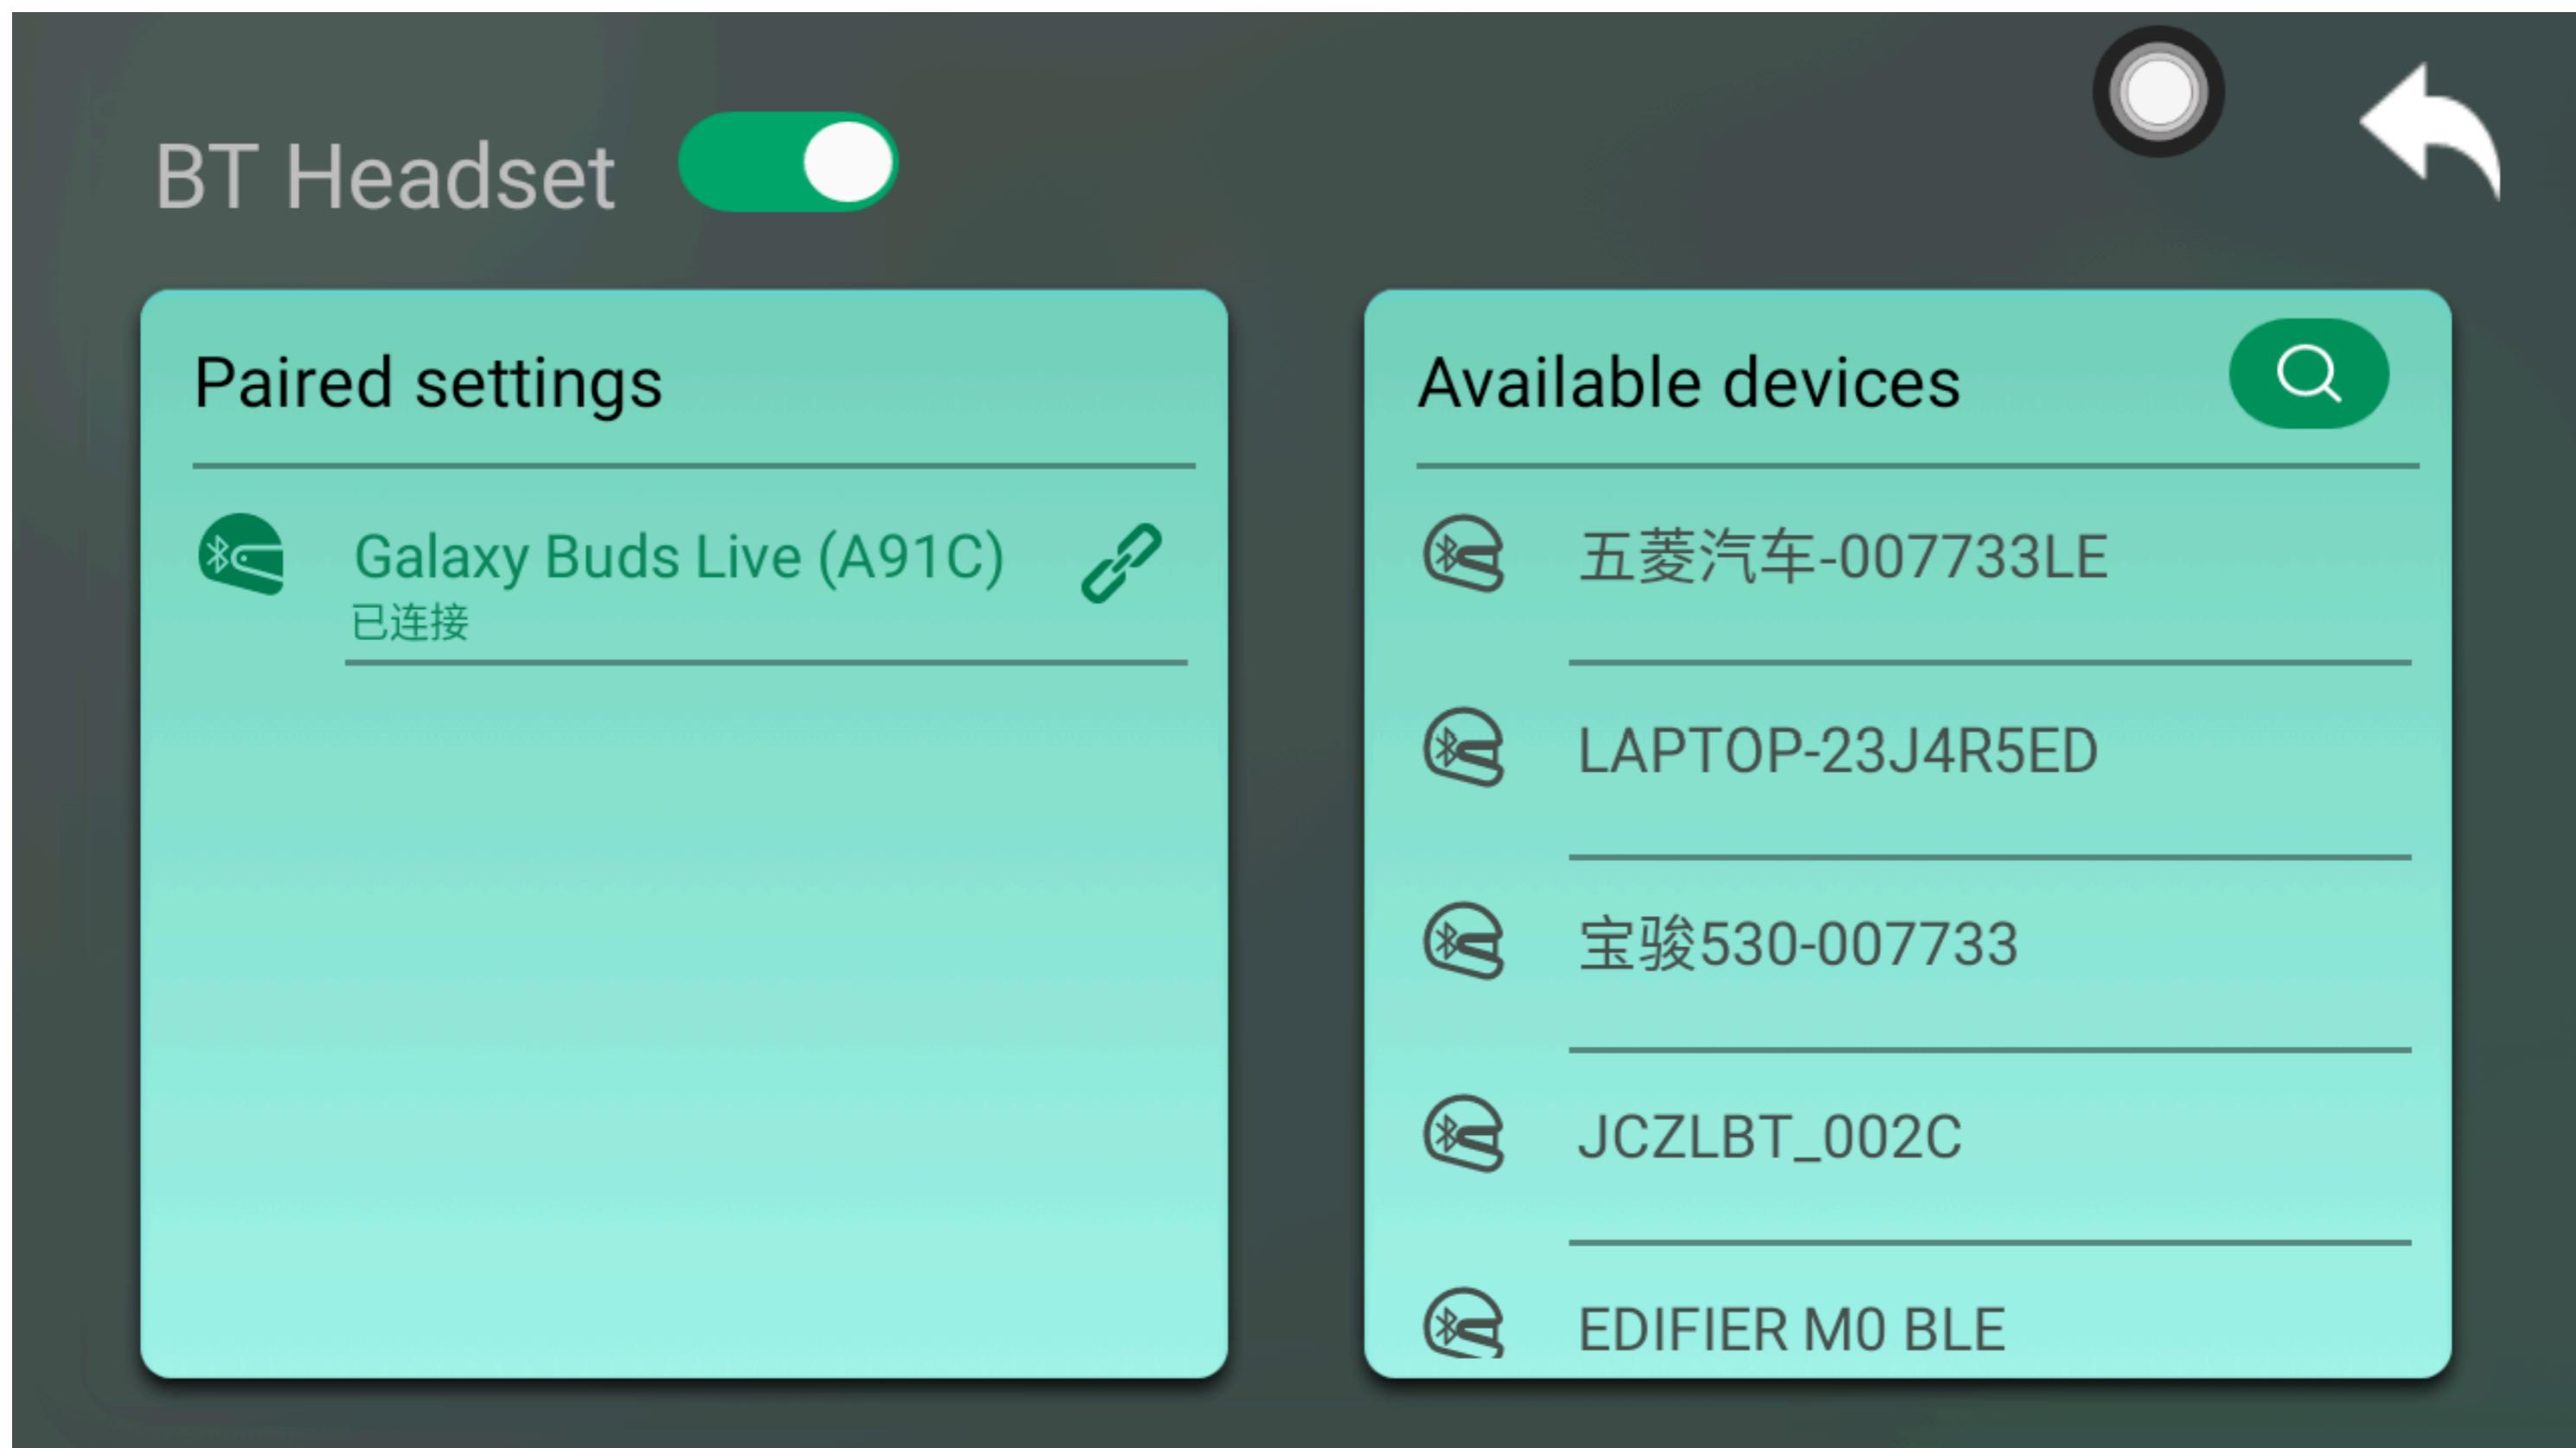

1. Turn on the connecting device.
2. Turn the mobile phone's Bluetooth on or off.
3. Click the "Search" button.
4. Select the name of the Bluetooth earphone to complete the pairing.


Note: The Bluetooth earphones should be in pairing mode.


User Settings

MODE Settings

Click the  MODE Button Settings key settings button to enter the function menu, as shown below.

(Users can customize the MODE function menu buttons according to personal preferences)

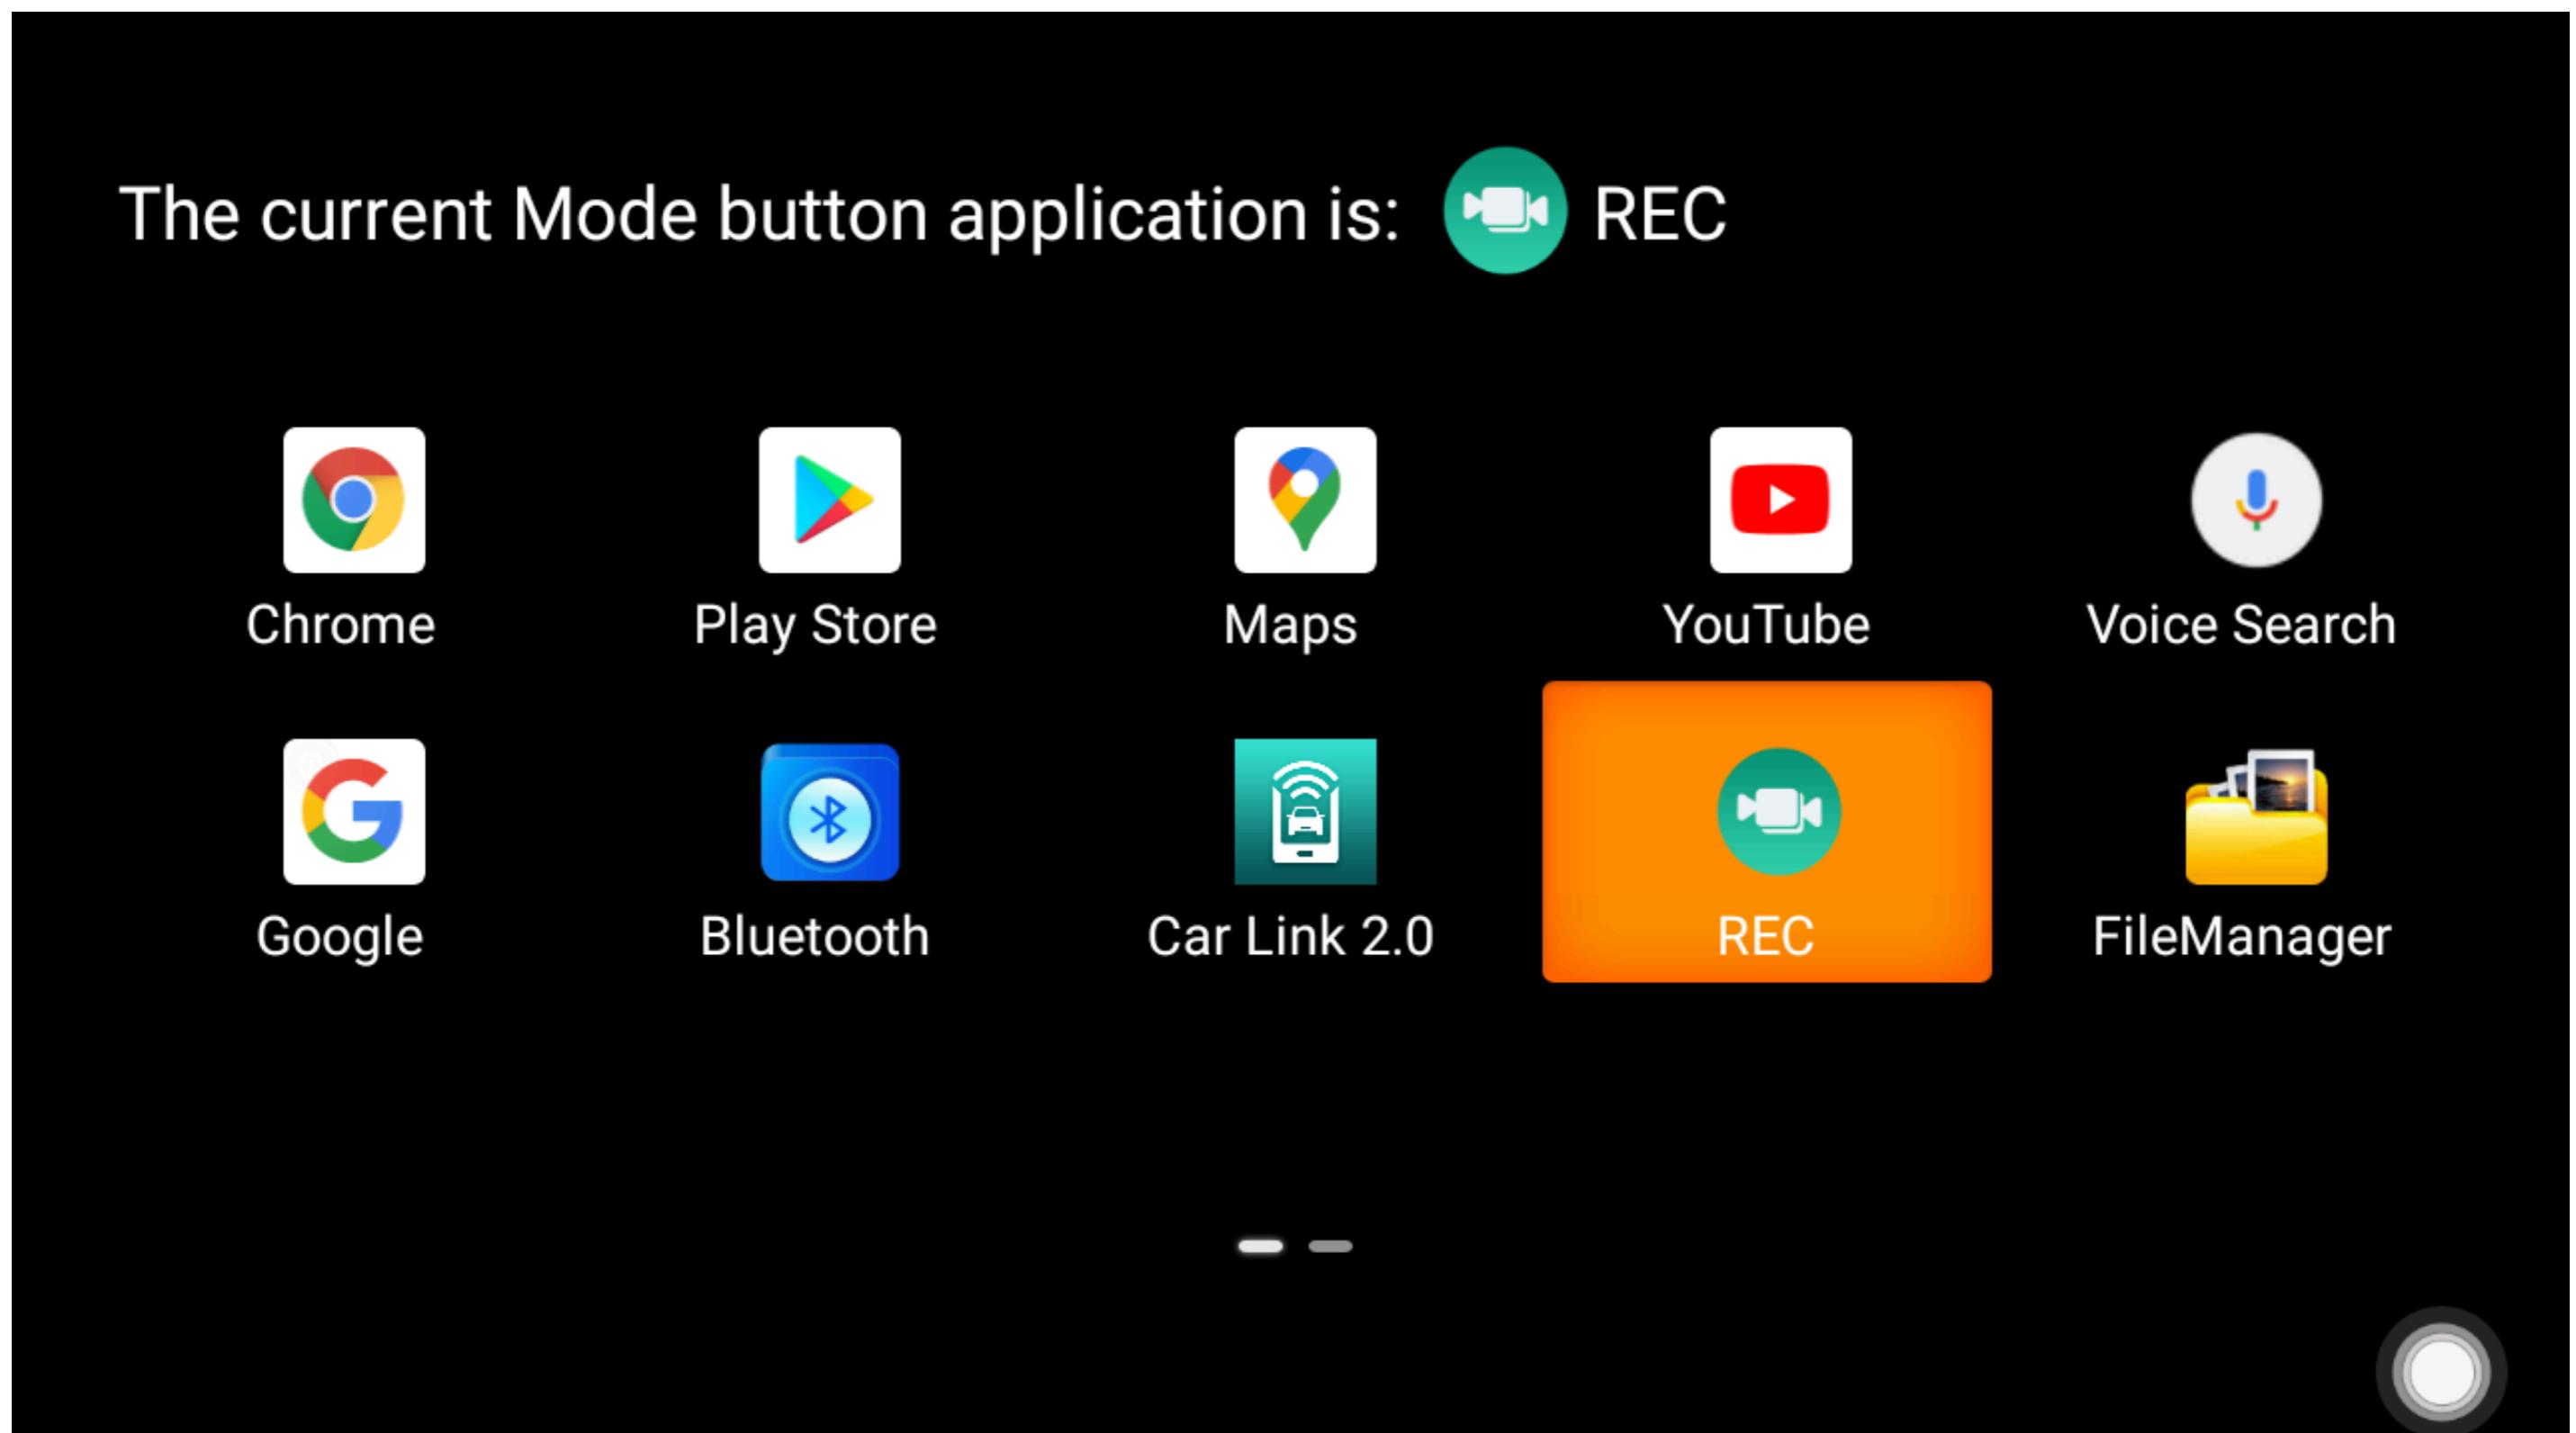


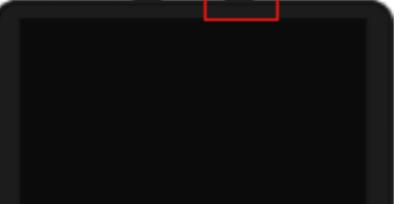
Click the key on the upper right side of the main unit  and you can use the custom function.



User Settings

MODE Settings

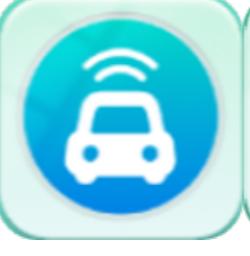Long press the key   on the right side of the main interface. The application pop-up window will appear, as shown below.

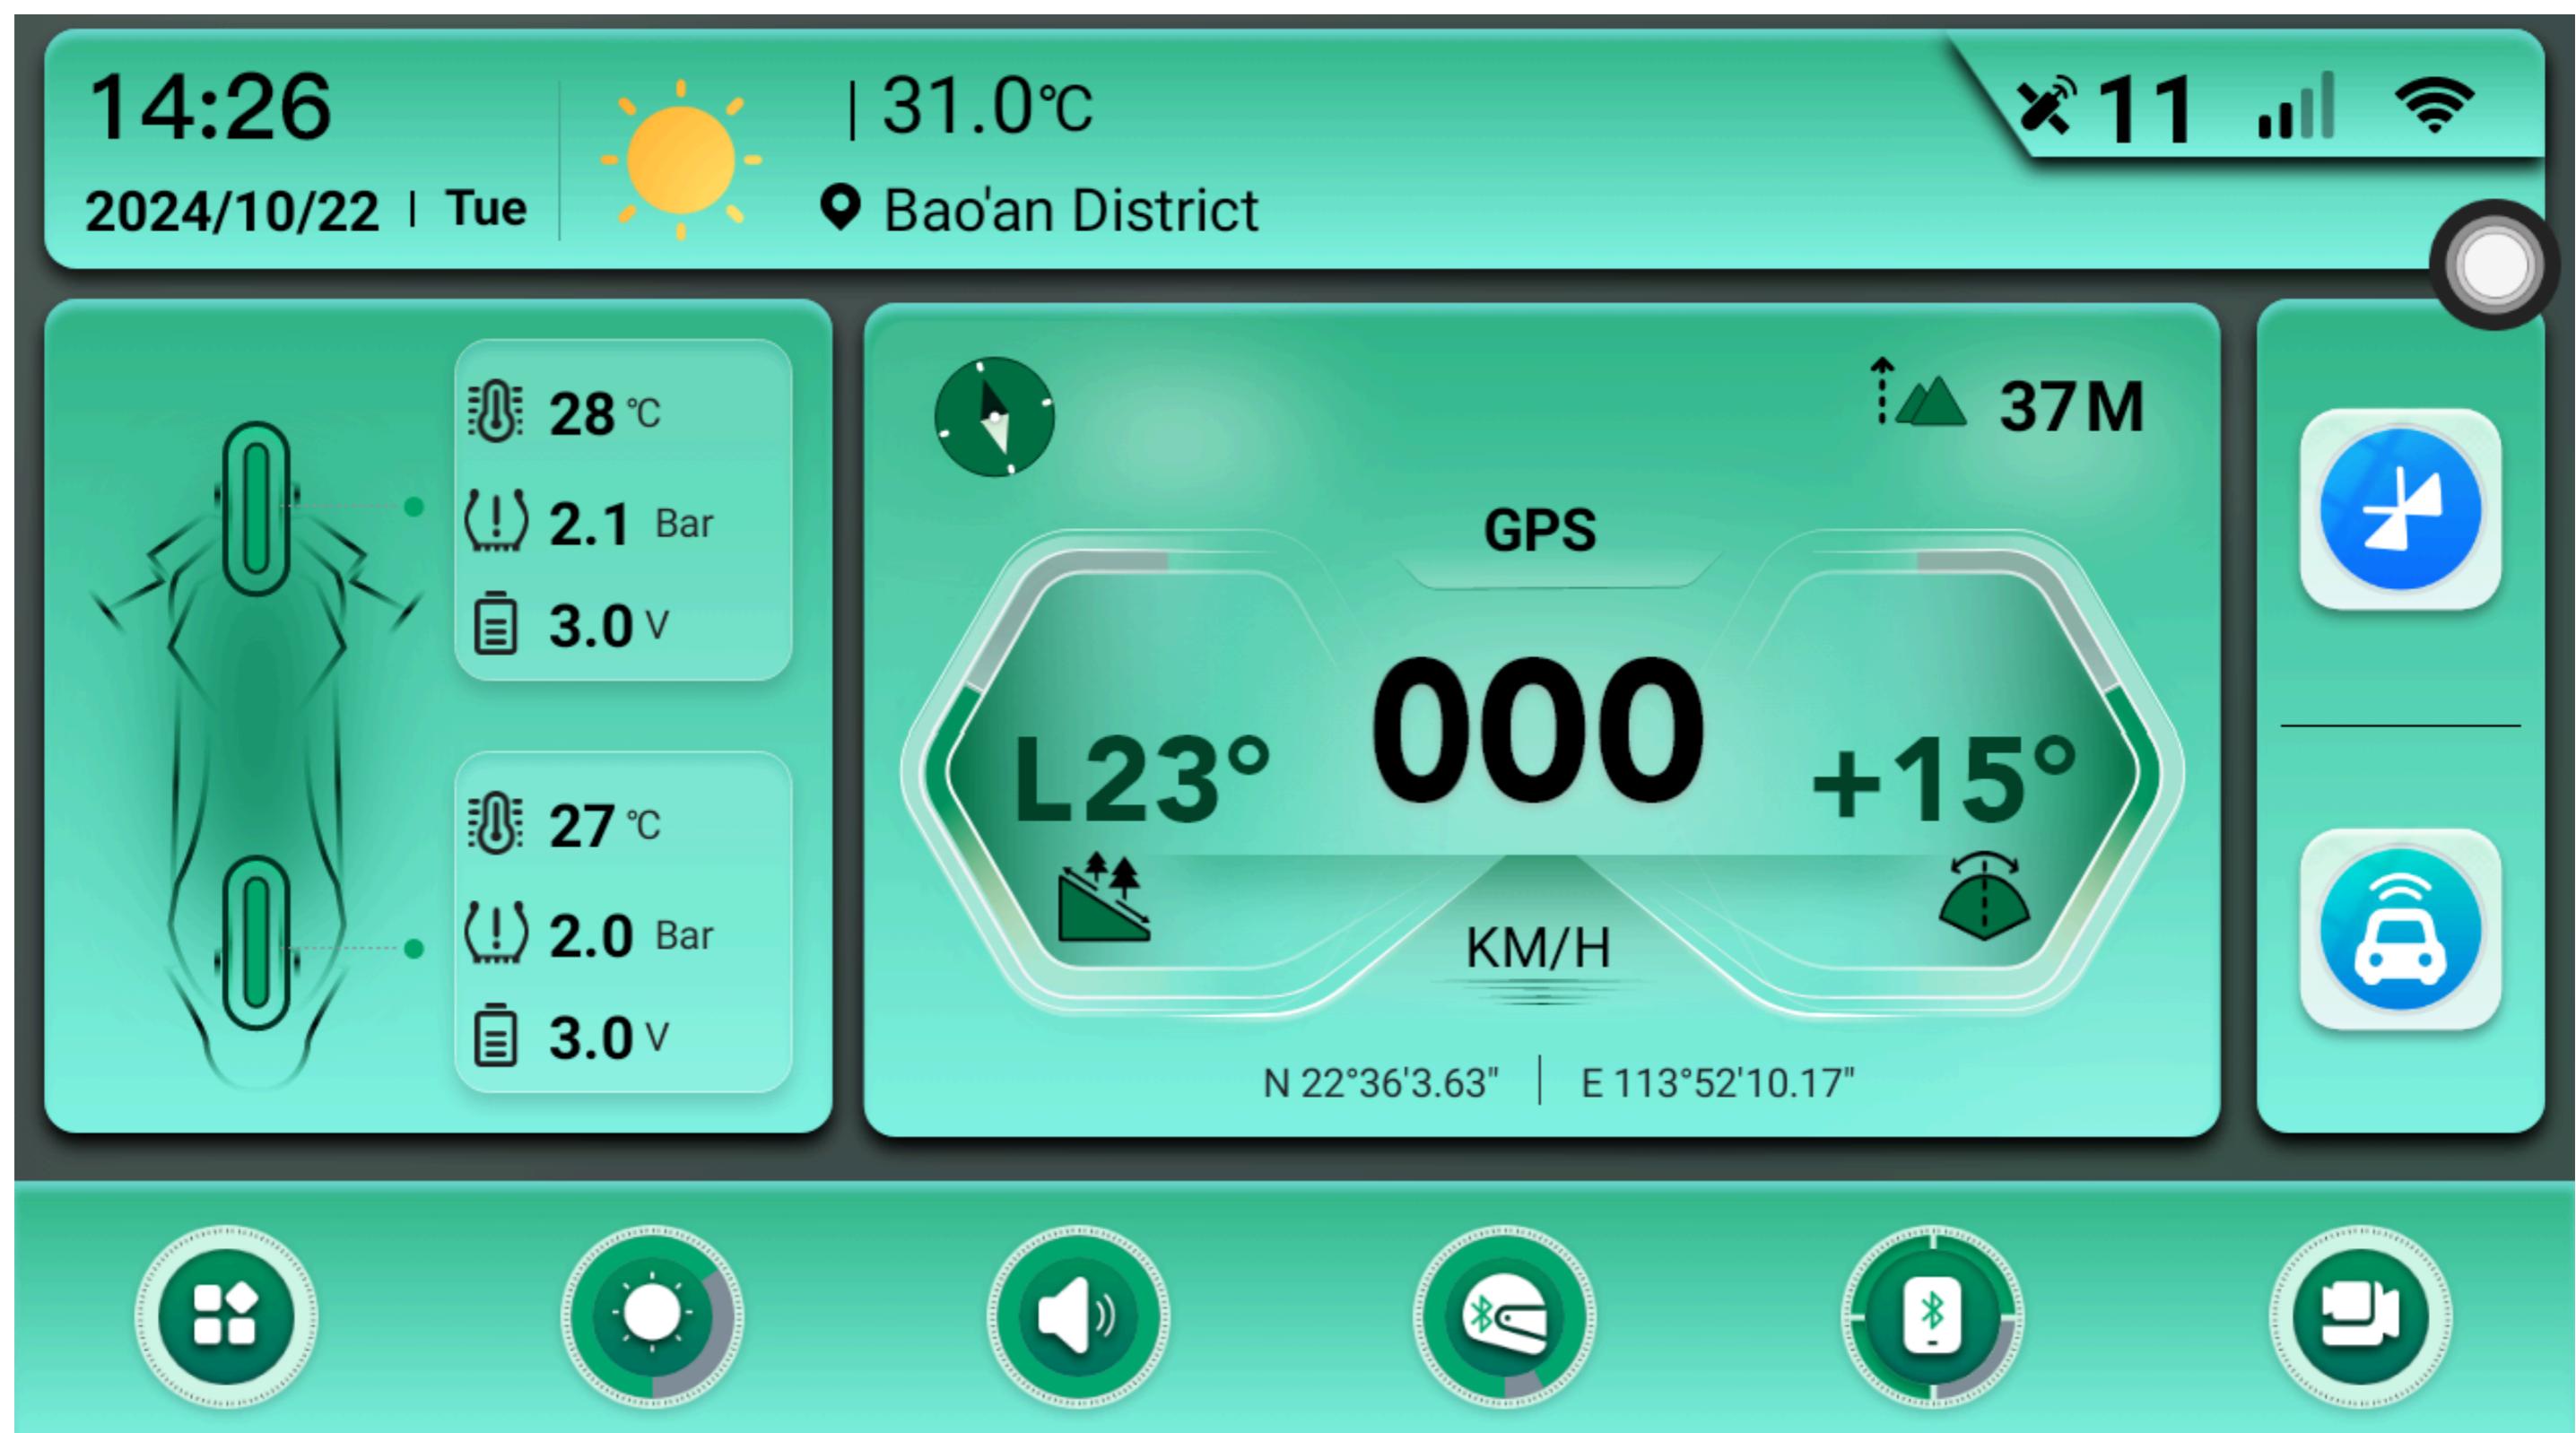

About Cleaning



Attention

Turn off power before cleaning the main unit.
Otherwise, there's a risk of electric shock, injury or damage to the equipment.

Avoid using alcohol, detergents, or thinners to clean this product.

Otherwise, it may cause malfunction, damage, or discoloration of parts.

- For dirt and dust on the main unit, wipe with a soft, dry cloth or a brush.

Regular Inspection

The product may wear out over time. Please conduct regular inspections. If the following symptoms are found, stop using the product immediately.

- The power cord or the main unit is abnormally hot.
- A part of the power cord is broken or the internal wires are exposed.
- There is an unusual smell during use.
- Strange noises are emitted during use.

FCC Warning Language

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

***RF warning for Mobile device:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Warranty Instructions

1

The Absolute Rider products you purchased come with a one - year (calculated from the date of purchase) warranty service.

2

To enjoy the warranty service smoothly, please keep the initial product warranty card and the original purchase voucher properly.

3

During the product warranty period, we provide consumers with free maintenance. For problems outside the warranty scope or beyond the warranty period, Absolute Rider can still provide maintenance services, but corresponding maintenance fees will be charged according to specific situations.

4

Please note that the following situations are not covered by this warranty service:

1. Damage caused by personal negligence, accidents or improper use.
2. Use of parts not provided by the Absolute Rider brand.
3. The product does not match the purchase voucher, or there are cases where the machine serial number, purchase voucher are tampered with or forged.
4. Unauthorized modification of the product by oneself or entrusting it to a non - Absolute Rider brand for repair.

5

If there are any product maintenance problems, please contact the official customer service.

6

For products that have been discontinued, Absolute Rider has the right to replace them with other products without affecting the use.

7

After replacement or maintenance of the product, the date of enjoying the warranty service is still calculated from the original date of purchase.

- Absolute Rider reserves the final right of interpretation.