


JUGBOW

Model

DT-54

Dog Training Collar

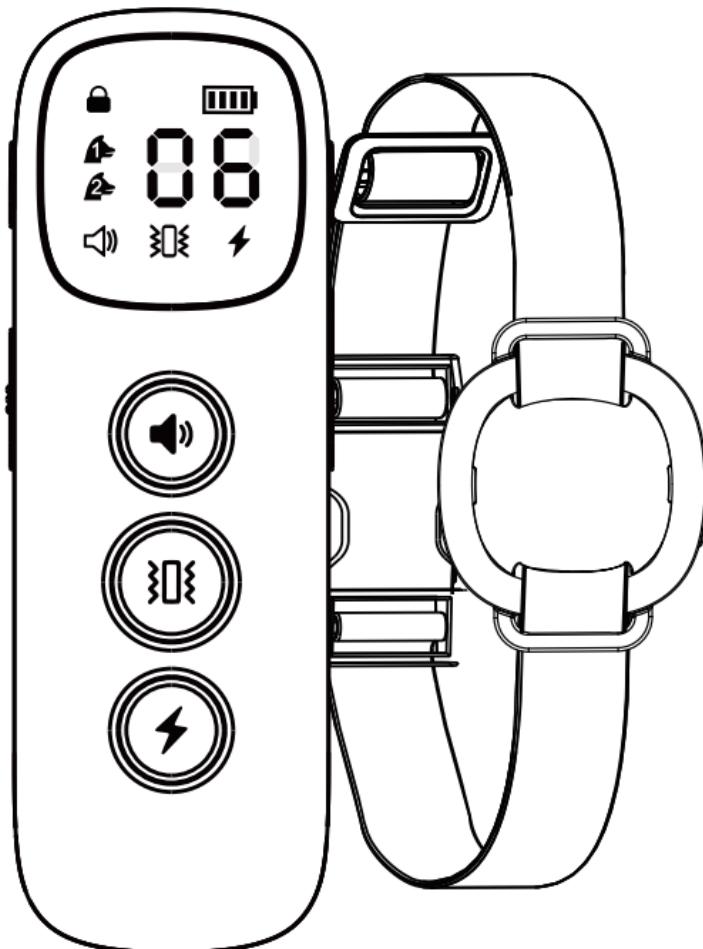

Owner's Manual

Please read this manual carefully before using the e-collar.

START TRAINING YOUR DOG!

Step 1: Register Your Warranty

- ① Visit jugbow.com/warranty/ or scan the QR code.



Step 2: Watch Training Video

- ① Scan the QR code→Help→video tutorial.

Step 3: Begin Correct E-Collar Training

- ① Ensure the collar is snugly fitted around the dog's neck with a two-finger gap.
- ② Begin at the lowest stimulation level.
- ③ Watch your dog's reaction and adjust slowly.

Contact Us

 service@jugbow.com

 tkservice@jugbow.com

 jugbowofficial@jugbow.com

Important Safety Information

WARNING

If your dog shows signs of aggressive behavior (e.g., unprovoked attacks on people or other animals), consult a professional trainer or veterinarian before using the shock function. Some dogs may react with heightened stress or redirected aggression in tense situations. Please use this product with caution and closely monitor your dog's response during use.

PROPER FIT GUIDELINES

To prevent injury, read the user manual before use. An improperly fitted collar may lead to skin irritation or pressure ulcers.

- Do not leave the receiver on your dog for more than 12 hours per day.
- Reposition the receiver every 1–2 hours when possible.
- Check collar tightness regularly to avoid excessive pressure.
- Never attach a leash to the electronic collar to avoid pressure on the contact points.

Important Safety Information

CAUTION

- If using a separate collar for walking, ensure it doesn't press against the electronic collar.
- Clean your dog's neck and the contact points weekly with a damp cloth.
- Inspect the contact area daily for redness or sores.
- If irritation is found, stop using the collar until the skin has healed.
- Do not use a charger with output above 5V/1A.
- Avoid contact with metal during charging to prevent short circuits.
- Ensure safety during leash training.
- Use a strong leash—long enough for movement, but short enough to avoid danger (e.g., roads).
- Handlers should be strong enough to restrain the dog if needed.
- This is a training tool, not a toy. Keep away from children.


Contents

1. Packing List	01
2. Overview	02
3. Charging the Batteries	04
4. Turning the E-Collar On/Off	05
5. Stimulation Modes and Levels	06
6. Using the Test Light	08
7. Training Collar Fitting & Safety Instructions	10
8. Finding the Right Stimulation Level	13
9. LED Indicator Guide	14
10. Using Channel 2 for a Second Receiver	16
11. Troubleshooting	19
12. FCC Statement	22
13. Terms of Use & Limitation of Liability	23
14. Regarding you and the product	24
15. Regarding the well-being of your dog	24
16. Operating Environment & Maintenance	25
17. Warranty and repair information	27

1. Packing List




① Transmitter

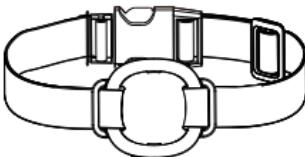

② Receiver



③ Hand Strap

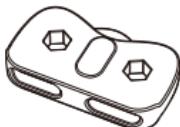

④ Test Light Tool




⑤ Contact Point



⑥ Conductivey
Silicone Cap



⑦ Bowknot
(only PRO model)

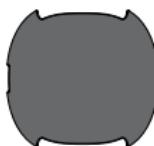

⑧ Electroplated cover



⑨ Prying tool



⑩ Charging Cable





⑪ User Manual





⑫ Quick Manual

2. Overview

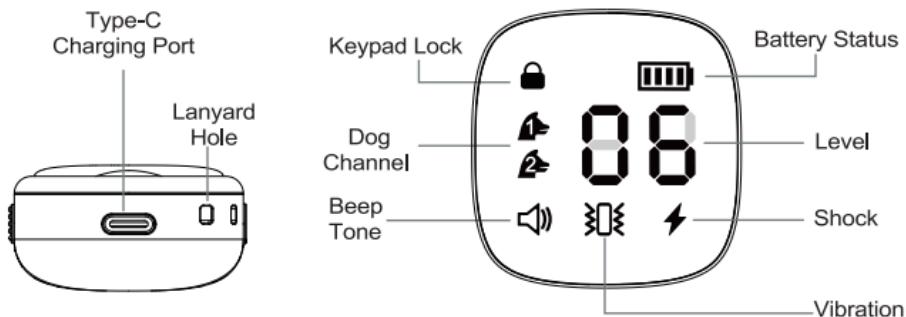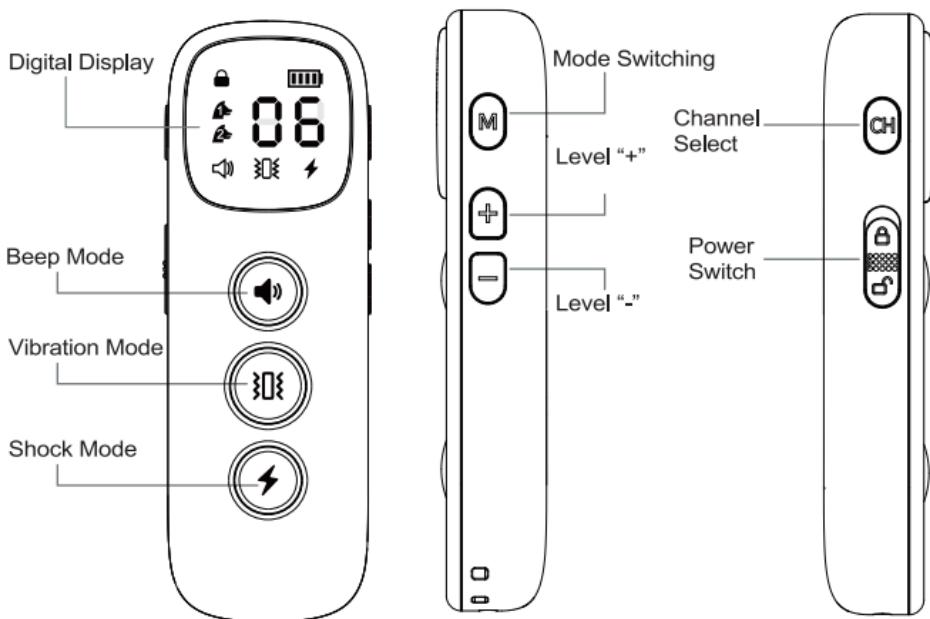

2. Overview

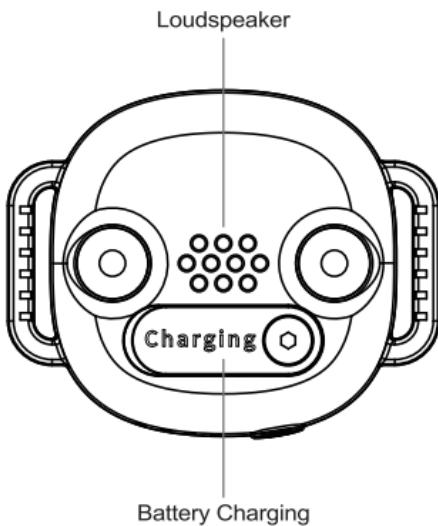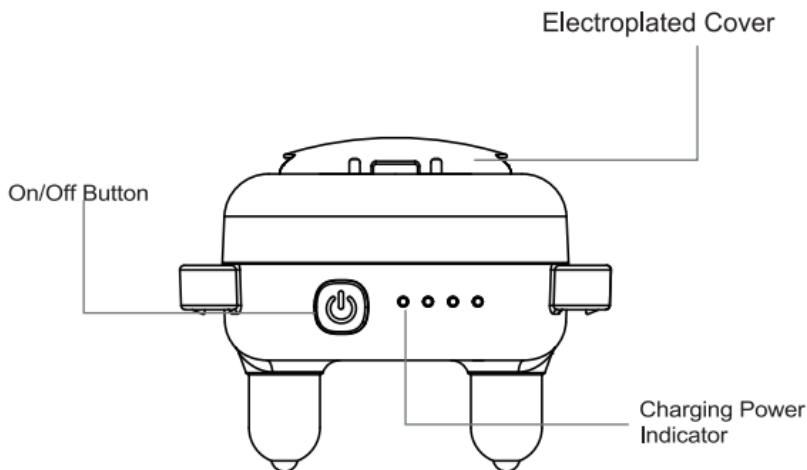


3. Charging the Batteries

Please follow the steps below to charge your e-collar:


1




2

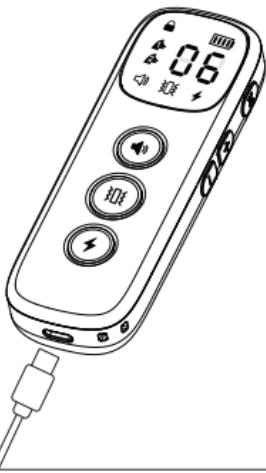

3

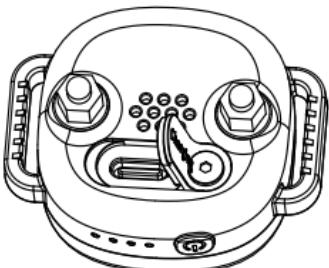

4

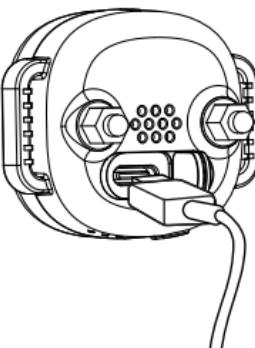

4. Turning the E-Collar On/Off


1. Turning the Transmitter On/Off

① TURN ON:

Slide the switch from "lock"() to "Unlock"().

② TURN OFF:


Slide the switch from "Unlock"() to "Lock"().

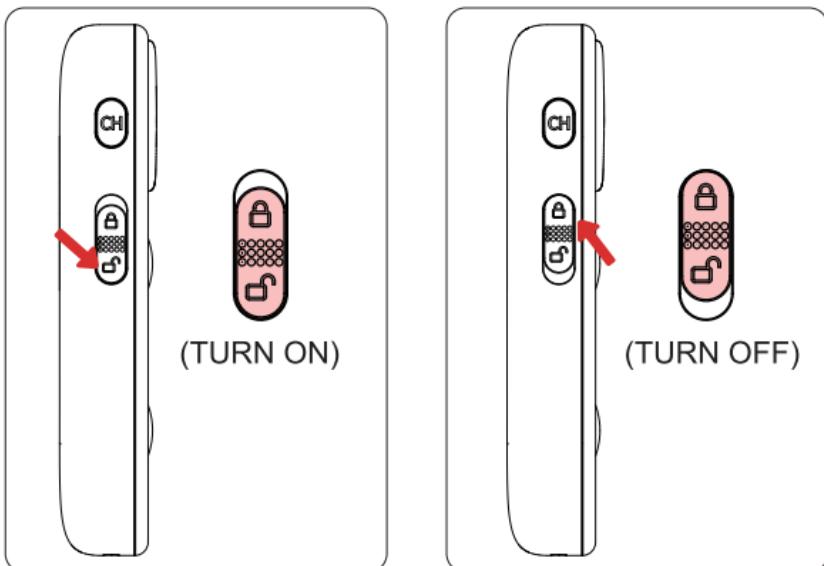

2. Turning the Receiver On/Off


- ① **TURN ON:** Short press the power button.
- ② **TURN OFF:** Long press the power button for 6 seconds until the red light turns on and the device vibrates briefly.

Short press

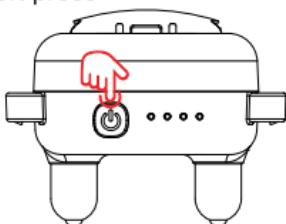

(TURN ON)

Hold for 6s

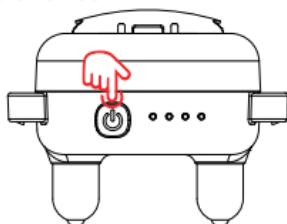


(TURN OFF)

5. Stimulation Modes and Levels

1. Switching Stimulation Modes

Press the MODE button to cycle through the three modes.

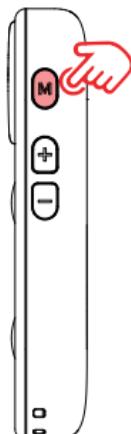

Shock



Vibration




Beep

2. Adjust the level



Press the “+” button to increase the level.

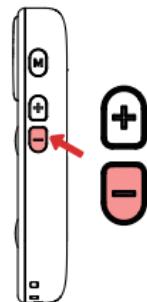


Press the “-” button to decrease the level.

3. Stimulation Range (0–16)

The shock level ranges from 0 (lowest) to 16 (highest).

Level 00 delivers no shock.

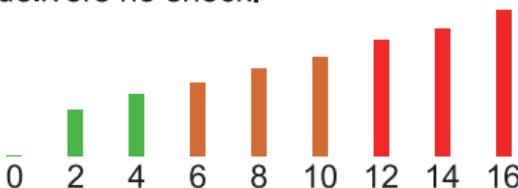

4. Vibration Intensity Levels (1–3)

There are 3 vibration levels, with increasing motor speed at each level.

Level 1 = gentle buzz → Level 3 = strong vibration.



5. Beep Sound Levels (F1–F9)

There are 3 beep levels, with the tone frequency increasing at each level.

Level 1 = low-pitched tone → Level 9 = high-pitched tone.




6. Using the Test Light

1. Checking Shock Function

1. Make sure the Remote and Receiver are power on.
2. Hold the Test Light on the contact points and press the shock button.

If the light flashes briefly, the shock function is working.

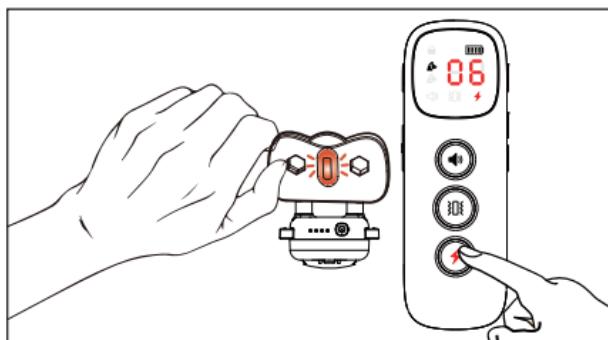

⚠ If the Test Light does not flash:





- Check that the contact points are installed properly
- Try increasing the shock level.
- Test the vibration or beep function.
 - If they work, the shock feature may be faulty
 - If none work, re-pair the device

⚠ Do not use one finger to test the shock


- Shock won't work unless both contact points touch the skin.

2. Used as a Tool to Tighten or Loosen the Contact Points

- Attach the conductive silicone cover to the contact points to make them softer. This may be more comfortable for your dog's skin.

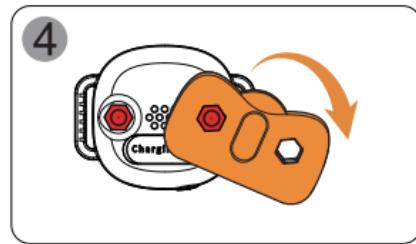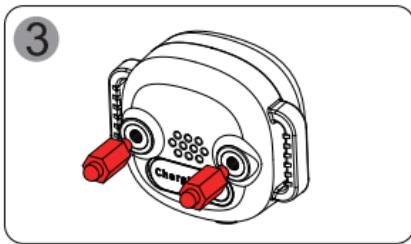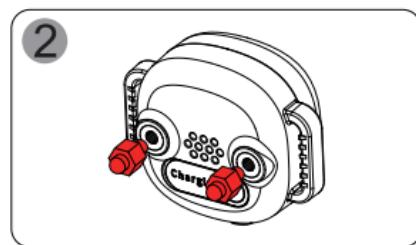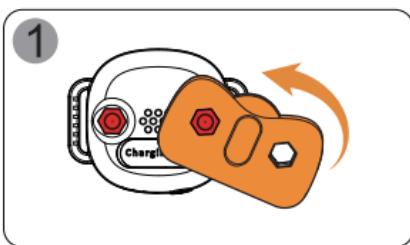

5

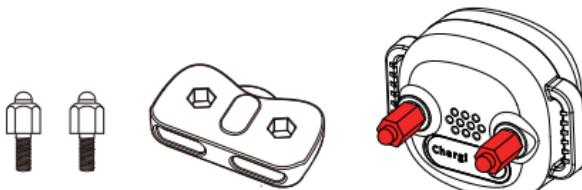


7. Training Collar Fitting & Safety Instructions

To ensure effective training and your dog's comfort, follow these guidelines for properly fitting and using the training collar.

1. Proper Fit and Adjustment


- The contact points must make direct contact with the skin to effectively deliver stimulation or vibration.
- Avoid placing the collar on the thickest fur areas. If your dog has dense fur, trim a small section to improve contact.
- **Optimal positioning:** The receiver should be placed on either side of the dog's windpipe, rather than the center, to reduce pressure on the throat.

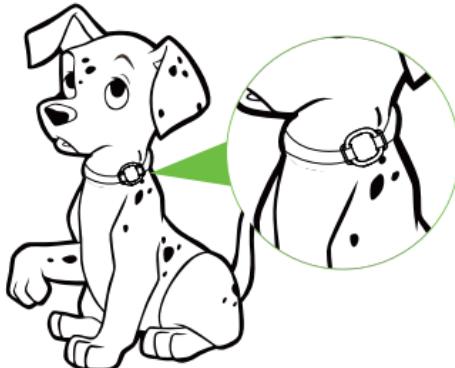

2. Adjusting the Collar Fit

- The collar should be snug but allow room for two fingers between the strap and the dog's neck (one finger for small breeds).
- **Too loose:** The receiver may shift, causing inconsistent stimulation and potential skin irritation from chafing.
- **Too tight:** May cause discomfort, restrict blood circulation, or lead to pressure sores.

Fit test: After securing the collar, slide two fingers underneath the strap. If they fit comfortably, the collar is properly adjusted.

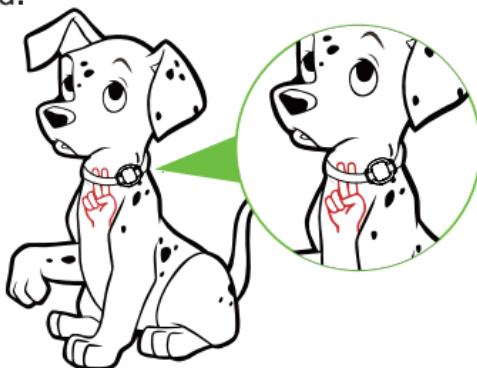

3. Recommended Wearing Time

- Check your dog's skin condition before and after each use. If you notice redness, irritation, or discomfort, remove the collar immediately and discontinue use until the skin has fully healed.

- Use the collar only during training sessions to avoid prolonged skin contact that may cause irritation.
- Do not exceed 8-10 hours of daily wear to prevent pressure-related discomfort from prolonged contact with the contact points.
- If extended wear is necessary, reposition the collar every 1-2 hours to prevent the contact points from continuously pressing on the same area, reducing the risk of localized skin irritation.
- Remove the collar during sleep to allow the skin time to recover and minimize the risk of discomfort or pressure sores.

4. Additional Considerations

For dogs with different fur types:

- Short-haired & Long-haired breeds: If the factory-installed short contact points do not make sufficient contact, please using longer contact points.
- If your dog develops redness or irritation, immediately remove the collar and discontinue use until the skin has fully healed.

8. Finding the Right Stimulation Level

1. How to Adjust



Press the “+” button to increase the level



Press the “-” button to decrease the level

2. Set the Right Stimulation Level

1. Start from level 01.
2. Slowly increase the stimulation level.
3. Observe your dog's response:

TOO LOW



No Response

JUST RIGHT



Slight Reaction

TOO HIGH



Overreacting

These subtle responses usually indicate the correct stimulation level. If your dog becomes more excited or distracted during training, you may need to readjust the level accordingly.

! **Note:** Never begin with high levels. Always use the lowest level that gets your dog's attention.

9. LED Indicator Guide

Transmitter LED Indicator

Charging Status




During charging, the battery icon on the screen will increase gradually



When fully charged, the icon displays 4 bars, and the LED shows a solid green light


Receiver LED Indicator Battery Status

Battery Status (LED blinks every 10 seconds)

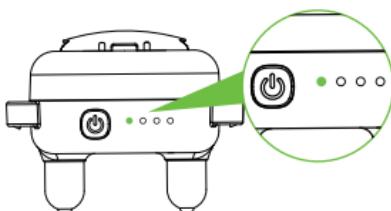

- **Green blink:**


Battery is sufficient

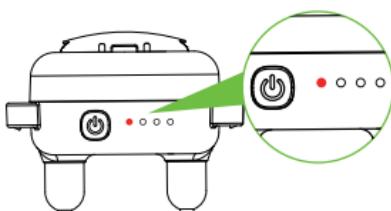

- **Red blink:**


Low battery, needs charging

Function Feedback

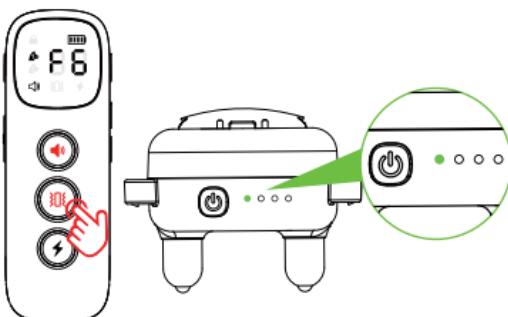

- **Press the vibration or sound button:**


LED green blink

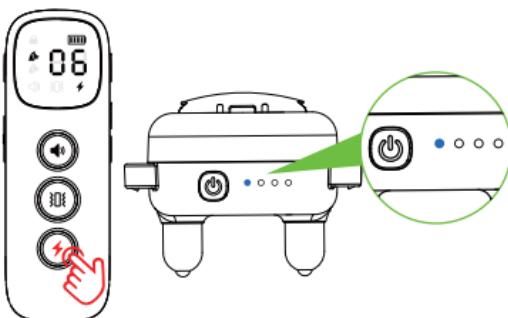

- **Press the static stimulation button:**

LED blue blink

Level Display (Chase Light Mode)

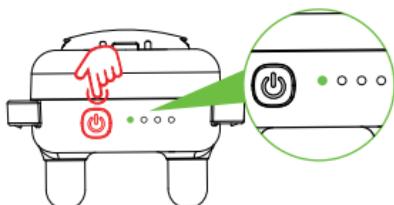

- Press the power button once to activate the LED battery indicator
- The number of LEDs that light up indicates the current battery level:

LED Lights On	Battery Level
● ● ● ●	90%–100%
● ● ● ○	50%–89%
● ● ○ ○	20%–59%
● ○ ○ ○	1%–20%

10. Using Channel 2 for a Second Receiver


Note:

You can skip this step if you're using a 1-dog system — the remote and receiver are pre-paired at the factory.

Pairing New collar Steps


1. Power off the receiver

- To power off, press and hold the receiver's power button for 3 seconds.
- The red light will stay on for 3 seconds, and the device will vibrate once, indicating it is off.

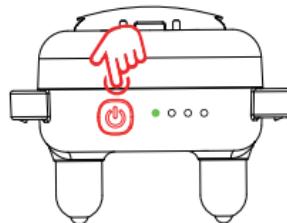

2. Enter pairing mode

- Press and hold the receiver's power button for 6 seconds until the green light blinks rapidly.

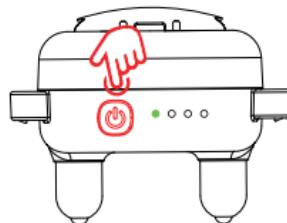


3. Choose a channel

- Press the channel button on the remote to choose the appropriate channel.




4. Press a function button

- Press any function button on the remote.

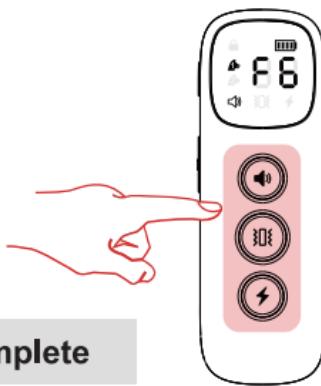


5. Pairing complete

- The receiver beeps once and the green light stops flashing, indicating pairing is complete.

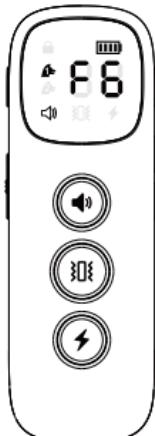

Beep Once



Stop Flash

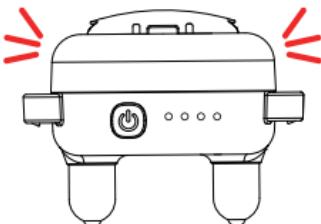


11. Troubleshooting

1. My dog is not responding when I press a beep, vibration or static button.


- Check the Receiver Collar if it is on.
- Check if using the correct channel. If it still doesn't work, switch to a different channel or try pairing again.
- Please check if the battery is low in either the Remote Transmitter or Receiver Collar.

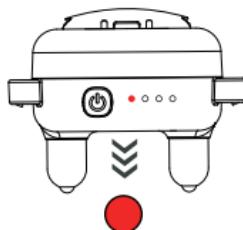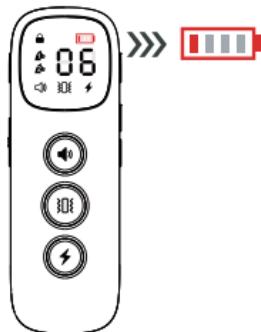


- Test the Receiver with the Test Light to confirm if the shock

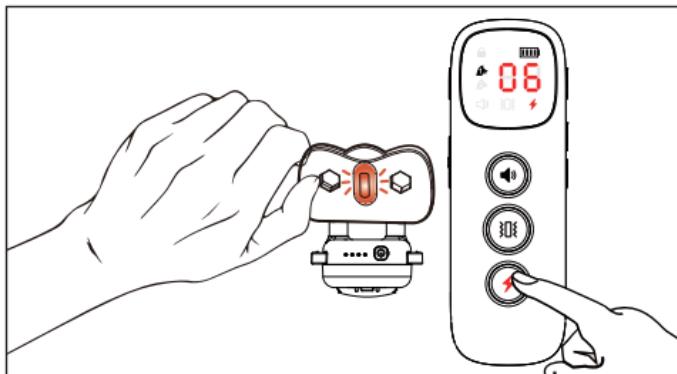

- Increase the correction level. Refer to “Finding the Right Stimulation Level”.

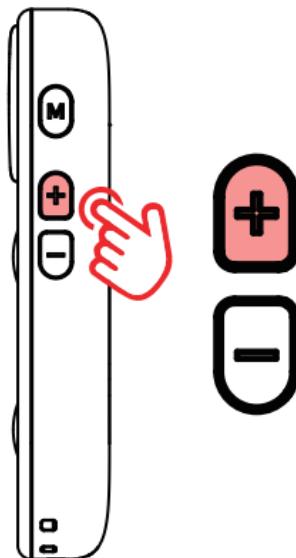


- Make sure the contact points lie flat against the skin. The collar should be snug but not tight—allowing you to fit one or two fingers between the strap and your dog’s neck.

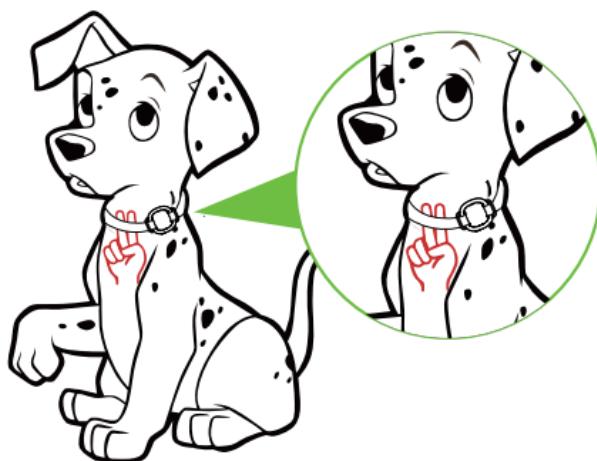

2. Fail to match receiver with remote

- Make sure the receiver is powered off before pairing.
- Press and hold the power button for at least 6 seconds until the green light blinks rapidly.
- If released too early, the device will simply power on and will not enter pairing mode.

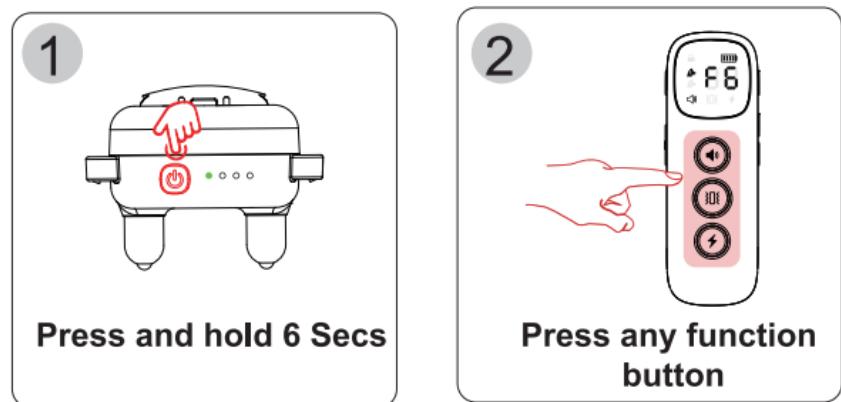

3. Remote/receiver does not respond

- Verify if the Receiver Collar is powered on.

When powered on, the indicator light will blink once every 10 seconds:

- A **green light** indicates sufficient battery level.
- A **red light** indicates low battery — please recharge the device.

- Verify if the training collar has been paired.

To check pairing status:

1. Press any function button (such as beep, vibration, or shock) on the remote.
2. Observe the receiver:
 - If it responds, pairing was successful.
 - If there is no response, try switching to a different channel and test again.
 - If it still doesn't respond, pairing may have failed. Please repeat the pairing steps.

12. FCC Statement

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Warning

Changes or modifications not approved by the manufacturer may void the user's authority to operate the device.

This device has been tested and meets FCC limits for a Class B digital device, designed to provide reasonable protection against harmful interference in residential use. If interference occurs (e.g., with radio/TV reception), try the following:

- Increase the distance between the device and the receiver.
- Plug into a different power outlet.
- Contact customer support or a qualified technician for assistance.

13. Terms of Use & Limitation of Liability

1. Using this product means you accept all terms and conditions.
2. This is a professional dog training device. Not recommended for dogs under 8 lbs or highly sensitive breeds.
3. For training use only. Do not use for any other purpose.
4. We are not liable for any direct or indirect loss caused by misuse. Use at your own risk.
5. For warranty or replacement, please contact your dealer. We provide technical support only.

14. Regarding you and the product

1. Do not submerge the receiver in water for long periods.
2. Use only the original remote and receiver. Do not mix with other brands.
3. Use professional tools for testing. Never test with your hands.
4. Ensure the charging port is completely dry before charging.
5. Avoid high-voltage areas, thunderstorms, large buildings, or strong electromagnetic interference.
6. The included collar is basic. You may replace it with a soft collar no wider than 20mm and no thicker than 2 mm.

15. Regarding the well-being of your dog

1. The Receiver collar is not a regular collar and should not be used with a leash to walk your dog.(Pulling on the leash may injure the dog due to the receiver's protruding electrodes.)
2. Do not leave the collar on for more than 12 hours, as it may cause rashes or skin irritation.
3. Do not allow children or individuals with little or no dog

training experience to handle this training kit.

4. Static stimulation is not a pleasant experience for any dog. Punishment is a harsh way to train. Positive reinforcement and praise are more effective in encouraging good behavior.

16. Operating Environment & Maintenance

Do Not Use Under These Conditions

- 1.** High temperature: Avoid using the device in environments above 104°F (40°C), as it may reduce battery performance.
- 2.** Strong electromagnetic interference: Keep away from areas with heavy electrical equipment or signal transmitters, which may affect normal operation.
- 3.** Drops or strong impacts: Do not drop the device or apply excessive force.
- 4.** Corrosive environments: Avoid exposure to chemical fumes or liquids, which may cause discoloration, deformation, or cracking.

Daily Cleaning & Maintenance

- 1.** When not in use, clean both the remote and receiver with a soft cloth.

Turn off the power, lock the buttons, and store the device in a dry and cool place.

2. Do not use hard brushes during cleaning to avoid scratching the surface.
3. If the receiver is dirty, wipe it gently with a slightly damp cloth.

Waterproof Notice



Do not submerge the receiver in water for extended periods.

1. Before charging, make sure the charging port is dry.

Wipe away any moisture before connecting to power.

2. If the remote falls into water:

- Remove it immediately and turn off the power
- Wipe it dry with a soft cloth
- Allow it to fully air-dry before use; normal function will resume once moisture is gone.

17. Warranty and repair information

1-Year Warranty

- This product includes a 1-year limited warranty from the date of purchase (for original buyers only).
- The warranty covers parts and labor, but shipping costs are not included.
- Accessories like batteries, chargers, and straps are covered during the first year only.

Not Covered by Warranty

- Secondhand or resold products
- Damage from misuse or loss
- Water damage to water-resistant devices
- Damage caused by unauthorized repair or battery replacement

How to Activate Warranty

To register your product, please visit:

<https://jugbow.com/warranty/>

If you encounter any issues with your product, please send the following information to:

Amazon: service@jugbow.com

TikTok: tkservice@jugbow.com

Our support team will assist you.

Please provide:

- 1.Your original order screenshot.
- 2.Your current shipping address (Once confirmed, we will ship the replacement within 5 business days)

Once the information is confirmed, we will send the replacement within 5 business days.

Need Further Assistance

If you need help or have any questions, feel free to contact us through the following channels:

 Online Form Support

Visit: www.jugbow.com/contact-us/

 Email Support

Amazon : jugbowofficial@jugbow.com

Tiktok : tkservice@jugbow.com

Official web:jugbowofficial@jugbow.com

 Customer Service Hours

Monday – Friday: 9:00 AM – 5:00 PM

Saturday – Sunday: 10:00 AM – 4:00 PM

 Office Address

Unit 2939, Level 29, Infinitus Plaza

199 Des Voeux Road Central

Sheung Wan, Hong Kong

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to mee general RF exposure requirement. The device can be used in portable exposure condition without restriction.