 


Solid wood Aroma Ultrasonic Diffuser

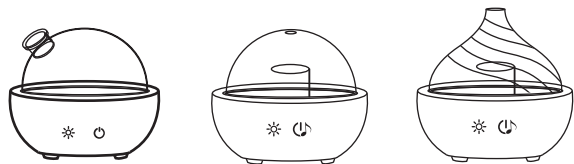 


Handmade,
please keep
it safe.

Manual

To ensure safety, please read this manual carefully before installation and follow the instructions herein. Store this manual in a secure place for future reference.

Machine composition

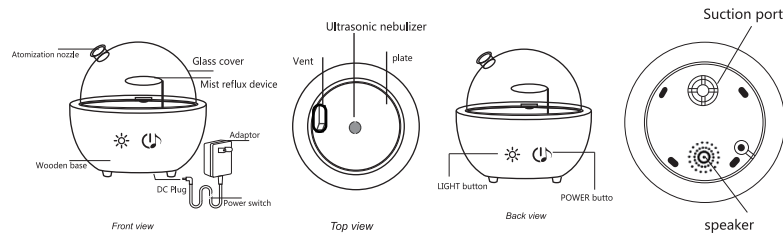

USE

1. Open the glass cover.
2. Using clean water, add 120ml of water to the bowl up to fill line. *(DO NOT over fill.)*
(In case of pouring a large amount of liquid into the crack, please extract the plug and reverse the main engine so that it can be dried.)
3. Add 6-8 drops of your favorite essential oil to the water.
4. Cover the glass cap.
5. Put the glass nozzle in.
6. Plug in the power.
7. Turn on the power switch.
8. **Mist settings:** For continuous misting, tap right POWER button once. For intermittent misting, tap right POWER button twice.
9. **LED settings:** For alternating lights, tap left LIGHT button once. Continue tapping left LIGHT button to select color.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Statement

 To maintain compliance with FCC'S RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm between the radiator and your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

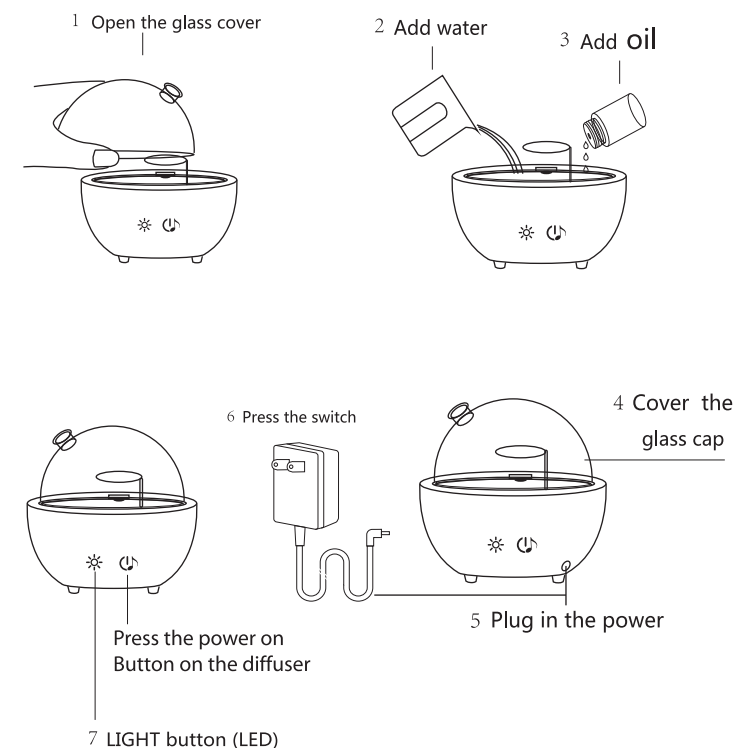

function

About atomization:

- 1. Short press one time for continuous spray.
- 2, Short press second time for intermittent spray, spray 10 seconds and stop to spray 10 seconds continuously.
- 3. Press third time for Shut down.
- 4. Long press music switch key for switching the atomization volume.

About lighting:

 
- The first pressing for seven colors cycle light.
- Pressing from second time to the eighth times is to select the corresponding light
- The ninth press for stop its working.

Music version:

after the machine is turned on, Bluetooth will be turned on automatically, and the mobile phone can be connected to the machine by turning on Bluetooth scanning and connecting to music.

Notice

- Be sure to insert a water shield and waterproof cap when using
- DO NOT add more than 150ml or over the fill line.
- Make sure device is off and has cover on prior to turning on.
- DO NOT open glass cover or touch water while device is on.
- After use, residual water in the water pan cannot be directly poured outIt should. be soaked with an absorbent cloth or sponge to prevent water from entering the base.

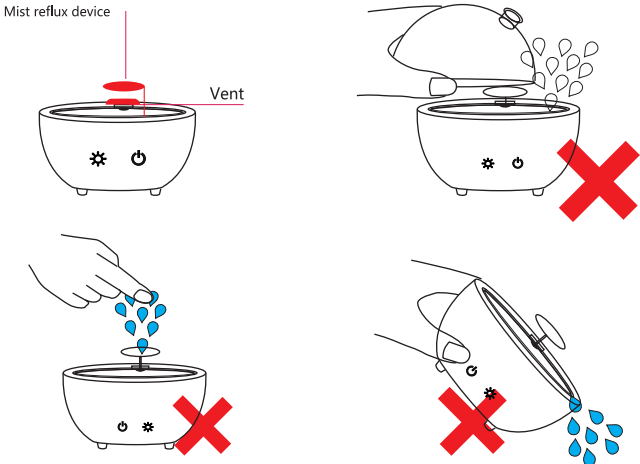

Malfunction		
Promble	Reason	solution
When the remote controller's power ON button is pressed, the unit is not running.	Plug is not connected to power or not connected properly	Plug the AC adapter plug into the power supply properly
	AC adapter connector does not properly connect with the product plug	Plug the AC adapter plug into the power supply properly
	Remote control distance is too far	Remote control please stay within 3 meters of the product.
	The remote controller does not have a body-facing remote sensor.	Please place the remote controller facing the remote sensor
No spray Difficult to spray	The use of purified water or distilled water.	Please use tap or mineral water
	Water below the water level sensor, or above the water level line	Please control the amount of water in the water tank above the water level sensor, below the water level line.
	Ultrasonic fog chip partially dirty	Please follow the instructions P9 for cleaning methods for cleaning
	Use on soft objects such as carpets or in places where the wind speed is too fast	Please use in a stable place and temperature without wind
Can't play music	Remote control music button is OFF.	Please set the remote music button to ON.
	Connected radio	Disconnect the radio
	Status: Stopped	Please turn off the power and confirm to run again

If you still have an abnormality after confirming the above exclusion, please go to the place of purchase to consult. Please do not disassemble or repair the product yourself .

Product parameters

Product name	Solid wood music Aroma Ultrasonic Diffuser
Mist Volume	25 ml/hr
Water Tank Capacity	150ml
Dimension	φ172mm*128mm
Weight	500g
Rated Voltage	AC100V-AC240V 50/60HZ/24V 500mA