


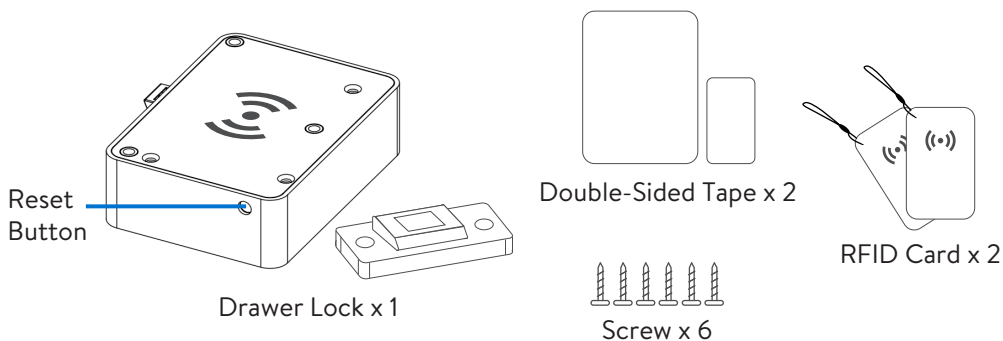

Important

Two RFID cards can be registered. The same card is registered two times also considered as two cards.

RFID cards work within a range of 2 cm.

Advised to fasten the top plate with screws.

Clearing the memory before you start to register RFID card.

Must register RFID card before you use the lock.

Do not install on metal.

Please do not close the drawer before register RFID card successfully.

Changing Batteries

1. Open the battery compartment cover, carefully insert 2 AA batteries (Batteries are not included) into the battery compartment. Follow the positive (+) and negative (-) guides in the compartment.
2. Press the battery cover back into place.

NOTE: If there are 5 beeps when opening the lock, it means low voltage, please change the batteries.

Clearing the Memory


Press the reset button for about 5 seconds and there is a long beep. It means the memory of all registered RFID cards have been cleared.

How to Use the Lock

1. Press the reset button for one second and there is a short beep. Place the RFID card close to the antenna position during 5 seconds. A long beep indicates successful registration. 3 beeps indicate failure.
2. Place the registered RFID card close to the antenna position, if there is a long beep, your lock is opened successfully and the motor rotates. After a short beep, can open the drawer. The motor resets after about 4 seconds.
3. Close directly.

How to Install

Supports stick-on or screw-in Installation. Install A and B parts in the drawer.

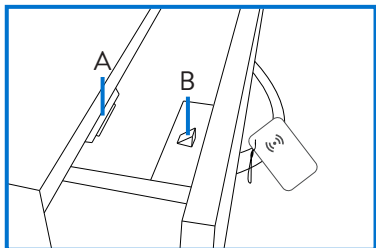

For all Customer Service needs,
please contact us at:

WE CAN HELP

1-888-577-9823

Fax: 1-585-486-1198

Email: CS@xpeditionllc.com

Find more at **Walmart.com**

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

"CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

⚠ WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.