

尺寸: 90*135mm (单页尺寸) 360*405mm (整页纸尺寸)

材质: 80g书写纸, 黑白双面印刷, 整页纸折叠, 2国语言



产品布局

连接SWITCH主机

① 点击Switch主机界面下的【①】图标, 点击“更改握法/顺序”。
② 短按手柄【①】2s, 手柄模式灯跑马灯律动, 进入配对模式。
③ 手柄模式灯LED1常亮, 此时【①】返回主界面即可。
注: 使用有线连接前, 请确认手柄处未开机或休眠状态, 并开启Pro手柄的有线连接。

连接iOS设备

① 蓝牙连接
关机状态下, 【①】+【⑥】组合键开机, 模式灯组LED 3闪亮;
在iOS设备蓝牙中连接“Xbox wireless controller”, 连接成功LED 3常亮。

② 短按手柄【①】模式指示灯组循环律动
③ 手柄模式灯LED1常亮(连接成功)

连接Android设备

 
① 蓝牙连接
关机状态下, 【①】+【⑥】组合键开机, 模式灯组LED 2闪亮;
在Android设备蓝牙中连接“MOBAPAD N1”, 连接成功LED 2常亮。

有线连接设备

① 有线连接
关机状态下, 将数据线连接手柄与设备, 手柄将自动切换对应模式连接。
② 有线连接PC
连接成功手柄布局将转换为XBOX布局, LED 1和2常亮。
③ 有线连接Switch
需在Switch主机开启Pro手柄的有线连接权限, 连接成功LED 1常亮。

唤醒SWITCH主机&回连

自动休眠或手动关机后, 短按【⑥】将唤醒或回连上一个连接成功的设备。
短按【⑥】唤醒设备
短按【⑥】唤醒设备



LAYOUT

CONNECT TO THE SWITCH

① On the Switch, tap on 【①】 and select “Change Grip/Order”
② Short press 【①】 for 2s, the channel lights flash like marquee, pairing starts.
③ When LED1 stays on, press 【①】 to return home page.
Note: To use a wired connection, ensure the controller is on or sleep mode and enable wired mode for Pro controller.

CONNECT TO iOS DEVICES

① Bluetooth Connection
When powered off, press the 【①】 + 【⑥】 to turn it on; the channel light (LED 3) will blink.
Connect to “Xbox Wireless Controller” in the Bluetooth settings on your iOS device; once connected successfully, LED 3 will remain lit.

② CONNECT TO ANDROID DEVICES

① Bluetooth Connection
When powered off, press the 【①】 + 【⑥】 to turn it on; the channel light (LED 2) will blink.
Connect to “MOBAPAD N1” in the Bluetooth settings on your Android device; once connected successfully, LED 2 will remain lit.

② WIRE CONNECTION TO DEVICES

① Wired Connection
When powered off, connect the data cable from the controller to the device; the controller will automatically switch to the corresponding mode for connection.
② PC Wired Connection to PC
Once connected successfully, the controller layout will change to the Xbox layout, and LED 1 and 2 will remain lit.
③ Switch Wired Connection to Switch
You must enable wired connection permissions for the Pro Controller on the Switch console; once connected successfully, LED 1 will remain lit.

WAKE UP & RECONNECT

After automatic sleep or manual shutdown, short pressing the 【⑥】 will awaken the controller or reconnect to the previously paired device.
Short press 【⑥】 to wake it up

接收器连接PC

① 接收器连接
手柄关机状态下, 【①】+【⑥】组合键开机。模式灯组LED1和LED2快闪; 将接收器接入PC设备USB接口, 短按接收器配对键2s, 接收器红灯快闪进入配对状态, 连接成功后, 手柄LED1和LED2常亮。
② 模式切换
可切换模式:Xinput(默认)/Dinput/Switch Pro
手柄连接成功后, 按下【←】+【→】三秒切换模式, 可循环。

震动档位设置

| | | | |
|--------|----------|----------|------------|
| 震动档位切换 | ① + ② 降档 | ① + ③ 升档 | 按照当前强度震动显示 |
|--------|----------|----------|------------|

注: 震动设置的按键在手柄关机后不保存记忆。

连击功能

① 可设置连击功能的按键: A/B/X/Y/L1/L2/R1/R2/R3/加号键/减号键/方向键以及摇杆(摇杆只支持八方向, 不支持模拟量)
② 处于手动连击状态: 手柄LED 4红灯快闪后触发闪烁
③ 处于自动连击状态: 手柄LED 4红灯自动持续闪烁

| | | |
|--------|--|---|
| 手动连击 | ① + 功能按键 | 第一次设置后, 按下该功能按键后升连发, 松开停止。 |
| 自动连击 | ① + 功能按键 | 第二次设置后, 读功能按键, 按下后, 自动连发, 再次按下该功能按键, 暂停连发。 |
| 取消单键连击 | ① + 功能按键 | 第三次设置后, 取消该按键连发功能。 |
| 连击档位切换 | ① + ② 降档 | ① + ③ 升档 |
| 档位灯光提示 | 按下【⑥】调到低档时: LED4灯闪1下 调到中档时: LED4灯闪2下 调到高档时: LED4灯闪3下 | 取消单个宏编程按键 按下【⑥】3秒, LED4灯变成黄色常亮, 按下背后的M1/M2需要取消的按键, 按下取消单个宏设置, LED4灯恢复。(用户自定义按键操作将删除) |

宏编程

① 可设置宏编程功能的按键: A/B/X/Y/L1/L2/L3/R1/R2/R3/加号键/减号键/方向键以及摇杆(摇杆只支持八方向, 不支持模拟量)

宏自动循环

| | | |
|-------|---------|-------------|
| 开启宏循环 | ① + M1键 | 开启后LED4紫灯闪烁 |
| 关闭宏循环 | ① + M1键 | 关闭后LED4关闭提示 |

宏自动循环

THE DONGLE CONNECTION TO PC

① Dongle Connection
With the controller powered off, press 【①】 and 【⑥】 to power on, then the LED1 and LED2 will flash rapidly. Connect the dongle to the USB port of the PC. Short press the pairing button on the dongle for 2s; the red light on the dongle will flash rapidly, indicating it's in pairing mode. Once connected successfully, the controller's LED1 and LED2 will remain on.

② Mode Switching
You can switch modes: Xinput (default) / Dinput / Switch Pro. After the controller is connected, press the 【←】 and 【→】 buttons for three seconds to switch modes; this can be cycled through.

VIBRATION LEVEL SETTINGS

| | | | |
|-------------------------|-----------------|---------------|---|
| Switch vibration levels | ① + ② Downshift | ① + ③ Upshift | Vibration prompt according to current intensity |
|-------------------------|-----------------|---------------|---|

TURBO FUNCTION

① Turbo-Mappable Buttons: A/B/X/Y/L1/L2/L3/R1/R2/R3/Plus/Minus/D-pad and joysticks. (Joysticks only support eight directions, no analog input)

② Macro programming
Press and hold 【①】 for 3 seconds, LED4 will turn solid purple, indicating that your macro has started. Once your macro is done recording, press the M1/M2 button to finish. If you press M1, the recorded macro will save; if M2, LED4 will save to M2. LED4 will return to normal. Press the assigned M1/M2 keys to trigger the recorded macro.

③ LED Indicators
When switching to the Low: LED4 flashes once.
When switching to the Mid: LED4 flashes twice.
When switching to the High: LED4 flashes three times

MACRO

① Assignable Buttons: A/B/X/Y/L1/L2/L3/R1/R2/R3/Plus/Minus/D-pad and joysticks. (Joysticks only support eight directions, no analog input)

② Macro programming
Press and hold 【①】 for 3 seconds, LED4 will turn solid purple, then press the M1/M2 button corresponding to the macro you want to cancel. This will delete that specific macro setting, and LED4 will return to normal. (User-defined key operations will be deleted.)

MACRO AUTO-LOOP

① Activate Macro Loop
② Deactivate Macro Loop

NFC功能

① 使用方法:
当Switch主机与蓝牙连接成功后, 如游戏支持Amiibo功能可使用Amiibo手办, 在手柄LOGO处激活游戏中对应道具。

电量提示

① 当手柄电量过低时, 手柄低电量报警, 中间当前模式通道灯快速闪烁。
② 关机状态下给手柄充电, 手柄通道指示灯闪烁, 电量充满后10秒, 灯光自动熄灭。
③ 为工作状态下的手柄充电, 手柄当前通道指示灯闪烁两次提醒, 随后恢复正常通道指示。

APP下载

售后服务

① 注意事项:
1. 若商品有质量问题, 请优先联系我们的客服进行登记。
2. 联系方式: service1@mobapad.com
3. 如需退货、换货, 请确保商品完好无损(包括商品外包装、赠品、说明书、售后卡、标签等), 不影响二次销售。
3. 如要维修商品, 请务必完整填写用户姓名、联系电话、地址, 正确填写售后要求与详细说明售后原因, 将售后卡随货寄回。

开关机指示

① 长按【⑥】3秒关机;
② 手柄在已连接状态, 若闲置超过15分钟, 自动关机;
③ 手柄在无连接状态(等待连接), 若2分钟后无连接自动关机;

APP下载

售后服务中心

① 注意事项:
1. 若商品有质量问题, 请优先联系我们的客服进行登记。
2. 联系方式: service1@mobapad.com
3. 如需退货、换货, 请确保商品完好无损(包括商品外包装、赠品、说明书、售后卡、标签等), 不影响二次销售。
3. 如要维修商品, 请务必完整填写用户姓名、联系电话、地址, 正确填写售后要求与详细说明售后原因, 将售后卡随货寄回。

开关机指示

① 长按【⑥】3秒关机;
② 手柄在已连接状态, 若闲置超过15分钟, 自动关机;
③ 手柄在无连接状态(等待连接), 若2分钟后无连接自动关机;

NFC

① The controller features built-in NFC supports for Amiibo.

② How to use:
After successfully connecting the controller to the Switch, if the game supports Amiibo functionality, you can use the figurine on the sensing area to activate in-game items.

BATTERY INDICATOR

① Low battery warning: The middle mode channel light flashes rapidly.
② When charging the controller in the power-off state, the channel lights blink. The lights will automatically turn off after 10 seconds of charging.
③ While playing games, if you charge the controller, the working channel light will flash twice as a reminder, and then return to the default light.

ON/ OFF

① Long press 【⑥】 for 3 seconds to power off.
② When the controller is connected, it will automatically power off if idle for more than 15 minutes.
③ When the controller is in an unconnected state (waiting for connection), it will automatically power off if not connected after 2 minutes.

DOWNLOAD THE APP

AFTER-SALE SERVICE

Feel free to reach out to us if you encounter any concerns or issues with Mobapad controller. We are committed to addressing your needs and ensuring your satisfaction within a year.

Email: mobapad@mobapadgame.com
Address: Building D, Youth Entrepreneurship Park, No. 18, Jianshe East Road, Qinghua Community, Longhua Street, Longhua District, Shenzhen

MOBAPAD

Follow for More

FCC Caution.

(1) § 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

According to §15.247(e)(i) and §1.1307(b)(1), systems operating under the provisions of this section shall be operated in a manner that ensures that the public is not exposed to radio frequency energy level in excess of the Commission's guidelines.

According to KDB 447498 (2)(a)(i)