



AS9000B

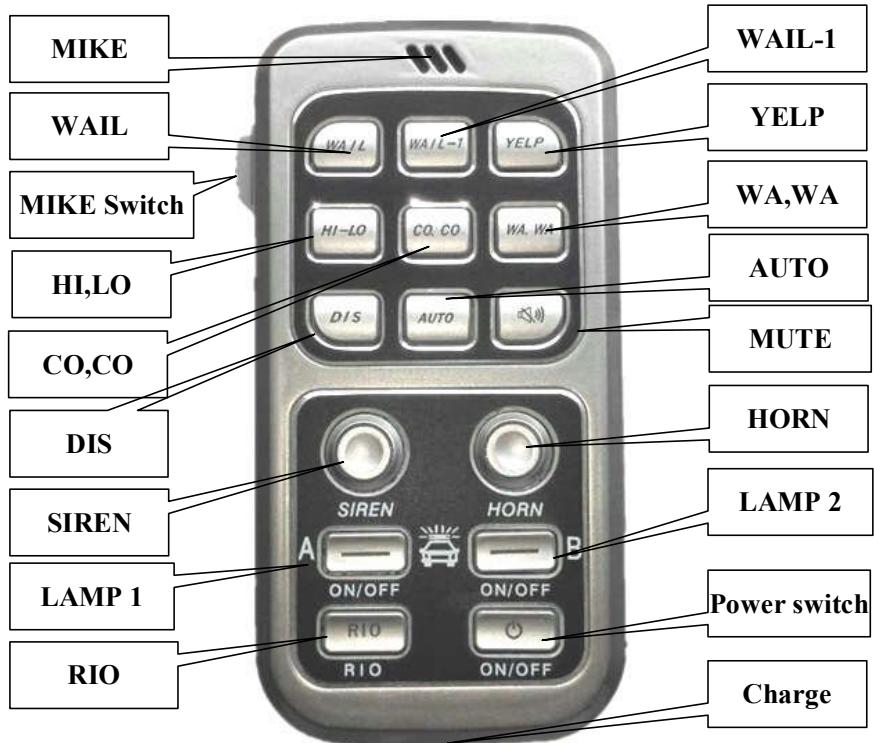

Schematic diagram of remote control function Instructions

- 1 long press the ON/OFF key to turn on the power, the background light, and then press the power off
- 2 according to the whistle whistle sound, release stop. According to the D/S key when the whistle will become bass reverberation.
- 3 other alarm keys, click on the open, click Close
- 4 light control 1 and light control 2 control two way light control, click on the open click CloseIn addition to all
- 5.RIO keys to whistle sound into the bass.
- 6 mute key, stop all alarms
- 7 press propaganda key, start talking, loosen the button. When finished the propaganda
- 8 when the speech is not clear or noisy, please adjust the direction of the antenna or charge for the remote control, red lightTo extinguish is full

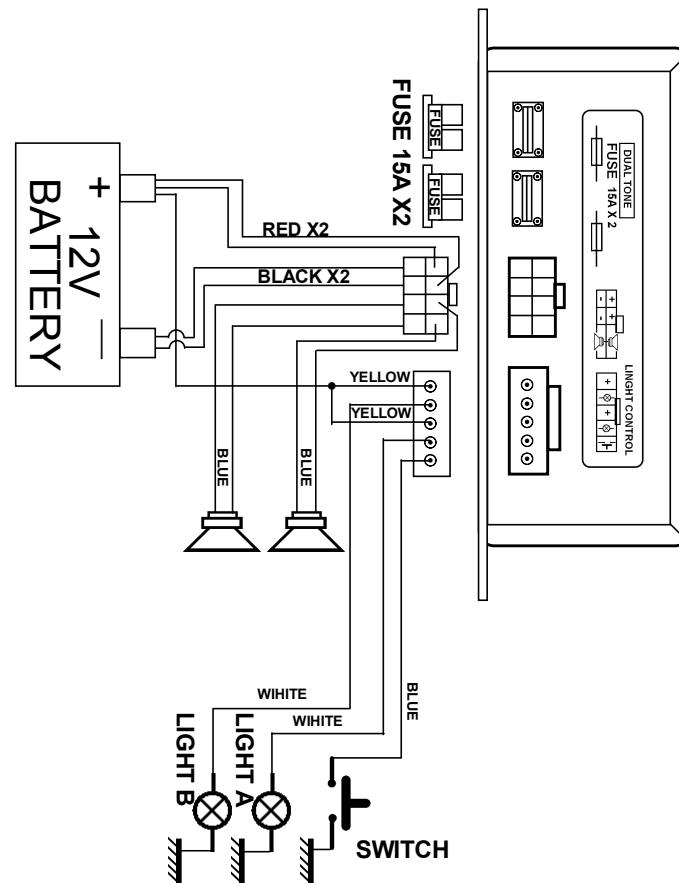

SIREN Connection and matching method

A:8 core plug connection method:

1 two green wires connected to a horn, 2 two blue wires to the other 2 speakers
3 two black line 12V battery anode, not ground. 4 two red line 12V positive electrode of a battery.

B:5 core plug connection method

1 red line to connect the battery cathode, yellow line group A positive line B lights, white lights were two positive group.,
2 lights or the battery anode cathode is connected with the ground.
3 wheel car horn to cut the string and horn end connected to the green line, blue line terminal is connected with the steering wheel.
4 wheel press alarms sound whistle, do not need this function can not take the green and blue lines.

C: pairing settings (paired with factory):

1 clear all passwords: turn on the power switch to the standby state, press the front panelIn 5 seconds, the red light flashes for 4 times, clear all the original password.
2 pairs of code: open the host power switch into the standby state, according to the main front panel hole Press the button, the red lights off, press any buttons on the remote control, flashing red light two, the host A sound, that is, the success of the code, please turn off the use of re open.
3 with the data line models, you can use the data cable to connect the remote control and the host, the boot will automatically complete the pairing

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The devices has been evaluated to meet general RF exposure requirement , the device can be used in portable exposure condition without restriction