


■ 使用说明书 ■

Instruction manual

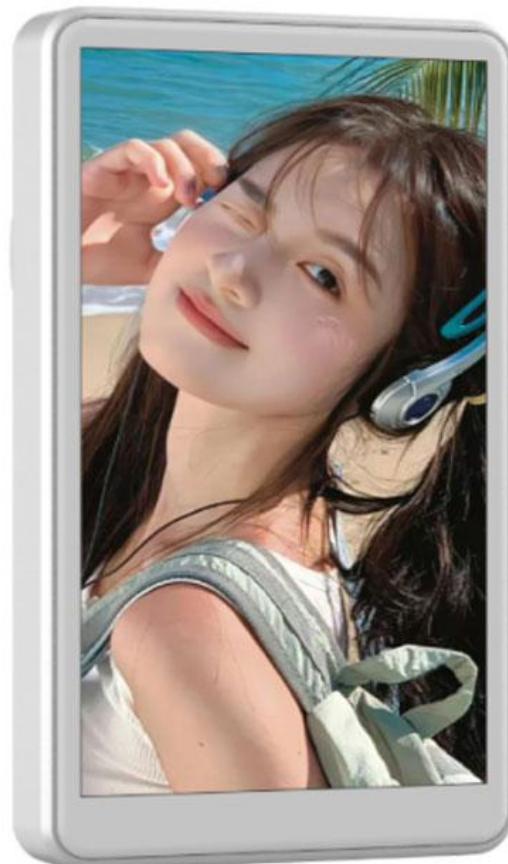

Please read the user manual before using this product

User Notice:

1. Disassembly and modification: This machine is composed of high-precision components. Users are prohibited from disassembling, repairing, modifying, or dropping it on their own to avoid damage to the machine. If the machine malfunctions, please contact the after-sales service center for repair in a timely manner.
2. Environment for use and storage: Do not use or store this machine in environments with high temperature, high pressure, strong magnetic field, dust, high tide, humidity, etc. Do not expose it to sunlight or immerse it in water droplets. Do not throw or shake the machine to avoid damaging its components.
3. Packaging material handling: All packaging materials, such as tape Lock buckle Plastic sheet Binding line Labels and other materials are not part of the product and are not suitable for children to play with. For the safety of your child, please handle the above packaging materials properly.
4. Maintenance and upkeep of the machine:
 1. Do not scratch the surface of the machine with sharp objects. To protect the machine, it is recommended to put it back in its original packaging after use If there is dust or water droplets splashing onto the surface of the machine, please gently wipe it with a soft dry cloth to keep the machine clean. Do not use volatile organic solvents (such as gasoline or diluents) to clean the surface of the machine When the machine is not in use for a long time, please cut off the power supply.
 4. Before and after using the machine, please check whether there are any foreign objects or damages on each interface. If there are any foreign objects, please remove them as soon as possible. If there are damages, please consult the manufacturer for repair.

Instructions for using the charger:

1. The charger is not a toy, it is only used for external power supply of the machine Children under 2.3 years old are prohibited from using
3. Do not allow children to insert or unplug power plugs on their own.
4. The machine can only use recommended chargers that comply with national standards.
5. When cleaning the machine with cleaning solution, disconnect it from the charger.
6. Please use a safety isolation charger
7. Regularly check the wires of the machine Plug. Check if the casing and other components are damaged. If any damage is found, stop using them until they are fully repaired.

Reminder: Based on the research and development concept of this product, our company's products ensure the safety of personnel use. Therefore, we would like to remind you that:

1. This product cannot function while charging.

2. If there is no response when starting up, please turn off the device and charge it for more than 20 minutes before using it again.

When the product is charging, the red light at the back lights up, and after charging is complete, the red light turns off.

4. It is recommended to charge the product every month if it has not been used for a long time, which can ensure the normal use of the product and extend its service life.

5. Charging method: Please use a charger with an output of 5V-1000mA to connect the USB cable to the machine. USB charging time (5-8 hours).

Product Features:

1. Same screen function: making it more convenient and clear for the phone's rear camera to take selfies.

2. Strong magnetic attraction: more stable adsorption without damaging the phone.

3. System adaptation: IOS system 9.0 or above, Android 2.0 or above, HarmonyOS 3.0 or above, MagicOS 4.0 or above, and other mobile phones.

Function Description:



Power switch: toggle the switch to turn on or off the machine

Screen Rotation: The screen can be rotated 180 degrees

Display ratio: switchable between full screen mode and 1:1 mode

Brightness adjustment: Adjust the brightness of the screen

Connection method steps:

Step 1: Swipe down from the top right corner of the phone screen to open the shortcut menu bar.

Step 2: Find the screen mirroring function on your phone ("Screen mirroring" on Apple phones, "Wireless screen mirroring" on Android phones) and click to turn it on; Or go to Settings>More Connections>Screen mirroring function.

Step 3: Find "iScreenp2p" in the search list and click on the link device

(First connection requires entering verification code
"1234")



Note: 1 The instructions for use are for reference only. For software upgrades, please refer to the actual product. If there are any changes to the product content or parameters, please refer to the current product without further notice.

2. Execution standards: GB4943.1-2022;

Warranty terms:

Within seven days from the date of sale, if there is a performance failure of the product, the body and packaging of the product must remain intact and can be replaced with the same model of product (subject to inspection), but not including human damage.

2. The product comes with a one-year warranty and lifetime maintenance from the date of sale, and accessories are not covered by the warranty.

3. The warranty service is only valid under normal use, and any human damage (including self disassembly and improper use) is not covered by the warranty.
4. This card must be provided during warranty. Failure to provide this card or unauthorized alteration of this card will result in the company's right to dispose of it.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

Packaging accessories					
color box	machine	TYPE-C cable	Instruction manual/warranty card	certificate of conformity	
*1	*1	*1	*1	*1	

User Name		gender		age	
mail address					
Contact Number				zip code	
Where to Buy					
purchasing date		Sales Order Number			
DESCRIPTION		Serial No			
Dealer Signature		User signature			

When the ambient temperature is ≤ 0 °C, the machine should be moved indoors and left at room temperature for 2 hours before use.

