

60MM*90MM*10P 折页



* 请在使用本产品之前阅读使用说明书 *

用户须知:

1. 拆卸和改造: 本机由高精元器件组成, 禁止用户自行拆卸、修理、改装或重摔, 以免对本机造成损坏, 如本机出现故障, 请及时联系售后服务中心进行维修。
2. 使用和存放环境: 请勿在高温、高压、强磁场、灰尘大、潮湿等环境中使用或存放在本机, 亦不可暴晒和浸入水滴, 勿扔放、震动机器, 以免损坏机器的零部件。
3. 包装材料处理: 所有包装材料, 如胶带、锁扣塑胶片、捆綁线、标签等都不属于产品的一部分, 不适于儿童玩耍, 为了您孩子的安全, 请妥善处理以上包装材料。
4. 机器的维护和保养:
1. 请勿用尖锐物件在机器表面刮划, 为保护机器, 建议您使用后放回原包装。
2. 如机器表面有灰尘或水滴溅入, 请用软的干布轻轻擦拭, 保持机身清洁, 请勿使用挥发性有机溶剂(如汽油、稀释剂)清洗机器表面。
3. 机器长时间放置不用时, 请切断电源。
4. 在机器使用前后请检查各接口是否有异物或破损, 如有异物请尽快取出, 如有破损请咨询厂家进行维修。
充电器使用说明:
1. 充电器不是玩具, 仅为机器外部供电使用。
2. 3岁以下儿童禁止使用。
3. 不要让儿童自己插入或拔出电源插头。
4. 机器只能使用推荐的符合国标的充电器。

5. 用清洁液清洁机器时应与充电器断开。
6. 请使用安全隔离充电器。
7. 定期检查机器的电线插头、外壳和其它部件是否损坏, 发现损坏时应停止使用, 直至修复完好。
温馨提示: 基于本产品的研发理念, 本公司产品更加确保人员的使用安全, 因此特别提示您:
1. 本产品在充电状态时是不可以工作的。
2. 开机无反应的情况下请关闭设备充电20分钟以上再使用。
3. 产品充电时, 后面红灯亮起, 充电完成后, 红灯关闭。
4. 在长期未使用的情况下建议对产品每个月进行充电, 这样可以保证产品正常使用并延长产品的使用寿命。
5. 充电方法: 请使用输出5V-1000mA充电器连接USB线连接机器USB充电时间(5-8小时)
产品功能:
1. 同屏功能: 让手机后置摄像头自拍更方便、更清晰。
2. 强力磁吸: 吸附更稳、不伤手机。
3. 外放功能: 高保真喇叭外放功能。
4. 外接设备: 3.5耳机输出。
5. 蓝牙5.0: 手机用蓝牙连接机器。
6. 系统适配: iOS系统9.0以上, Android2.0以上, HarmonyOS系统3.0以上, MagicOS系统4.0以上等手机。

功能说明:



电源开关: 拨动开关可打开或关闭机器。
照相键: 手机连接蓝牙进入照相, 按照相键可以拍照。
屏幕旋转: 可将屏幕旋转180度。
显示比例: 可切换全屏模式跟1:1模式。


连接方法步骤:

安卓手机:

步骤一: 从手机屏幕右上角向下滑动, 打开快捷菜单栏。
步骤二: 找到手机的投屏功能("无线投屏")点击打开; 或者在设置>更多连接>投屏功能。

苹果手机:

步骤一: 手机连接无线网, 搜索机器WIFI网络(iScreen_777), 密码: 12345678 连接网络。
步骤二: 从手机屏幕右上角向下滑动, 打开快捷菜单栏。
步骤三: 找到手机的投屏功能("屏幕镜像")点击打开; 或者在设置>更多连接>投屏功能。
步骤四: 在搜索列表中找到"iScreen_777", 点击链接设备。


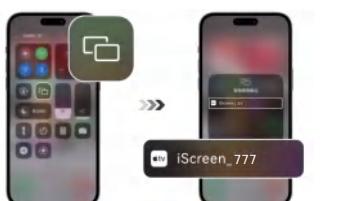


注: 1. 使用说明只供参考, 机器软件升级按实物为准。如产品内容或参数有变更时, 请以当前产品为准, 恕不另行通知。
2. 执行标准: GB4943.1-2022;
保修条款:
1. 商品自售出之日起七日内, 如发生性能故障, 商品机身及包装必须保持完整, 可换同种型号商品(须经检查), 但不包括人为损坏。

2. 商品自售出之日起保修一年, 终身维护, 配件不在保修范围内。
3. 保修服务只限正常使用下有效, 一切人为损坏(包括自行拆机, 使用不当)不在保修范围内。
4. 保修时需提供本卡, 未能提供本卡或私自涂改本卡, 本公司有权作报废处理。

包装配件					
彩盒	机器	TYPE-C线	说明书/保修卡	合格证	
*1	*1	*1	*1	*1	
用户姓名		性别	年龄		
通信地址					
联系电话		邮编			
购买地点					
购买日期		销售单号			
品名及规格		机身编号			
经销商签名		用户名			

警告 **窒息危险-所有包装物料(如胶带、塑料袋、塑封片、捆綁线、标签)以及机内细小配件, 勿让3岁以下儿童接触, 以免发生窒息危险, 并在成人监护下使用。**
当环境温度≤0°C时, 应把机器移到室内并在室温下放置2小时后使用。

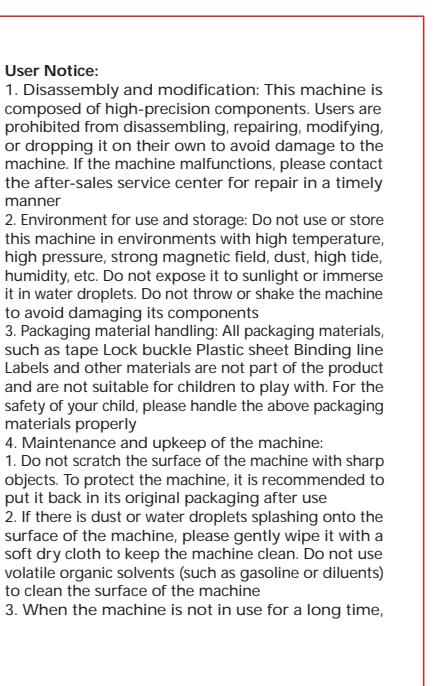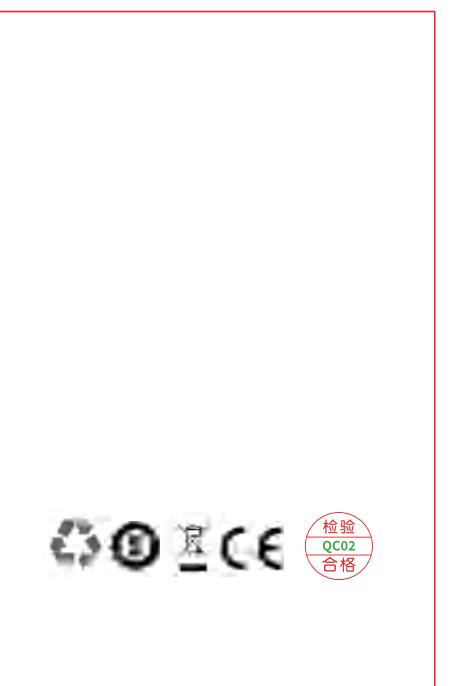

User Notice:

1. Disassembly and modification: This machine is composed of high-precision components. Users are prohibited from disassembling, repairing, modifying, or dropping it on their own to avoid damage to the machine. If the machine malfunctions, please contact the after-sales service center for repair in a timely manner.
2. Environment for use and storage: Do not use or store this machine in environments with high temperature, high pressure, strong magnetic field, dust, high tide, humidity, etc. Do not expose it to sunlight or immerse it in water droplets. Do not throw or shake the machine to avoid damaging its components.
3. Packaging material handling: All packaging materials, such as tape, lock buckle, plastic sheet, binding line, labels and other materials are not part of the product and are not suitable for children to play with. For the safety of your child, please handle the above packaging materials properly.
4. Maintenance and upkeep of the machine: Do not scratch the surface of the machine with sharp objects. To protect the machine, it is recommended to put it back in its original packaging after use.
5. If there is dust or water droplets splashing onto the surface of the machine, please gently wipe it with a soft dry cloth to keep the machine clean. Do not use volatile organic solvents (such as gasoline or diluents) to clean the surface of the machine.
6. When the machine is not in use for a long time,

please cut off the power supply.
4. Before and after using the machine, please check whether there are any foreign objects or damages on each interface. If there are any foreign objects, please remove them as soon as possible. If there are damages, please consult the manufacturer for repair.
Instructions for using the charger:
1. The charger is not a toy, it is only used for external power supply of the machine.
2. Children under 3 years old are prohibited from using.
3. Do not allow children to insert or unplug power plugs on their own.
4. The machine can only use recommended chargers that comply with national standards.
5. When cleaning the machine with cleaning solution, disconnect it from the charger.
6. Please use a safety isolation charger.
7. Regularly check the wires of the machine. Check if the casing and other components are damaged. If any damage is found, stop using them until they are fully repaired.
Reminder: Based on the research and development concept of this product, our company's products ensure the safety of personnel use. Therefore, we would like to remind you that:
1. This product cannot function while charging.
2. If there is no response when starting up, please turn off the device and charge it for more than 20 minutes before using it again.
3. When the product is charging, the red light at the

back lights up, and after charging is complete, the red light turns off.
4. It is recommended to charge the product every month if it has not been used for a long time, which can ensure the normal use of the product and extend its service life.
5. Charging method: Please use a charger with an output of 5V-1000mA to connect the USB cable to the machine's rear USB charging port (5-8 hours).
Product Features:
1. Same screen function: making it more convenient and clear for the phone's rear camera to take selfies.
2. Strong magnetic attraction: more stable adsorption without damaging the phone.
3. External function: high-fidelity speaker external function.
4. External device: 3.5mm headphone output.
5. Bluetooth 5.0: Connect the phone to the machine via Bluetooth.
6. System adaptation: iOS 9.0 or above, Android 2.0 or above, HarmonyOS 3.0 or above, MagicOS 4.0 or above, and other mobile phones.

Function Description:




Power switch: toggle the switch to turn on or off the machine.
Camera button: Connect your phone to Bluetooth and enter the camera. Press the photo key to take a photo.
Screen rotation: The screen can be rotated 180 degrees.
Display ratio: switchable between full screen mode and 1:1 mode.
Connection method steps:
Install phone:

Step 1: Swipe down from the top right corner of the phone screen to open the shortcut menu bar.
Step 2: Find the screen mirroring function on your phone ("wireless screen mirroring") and click to turn it on; or go to Settings > More Connections > Screen mirroring function.

iPhone:

Step 1: Connect your phone to the wireless network and search for the machine's WiFi network (iScreen_777).
Password: 12345678. Connect to the network.
Step 2: Swipe down from the top right corner of the phone screen to open the shortcut menu bar.
Step 3: Find the screen mirroring function on your phone and click to open it; or go to Settings > More Connections > Screen mirroring function.
Step 4: Find "iScreen_777" in the search list and click on the device link.

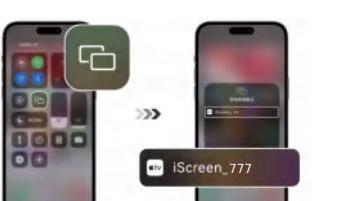

Note: 1. The instructions for use are for reference only. For software upgrades, please refer to the actual product. If there are any changes to the product content or parameters, please refer to the current product without further notice.

Warranty terms:

1. Within seven days from the date of sale, if there is a performance failure of the product, the body and packaging of the product must remain intact and can be replaced with the same model of product (subject to inspection), but not including human damage.
2. The product comes with a one-year warranty and lifetime maintenance from the date of sale, and accessories are not covered by the warranty.
3. The warranty service is only valid under normal use, and any human damage (such as disassembly and improper use) is not covered by the warranty.
4. This card must be provided during warranty. Failure to provide this card or unauthorized alteration of this card will result in the company's right to dispose of it.

Asphyxiation hazard - All packaging materials (such as tape, plastic bags, plastic sheets, bundling wires, labels) and small accessories inside the machine should be kept away from children under 3 years old to avoid suffocation hazards, and should be used under adult supervision.
When the ambient temperature is ≤0°C, the machine should be moved indoors and left at room temperature for 2 hours before use.



FCC WARNING
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance; such modifications could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement.
This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.