



APP download method

Please use your mobile browser to scan the QR code for downloading and installation.

Indicator Light Instructions:

1. After powering on, the blue light will flash.
2. When connected to Wi-Fi, the blue light will stay on.
3. When the battery is low, the red light will flash.
4. During charging, the red light will stay on. When the battery is fully charged, the red light will turn off.

APP Connection:

1. Long press the power button for 2 seconds to turn on.
2. Open the app. Click to start "Connect device Wi-Fi".
3. If there are many Wi-Fi signals in the environment, they may interfere with the signal of the product. Please use it in an area with fewer Wi-Fi signals.
4. Go back to the app. Start using.

Apple users
Select the iOS appstore option after scanning the code. Open the App Store to download and install.
You can also directly search for Cooleer X downloads in the App Store.

Android users
After scanning the code, select the Android Google option to enter the next page. Click: Download and install through third-party browser options.



APP下载方式

请使用手机浏览器扫二维码下载安装。

指示灯说明:

1.开机后蓝灯闪烁;
2.Wi-Fi连接后蓝灯常亮;
3.电量低红灯闪烁;
4.充电时红灯常亮;
5.充满电后红灯熄灭。

APP连接:

1.长按开关键
2.打开APP 点击开始连接Wi-Fi
3.若连接失败 系统设置 连接产品Wi-Fi Cooleerx-xxx
4.打开APP 开始使用

苹果用户
扫码后选择 iOS App Store 选项打开 App Store 下载安装。也可以直接在 App Store 搜索 Cooleer X 下载。

安卓用户
扫码后选择 Android China(安卓国内)选项进入下一页后点击:通过第三方浏览器下载选项,下载并安装。

请在使用前仔细阅读本说明书,请妥善保管以备日后查询。

Charging Instructions:

1. Before initial use, please ensure that the product is fully charged.
2. It is not recommended to completely drain the battery.
3. When the indicator light flashes red, please charge it promptly.
4. When charging, connect the Type-C interface plug to this product.

Translation:

Product Name: Smart Ear Cleaner (Visual WiFi)
Product Mode: Cooleer-X1
Network Standard: IEEE 802.11b/g/n
Antenna: Built-in FPC
Antenna Operating Frequency: 2.4GHz
Image Transmission Speed: 25fps
Connection Method: Wi-Fi Hotspot Connection
Battery: 130mAh
Input Current: DC5V 0.5A
Image Sensor: CMOS
Pixels: 5 million
Gravity Sensor: 3-axis

Precautions

1. Please turn off the product before charging. Do not use a fast charger for charging.
2. If the image is unclear, please use a cotton swab to wipe the lens.
3. Before use, observe the surrounding environment to prevent accidents.
4. It is normal for the lens and body to generate heat.
5. This product is for personal care use only, and should not be used as a medical device.
6. Please keep the product in a cool, dry place, away from fire and corrosive substances.
7. This product is not suitable for children.
8. Do not immerse the product in water or rinse it under a faucet.
9. Do not allow children to play with this product.
10. Do not take the product to an unauthorized service center for repairs.
11. Do not use any accessories or parts produced by other manufacturers, using such accessories or parts will void your warranty.

Troubleshooting:

Screen freezing:
* Make sure the product is used in close proximity to the phone within the Wi-Fi signal transmission range.
* Low battery can weaken the Wi-Fi signal, so please charge it in a timely manner.
* If there are many Wi-Fi signals in the environment, they may interfere with the signal of the product. Please use it in an area with fewer Wi-Fi signals.

No image display:
* Confirm that the app has been granted permission to use network data.
* Check if the phone is connected to the product's Wi-Fi network. If connected but still no display, try closing and reopening the app.

Unable to store images or videos:
* Confirm that the app has been granted permission to take photos and record videos.

Unable to charge:
* Please use the provided charging cable to charge.
* Try using a different charger if the problem persists.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Card After-sales Warranty

Product Warranty Policy:

- Under normal use, the warranty period for this product is one year.
- The following situations are not covered by the warranty (including but not limited to): a. No warranty card or any proof of purchase. b. Exceeding the scope of precautions, abnormal use, self-repair or damage caused by human factors (including improper operation), as well as damage caused by natural disasters. d. Exceeding the "Three Guarantees" period, or using the product for purposes beyond its intended use.
- When returning the product for repair, please include the warranty card.
- The company reserves the right to modify the warranty terms and the final interpretation of the terms.

After-sales Warranty Card

Customer Name _____
Customer Phone _____
Customer Address _____

Product Name _____
Product Specifications/Model _____
Remarks _____

Thank you for choosing our product. All our products undergo rigorous quality testing before leaving the factory. If you have any issues with the product, please contact our after-sales service. We are committed to providing you with assistance.

正面

反面

保修卡

客户姓名 _____
客户电话 _____
客户地址 _____

产品名称 _____
产品规格/型号 _____
备注 _____

感谢您选择本产品,本公司所有产品出厂前均经过严格的质量检测,如有任何产品问题,请联系售后。