

【EN】



★DC5V: charging interface.

★TF CARD: Insert the TF card to play MP3 music.

★AUX: Use the cable with 3.5mm plug to connect the AUX.

★Mic: Use the cable with we 6.35 mm plug to connect the Mic slot.

★USB: Insert U disk to play MP3 music.

★ON-OFF: Power switch, Switch on/off,move to "ON" to start up,move to "OFF"

★◀◀/◀◀ Short press for previous song, long press to fast backward.

★ SCAN/▶▶ Short press play/pause ,Press and hold to search automatically FM,Press twice in wireless mode to connect to TWS

★▶▶/▶▶ Short press for next song, long press to speed.

★ M/💡 short press USB, Micro SD, RADIO, & AUX;
long press LED MODE
★ -VOL+: adjust the volume.

USB/TF Card

Insert the usb drive or Micro-SD card into the USB/TF. It will read Mp3 music files automatically

Aux Input(3.5mm audio cable)

To use as a speaker, please connect the 3.5mm audio cable to the machine aux in jack and the computer/cellphone audio output jack.

Wireless MODE

Turn on the speaker, Once powered on it is already in wireless mode. Turn on your device's wireless and then scan for new devices and look for Model name Once found, pair with it. After pairing, devices can connect with each other automatically.

Charging

Please use the included charging cable to charge. red led on when charging

Power: 8W

Playing time: 6 hours

Lithium Battery: 3.7V 2400mAh

Charging via USB port(PC): up to 5 hours

Wireless range: 10 meter

USB charging: DC 5V

Super Bass Speaker
CBS-3033

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.