

说明书尺寸：105X125mm 105g双面正反4色印刷5折6页

VR SHINECON  
VIRTUAL REALITY GLASSES

## USER GUIDE




### Introduction




1. Focal Distance Adjustment
2. Device buckle
3. Focal Distance Adjustment
4. Ergonomic Bell
5. Headset
6. Headband
7. Removable
8. Touch screen button
9. Open frame
10. Headset microphone
11. Volume +
12. Multifunction button
13. Volume -
14. Leather Patch
15. Micro USB为电源

### User guide

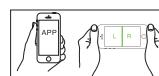

- ① Download and play the video test
- Open the cover glass (as shown in right picture), put your cell phone into the VR headset, make sure the cell phone screen is in the middle, then close the cover. Adjust the screen to the right direction.

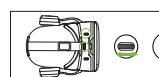

- ② How to use
- ③ Adjustment function



- ④ Introduction of game play
- Two ways to play VR game
- Two ways to play VR game can be controlled by gyroscope of smartphone, please turn on the gyroscope to control the games (shown in right picture)
- VR game can be controlled by touch screen (as shown in right picture)
- Most of VR games can be controlled by gyroscopic touch screen, but some VR games can be controlled by gyroscopic touch screen, so please refer to the device's game tips to see if your device is necessary with it or not.



### Charge description

Our product is with inner rechargeable lithium battery, when power is low, Power LED will flash. Please insert SVS port to charge! Red LED will be on. And when power is full, Red LED will be off.

### Key function introduction

Key Name	Long Press 3 s	Single Click	Double Click
Multifunction key	Power on/Power off	Play / Pause / Answer call / Hang up	Reject a call / Make a call
Volume +	/	Volume +	Last
Volume -	/	Volume -	Next

### Product Specification

Items	Specifications
Model NO.	SC-G04BS
Product size	222mmx205mmx99mm
Wireless protocol	Wireless 4.2 compliant
Wireless distance	< 10M
Battery	Rechargeable Li-3.7V 400mA
Continuous game time	About 15 hours
Working current	20-35mA

Thank you for purchasing VR Shinecon SC-G04BS  
Please check the detailed list.



1pcs manual

1pcs device

### After-sales service:

1. Any quality problems within 7 days you bought VR shinecon, we accept sales return and refund the cost for you or change same item for free.
2. Any quality problems within 15 days you bought VR shinecon, we accept change same item for free.
3. Repair for free within 3 months.

### Out of warranty:

1. Lack of valid invoice or not within the warranty period.
2. Not manual require the use, maintenance, custody and led to the failure or damage.
3. Damages caused by fire, water flood, thunderstroke etc force majeure factors.
4. Malfunction as disassembly, refit.
5. Can not use suitable for your phone or network.

### Important Note:

Please keep all the packaging and accessories when sales return.  
Please contact us by wechat, hotline or official website.

Kindly remind: In order to improve your viewing comfort, the appropriate angle of back and seat is better to be 60°; In order to protect your vision, we suggest your viewing time should not be more than 30 minutes.

### VR SHINECON after-sales service card/ Service

Thank you for your trust and support of VR SHINECON products, we will wholeheartedly provide service for you. Please fill in the relevant items as below to ensure the legitimate rights and interests of you.

Product Item:	_____
Serial Number:	_____
Purchase Date:	_____
Name:	_____
Tel:	_____
Country:	_____
Address:	_____
Dealers:	_____
Dealers Address:	_____
Dealers Tel:	_____
Web:	_____
Return Reason:	_____

This card is the service vouchers of VR SHINECON, the content shall not be modified at will, please safekeep the card to ensure the legitimate rights and interests of you. The producer is VR SHINECON.

### 产品售后服务凭证卡 / Service

感谢您对 VR SHINECON 产品的信任和支持, 我们将竭诚为您提供服务, 请填写相关条目, 以确保您的合法权益。

产品型号: \_\_\_\_\_

序号: \_\_\_\_\_

购买日期: \_\_\_\_\_

客户姓名: \_\_\_\_\_

客户电话: \_\_\_\_\_

国家: \_\_\_\_\_

客户地址: \_\_\_\_\_

经销商名称: \_\_\_\_\_

经销商地址: \_\_\_\_\_

经销商电话: \_\_\_\_\_

网址: \_\_\_\_\_

退货换货原因: \_\_\_\_\_

### VR Shinecon 产品介绍



- 1.物距调节
- 2.快检卡扣
- 3.瞳距调节
- 4.快夹头带
- 5.快夹
- 6.主机机身
- 7.可拆卸面版
- 8.脚架脚架
- 9.光学快门
- 10.限位式麦克风
- 11.音量+
- 12.多功能按键
- 13.音量-
- 14.散热皮质腮源
15. Micro USB为电源


### VR Shinecon 产品使用说明



- ① 下载并播放测试视频

请用手机进入应用商店或苹果应用商店界面

下载VR类资源 (建议WIFI环境下), 根据手机系统选择安装APK, 下载完成后如游戏测试是否左右屏 (如图) 并正常播放。

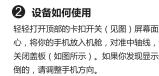

- ② 设备如何使用

轻轻打开VR设备的开关 (见图) 并垂直向内

插入手机的耳机孔, 对准中间电线, 然后

关闭盖板 (如图所示)。如果你发现显示是颠

倒的, 请调换手机方向。

- ③ 调节设备功能

带上头盔后通过调整面部调节带和瞳

距调节带的位置, 来适应不同的视力

人群, 从而让用户达到最佳的体

验效果。此产品支持佩戴眼镜使用。

- ④ 游戏玩法介绍

VR游戏玩法一: 依靠手机陀螺仪操控, 摆动头部


或触摸操控 (如右图)。

VR游戏玩法二: 通过蓝牙手柄操控游戏, 前进左

右后退360°操作。

备注: 大部分游戏都是依靠陀螺仪操控, 是不需要

蓝牙手柄的, 是否需要手柄请参考游戏提示。

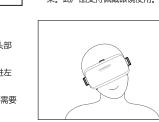

### 充电说明

本产品内置可充电锂电池, 当电量过低时, 红色指示灯闪烁。此时插入USB接口进行充电, 充电时工作灯红色长亮, 当充满电的红色工作灯熄灭。

### 按键功能介绍

键名	长按3s	单击	双击
多功能按键	开机/关机 / 暂停/来电/来电/挂断/来电/拨打/电话	拍照/暂停/来电/挂断/来电/拨打/电话	拍照/来电/挂断/来电/拨打/电话
音量+	/	音量+	下一曲
音量-	/	音量-	上一曲

### 规格参数

项目	规格
产品型号	SC-G04BS
产品尺寸	222mmx205mmx99mm
无线协议	Wireless 4.2 compliant
无线距离	< 10M
电池	可充式锂电池 3.7V 400mA
连续工作时间	约15小时
工作电流	20-35mA

### 感谢您选购《VR Shinecon》产品请您先核对装箱清单



用户手册一份

主机一台

### 我们为您提供以下售后服务

- 1.您使用VR Shinecon 产品3个月内, 产品出现任何质量问题, 都可以申请退货或者为您免费更换同型号产品。
- 2.您使用VR Shinecon 产品3个月内, 产品出现任何质量问题, 都可以为您免费更换同型号产品。
- 3.我们提供的产品提供3个月的免费维修。

### 以下情况不属三包范围

- 1.缺少或损坏或不在三包有效期内
- 2.未按产品说明书的要求使用、维修、保管而造成损坏的损坏
- 3.因火灾、水灾、雷击等不可抗拒的自然灾害造成的损坏
- 4.由于擅自拆机、改造等人为原因造成损坏
- 5.由于用户使用不当造成损坏

以下情况不属三包范围

- 1.缺少或损坏或不在三包有效期内
- 2.未按产品说明书的要求使用、维修、保管而造成损坏的损坏
- 3.因火灾、水灾、雷击等不可抗拒的自然灾害造成的损坏
- 4.由于擅自拆机、改造等人为原因造成损坏
- 5.由于用户使用不当造成损坏

以下情况不属三包范围

- 1.缺少或损坏或不在三包有效期内
- 2.未按产品说明书的要求使用、维修、保管而造成损坏的损坏
- 3.因火灾、水灾、雷击等不可抗拒的自然灾害造成的损坏
- 4.由于擅自拆机、改造等人为原因造成损坏
- 5.由于用户使用不当造成损坏

以下情况不属三包范围

- 1.缺少或损坏或不在三包有效期内
- 2.未按产品说明书的要求使用、维修、保管而造成损坏的损坏
- 3.因火灾、水灾、雷击等不可抗拒的自然灾害造成的损坏
- 4.由于擅自拆机、改造等人为原因造成损坏
- 5.由于用户使用不当造成损坏

以下情况不属三包范围

- 1.缺少或损坏或不在三包有效期内
- 2.未按产品说明书的要求使用、维修、保管而造成损坏的损坏
- 3.因火灾、水灾、雷击等不可抗拒的自然灾害造成的损坏
- 4.由于擅自拆机、改造等人为原因造成损坏
- 5.由于用户使用不当造成损坏

以下情况不属三包范围

- 1.缺少或损坏或不在三包有效期内
- 2.未按产品说明书的要求使用、维修、保管而造成损坏的损坏
- 3.因火灾、水灾、雷击等不可抗拒的自然灾害造成的损坏
- 4.由于擅自拆机、改造等人为原因造成损坏
- 5.由于用户使用不当造成损坏

以下情况不属三包范围

- 1.缺少或损坏或不在三包有效期内
- 2.未按产品说明书的要求使用、维修、保管而造成损坏的损坏
- 3.因火灾、水灾、雷击等不可抗拒的自然灾害造成的损坏
- 4.由于擅自拆机、改造等人为原因造成损坏
- 5.由于用户使用不当造成损坏

以下情况不属三包范围

- 1.缺少或损坏或不在三包有效期内
- 2.未按产品说明书的要求使用、维修、保管而造成损坏的损坏
- 3.因火灾、水灾、雷击等不可抗拒的自然灾害造成的损坏
- 4.由于擅自拆机、改造等人为原因造成损坏
- 5.由于用户使用不当造成损坏

以下情况不属三包范围

- 1.缺少或损坏或不在三包有效期内
- 2.未按产品说明书的要求使用、维修、保管而造成损坏的损坏
- 3.因火灾、水灾、雷击等不可抗拒的自然灾害造成的损坏
- 4.由于擅自拆机、改造等人为原因造成损坏
- 5.由于用户使用不当造成损坏

