


Operation image:

Imagen de operación / Image de l'opération:

- 1 - Touch Speaker Meahl/There levels light | Altavoz tactil/Meahl Luz de nivel | Touch Speaker Meahl y a un voyant lumineux
- 2 - Bluetooth/charge indicator | Indicador de carga/Bluetooth | Indicateur Bluetooth/charge
- 3 - Mode Switch | Interruptor de modo | Changement de mode
- 4 - Previous track button | Botón de pista anterior | Bouton de piste précédente
- 5 - Play/pause | Reproducci/pausa | Lecture/pause
- 6 - Next track button | Botón de pista siguiente | Bouton de piste suivante
- 7 - MIC | MIC | MIC
- 8 - TF card slot | Ranura para tarjeta TF | Emplacement pour carte TF
- 9 - 3.5 mm audio jack | Conector de audio de 3,5 mm | Prise audio 3,5 mm
- 10 - USB socket (charge/data) | Puerto USB para carga/datos | Prise USB charge/données
- 11 - On/Off Button | Botón On/Off | Bouton On/Off

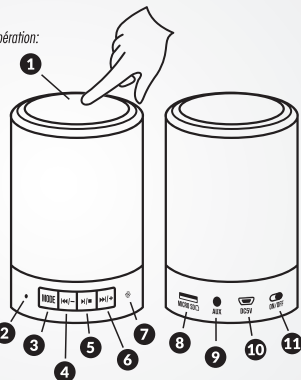

ENGLISH

Fawnest FN007 Bluetooth Speaker with Night Light - Quick Guide Thank you for choosing Fawnest!

This guide covers the basics of your FN007 Bluetooth Speaker with Night Light. For the full manual, please visit www.fawnest.com/fn007_manual.

Product Features

- **Bluetooth Speaker:** Connects to devices for audio playback.
- **Touch Control:** Adjust brightness and color modes (**note:** sensitivity may vary if fingers are dry).
- **Color Modes:** Warm White with adjustable brightness and Multi-Color Mode.
- **FM Radio:** Requires antenna (not included).
- **Hands-Free Calling:** Answer calls on the speaker.
- **TF Card & AUX Input:** Supports playback from TF cards and AUX devices.

Specifications

Lamp Power: 1.6W | Battery: 3.7V (backup only)
Dimensions: 89.5mm x 122mm | Charging Port: MicroUSB

Instructions

Power On/Off

Slide the switch to "ON" to power on; "OFF" to turn off. Starts in Bluetooth mode.

Bluetooth Mode

1. Activate Bluetooth on your device and pair with "FN007."
2. For calls, press "Play/Pause" to answer or end.

FM Mode

1. Enter FM Mode using the Mode button.
2. Connect an antenna (or earphones) to the AUX jack. **Note:** an antenna is **not included**; depending on reception, earphone cables may work.
3. FN007 will scan and save available stations. Use "Previous Track" and "Next Track" to change stations.

TF Card & AUX Playback

- Insert TF card for auto playback.
- AUX input available with 3.5mm jack.

Light Function

1. **Warm White Mode:** Tap to adjust brightness (3 levels).
2. **Multi-Color Mode:** Long press to cycle through colors:
 - Color cycles: All colors, gradual transition, Red, Blue, Green, Purple, Yellow-Green, Light Blue.

Charging

Charge fully before first use (approx. 4 hrs). Red light indicates charging; turns off when complete.
Note: Backup battery lasts **10–20 mins** for memory preservation only. Keep connected to power for normal use.

Troubleshooting

Issue	Solution
No Bluetooth	Pairing Ensure device is in pairing mode; retry.
Distorted Sound	Check volume and battery.
FM Not Working	Ensure antenna connection.

For the full manual, visit www.fawnest.com/fn007_manual

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2BMXR-FN007