

USER MANUAL Speaker:WS-598

Information to User

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

USER MANUAL Speaker:WS-598

Charge External 5V charge for this machine , LED light flash when charging

*M/⊕ Hold:ON/OFF,Short Press:mode switching

Wireless Pairing :Turn on the mobile phone wireless interface and search for the model name and click to pair.

The Key Operation

1,"M/⊕"Short press:Wireless /Selfie/USB/TF/RADIO/AUX

2,"⏮/V - "Long press:for the volume reduction

Short press:radio mode for the last station,MP3 mode is last song.

The self timer mode short press"⏮/V -"button for the self timer function (only for ios mobile phone system)

3,"⏮/V + "Long press:the volume up.

Short press:Radio Mode for the next station,the MP3 mode for the next song. The self timer mode short press"⏮/V + "button for the self timer function (only for Android phones)

4,"⏮"Mp3/radio/Wireless state short press play/pause.Radio status long press for the auto channel search.

"⏮"Incoming short press the"⏮"key to answer the phone

Long press"⏮"to hang up the call,short press the"⏮"key to "switch between phone calls/Wireless speakers answer"

Wireless status long press the"⏮"key to dial back the last call

The Self Timer Function

click"M",from the Wireless mode to the self timer mode

And search for "shutter" and pair . Turn on mobile phone camera interface,press "⏮/V - "or"⏮/V + "button to take pictures

Attached:Android system requires 4.2.2 IOS requires version 6.0 and above,the other version does not support.Mobile phone with independent pictures button generally do not support

TWS Operation

Turn on two wireless speakers at the same time

II.Double-click the"⏮"key(Heard "tick"is ok)

II.Wait for the two wireless speakers to interconnect(Two speakers also appear the sound at the same time,express connect success)

V.Turn on the phone wireless,search for the matching name for another wireless speaker and connect it

V.Two wireless speakers were connected successfully,and can start playing music

Remark:

1.Two wireless speakers that already connected successfully,can automatic connect another wireless speaker when turn on the speaker again

2.If no automatic connection,please turn off the wireless,restart two speakers(didn't need press any key)

3.When the two speakers automatic connect,turn no the phone wireless again and connect the two wireless speakers