

User Manual

 
Note:

1. Please place the earbuds in the correct position for charging;
2. Batteries (battery packs or combination batteries) shall not be exposed to environments such as sunlight, fire, or similar overheating;
3. Listening to music at high volume for a long time can cause hearing damage. Please adjust the volume to the appropriate level when using this device;
4. Do not use this device in thunderstorm weather, as thunderstorms can cause abnormal fluctuations in the power supply and damage the device;
5. Bluetooth products are all affected by the environment and distance. Please do not use them near the ring mirror with high electromagnetic interference and radiation;
6. Do not remove or modify earbuds for any reason, as this may cause malfunction or burning of the earbuds, which are not covered by the warranty
7. If not in use for a long time, please charge it every 30 days to prevent the product from running out of power and unable to start.

Product Specification

Bluetooth Version:	V6.0
Wireless Transmission Distance:	≥ 10 Meters
Drive Unit:	13 mm, 32 Ω
Frequency Range:	20 Hz~10 KHz
Speaker Sensitivity:	115 ± 3 dB
Music Playback Time (60% volume):	Approx 3.5Hours
Headphone Talk Time (60% volume):	Approx 2 Hours
Battery life with Charging Case:	Approx 60 Hours
Charging Time:	Approx 1.5 Hours
Standby Time:	Approx 3 Months
Headphone Battery Capacity:	30 mAh
Charging Case Battery Capacity:	500 mAh
Charging Case Size:	61.3 x 24.8 x 66 mm
Total Weight:	Approx 66.5 g
Net Weight (Earphone x1pc)	Approx 3.9 g

Earbuds touch function description




Click: Music Pause/Play, Call Answer/End
Double click: Left/Previous song, Right/Next song
Three clicks: Left/Volume down, Right/Volume up
Left long press for 2 seconds: Voice assistant
Right long press for 2 seconds: Switch between noise-cancelling and transparency functions

Earbuds user manual



Open the cover and the blue LED lights of the earbuds in the charging case flash alternately: Starting up or pairing
Shortly after opening the cover, one earbud's blue light flickered, and the other earbud's light Intermittent blue flashing light on earbuds: The earbuds are successfully connected to the terminal and working properly
Both earbuds do not light up: Power off

 Instructions for using the charging case



Put the earbuds into the charging case and close the cover before charging them. The touch screen can control the noise-cancelling and transparency functions of the earbuds, and more languages can be set.
The LCD screen of the built-in charger displays the charging symbol and the current charging status.
The button at the rear of the charging case is the on screen/reset button. Short press to turn on/off the screen, long press for 10 seconds to reset



Open the cover, wait for the blue icon in the upper left corner of the charging case to change from red to white, then turn on the bluetooth function of the phone, search for the bluetooth name and pair it to use

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.