



bliss  
B1  
Mobile Phone  
User Manual

# Contents

<b>1 Safety .....</b>	<b>3</b>
1.1 Safety Precautions .....	3
1.2 Using your phone safely .....	3
<b>2 Understanding your Phone .....</b>	<b>6</b>
2.1 Overview .....	6
2.2 Description Icons .....	7
2.3 Charging the battery.....	8
2.4 Power OFF/Reboot .....	8
2.5 Enter Main Menu .....	8
2.6 Enter Sub Menu .....	9
2.7 Screen Lock .....	9
2.8 Adjust the volume .....	9
2.9 Flashlight .....	9
2.10 Input method(T9 Keyboard) .....	9
2.11 Silent (vibration) mode.....	10
2.12 Speed dial.....	10
<b>3 Using your Phone .....</b>	<b>10</b>
3.1 Main Menu & Its Functions .....	10
<b>4 Taking Care of your Device .....</b>	<b>13</b>
4.1 Disclaimer .....	13
4.2 Safety tips for using mobile phones and batteries .....	14
4.3 Battery disable: .....	14
<b>5 Mobile network compatibility.....</b>	<b>15</b>
<b>6 Warning and SAR .....</b>	<b>15</b>

# 1 Safety

## 1.1 Safety Precautions



Please read through the following briefings carefully and act in accordance with these rules, so as to prevent causing any danger or violating any law.

Use cell phone when the signal strength is good. Keep your calls short or instead use headset or send a text message.

If you are using a Bluetooth headset device, please make sure it has a low power emitter.

Reduce the effects of electromagnetic waves, please use properly.

According to the management measures of low power radiating electric motor.

## 1.2 Using your phone safely



### On The Road

Using a phone while driving is illegal in many countries. Please follow local laws and drive safely at all times.



### Near Sensitive Electronics

Don't use your phone near sensitive electronic equipment – particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment.

For more information about how your phone affects pacemakers or other electronic equipment, please contact the manufacturer or your local distributor.

Your phone may cause interference when used near TVs, radios or

automated office equipment.



#### While Flying

Your phone can cause interference with aircraft equipment. So it's essential you follow airline regulations. And if airline personnel ask you to switch off your phone, or disable its wireless functions, please do as they say.



#### In Hospital

Your phone may interfere with the normal operation of medical equipment. Follow all hospital regulations and turn it off when you're asked to by posted warnings or medical staff.



#### At a Petrol Station

Don't use your phone at petrol stations. In fact, it's always best to switch off whenever you're near fuels, chemicals or explosives.



#### Around Water

Keep your phone away from water (or any other liquid). It's not a waterproof model.



#### Making Repairs

Never take your phone apart. Please leave that to the professionals. Unauthorized repairs could break the terms of your warranty.



#### Broken Antenna

Don't use your phone if the antenna is damaged, as it could cause injury.



#### Around Children

Keep your mobile out of children's reach. It should never be used as a toy and it might not be good for their health.



#### Original Accessories

Only use the original accessories supplied with your phone or those

approved by the manufacturer. Using unapproved accessories may affect performance, make the warranty void, break national regulations on the use of mobile phones, or even cause injury.



#### Near Explosives

Turn off your phone in or near areas where explosive materials are used. Always obey local laws and turn off your phone when requested.



#### Emergency Calls

To make an emergency call your phone must be turned on and in an area where there's network coverage. Dial the national emergency number and press 'send'. Explain exactly where you are and don't hang up until help has arrived.



#### Working Temperature

The working temperature for the phone is between 0 Degree and 40 Degree Celsius. Please don't use the phone outside the range. Using the phone under too high or too low temperature might cause problems.



At very high volume, prolonged listening to a mobile phone can damage your hearing.

## 2 Understanding your Phone

### 2.1 Overview



## 2.2 Description Icons

Keys	Functions
Hang up	<p>Press this button to return home from any application or interface.</p> <p>When the screen is off, short press it to turn on the screen, short press it to turn off the screen when on the homepage. You can press it to reject the call or hang up during an incoming call or call.</p> <p>Long press it you could choose to Reboot phone or Shutdown the phone.</p>
Dial	<p>Press this button to view the call record.</p> <p>Enter the number on the dial and click to dial the number.</p>
Back	<p>On the standby screen, press to enter Call log quickly</p> <p>Press to return to the previous interface.</p>
Left soft key	<p>In the standby screen, press to enter Contacts quickly</p>
OK	<p>Click OK to confirm.</p>
Up	<p>In the standby screen, press the button to pop-up a "Notifications" window</p>
Down	<p>In the standby screen, press to enter Missed calls interface</p>
Left	<p>In the standby screen, press to enter Setting quickly</p>
Right	<p>On the standby screen, press to enter the Calendar</p>

Numeric keyboard (0~9, *, #)	Edit interface or dial interface to enter characters via numeric keypad. Long press * to lock or unlock. Long press the # key to switch the vibration (silent) mode; Dial interface long press # to call out +, P (Add 2-sec pause), W (Add wait) Long press the 0 key to switch the flashlight on and off
------------------------------------	--

## 2.3 Charging the battery

The rechargeable Li-ion battery that comes with your phone is ready to be used, but is not charged full. It is easy to do & can be done in 4 simple steps below:

1. Connect the charger to your phone, and plug it into a socket.
2. The battery icon in the corner of the screen will display a battery icon with a lightning bolt, indicating that it is charging.
3. When fully charged, the battery icon will appear as a battery icon without lightning, indicating that charging has stopped.
4. Disconnect the charger from your mobile, and unplug.

## 2.4 Power OFF/Reboot

Long press the hang up key to power-OFF/Reboot the phone.

## 2.5 Enter Main Menu

After unlocking the screen, click OK to enter the main menu, where all your applications will be displayed.

## **2.6 Enter Sub Menu**

Once at the main menu, click the icon to select the submenu, press Back Key to return to the previous menu, and press the Hang up key to return to the home screen.

## **2.7 Screen Lock**

On the home page, you can short press the hang up key or long press the "\*" key to switch out the screen.

## **2.8 Adjust the volume**

1. We can adjust the volume of each type through Settings -> Sound.
2. In the interface of playing video or playing music, we can use the "down" key to decrease the media volume, and the "up" key to increase the media volume.
3. In the call interface, we can use the "down" key to lower the call volume, and the "up" key to increase the call volume.

## **2.9 Flashlight**

When the screen is displayed on the home page, long press the numeric key "0" to turn on the flashlight or turn off the flashlight.

## **2.10 Input method(T9 Keyboard)**

In the editing interface, you can enter characters by pressing the numeric keyboard. The default language of the phone's input method is English. To add other languages, tick the desired ones in Setting -> T9 Keyboard -> Languages.

(After you select a language you have to press Load Selected.)

1. Short press the # key, you can call the special character panel.
2. Long press # key, you can switch the input method language.
3. Short press the \* key, you can switch the input method settings.

## 2.11 Silent (vibration) mode

You can also press and hold the number "#" key to switch the Silent mode quickly.

## 2.12 Speed dial

Press and hold another numeric key that is not 1 to set speed dial. Long press 2~9 number keys for speed dial setting.

# 3 Using your Phone

## 3.1 Main Menu & Its Functions

The middle key enters the main menu.

View the list of functions available in your phone.

### 1. Contacts

To see your list of Contacts. In Contacts, you can select the location SIM or phone, and enter the name and phone number. Press the Save key to save the contact.

### 2. Call Log

You can see two parts of all and missed calls.

In All, you can view missed calls, dialed calls and received calls. Electricity and all incoming calls. You can select any call record and press the dialing key to make a call. You can also select the option to clear the call log.

### 3.Phone

When the network provider logo appears on the screen, you can dial or answer the phone. The display on the top right corner of the signal display the network signal strength. In the settings, you can set call restrictions, call forwarding, call display, call waiting, etc.

### 4.Calendar

Enter the calendar interface to check the year, month or date. To create new events in calendar, just press Menu button and select New event. Input Event name, Location and so on and set the time you want it to remind you.

### 5.Alarm

First set the clock time. Then you can Check/Uncheck the “Repeat” or “Vibrate”. Choose different ringtones for alarm from “Cesium”. If you want to add label to the alarm clock, just select from “Label” to input content. When the alarm clock is going off, you can select “Snooze” or “Dismiss” from the interface.

6. Calculator. This feature allows you to carry on some simple calculations. Touch the numbers on panel to input and choose an calculation symbol, such as +, -, ×, ÷. Press “=” to get the final result.

### 7.Tools

This menu including Calculator, Alarm Clock, Calendar Timer, Stopwatch, Calendar and so on.

- ①Note. You can create, edit, view, and manage notes
- ②Calculator. This feature allows you to carry on some simple calculations.
- ③Alarm clock First set the alarm time. Then set repeat or shock Move. When the alarm goes off, you can either snooze or turn it off.
- ④Calendar. You can create New event in calendar.
- ⑤Timer This function can be reminded periodically.
- ⑥Stopwatch This function can be timed.

- ⑦The World Clock can optionally display the world city time.
- ⑧Flashlight. Press the Ok key to switch the flashlight on and off.

## 8.Settings

- ① Network: SIM card preference configuration and airplane mode can be selected.
- ② Call setting: Set the Sounds and vibration of the phone, Call forwarding, Call barring, Call blocking and Voicemail.
- ③ Bluetooth: Can be paired with Bluetooth devices.
- ④ Battery: Displays battery information. Power saving mode can be turned on or off.
- ⑤ Display: Set the brightness of the phone, sleep time and font size.
- ⑥ Sound: Select prompt volume, alarm volume, ring volume, also vibrate for calls, do not disturb preferences, phone ringtone.
- ⑦ T9 Keyboard: Can choose the languages you often use in TT9 Settings.
- ⑧ Security settings screen lock, SIM card lock, show password.
- ⑨ System:

Language setting: multiple languages can choose the language you want to apply.

Date and time: mobile phone can be changed to automatically judge the date and time

Item and manually change the date and time.

Reset options: Bluetooth can be reset and all data can be cleared

Return to the factory state.

View mobile phone status data on mobile phones, including battery status

Battery power, SIM card status, IMEI, Bluetooth address, serial number

Information such as startup cumulative time.

9. File Manager: Can Create folder, Search, Sort folder, also can select the folder to do Cut, Copy, Rename, Delete etc.

## 4 *Taking Care of your Device*

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Always keep the small parts of the phone away from children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use indoor chargers.

Use a dry soft cloth to wipe general dirt.

Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched or could even result in the fading of color.

### 4.1 **Disclaimer**

This manual is without warranty, position expression or other implication in any form. The products, specifications and information mentioned in this manual are for reference only and are subject to change without prior notice.

## **4.2 Safety tips for using mobile phones and batteries**

- Precautions for mobile phone/battery related promotion
- 1. Please be careful with your mobile phone and its accessories at all times and keep it in a clean and dust-free place.
- 2. Do not expose mobile phones or accessories to open flames or lit objects.
- 3. Do not expose the mobile phone or its accessories to liquid, moisture, or high humidity.
- 4. Do not drop, throw, or attempt to bend the phone or its accessories.
- 5. Do not use harsh chemicals, cleaning solvents or sprays to clean the device or its accessories.
- 6. Do not paint the phone or its accessories.
- 7. Do not attempt to disassemble the phone or its accessories. Disassembly should only be performed by authorized professionals.
- 8. Do not expose the mobile phone or its accessories to extreme temperatures.
- 9. Please check your local regulations regarding the disposal of electronic products.
- 10. Please do not put the phone in the back pocket, so as to avoid crushing the phone when sitting or squatting down.
- 11. Mobile phones should not be charged while operating (e.g., talking...)
- 12. Use the original charging device to charge your mobile phone.

## **4.3 Battery disable:**

- 1. Please do not short-circuit the battery to avoid damaging the battery, generating heat and causing fire.
- 2. It is forbidden to put the battery under high temperature or throw it into fire to avoid explosion.

- 3. Do not attempt to disassemble the battery.
- 4. If the battery is used for a period of time, please discharge it and store it in a dry, dark and cool place.
- 5. Please stop using the battery and charger when they are damaged or obviously aged.
- 6. Please return the waste battery to the supplier or put it in the designated recycling point, instead of putting it in the general household garbage.
- 7. Do not connect or store the battery with metal conductors, such as necklace, hair clip, etc.
- 8. Do not knock or throw the battery.
- 9. The moisture-proof sticker is discolored (red).
- 10. Do not charge near the fire source or in a hot environment.
- 11. If the mobile phone has an automatic power failure, if it is still not ruled out after replacing another battery, please send the battery together for repair and inspection.
- 12. If the battery emits smell, heat, discoloration, deformation or any abnormality occurs during charging and storage, please take it out of the device or charger immediately and stop using it.
- 13. Do not charge the mobile phone for a long time. After the mobile phone is fully charged, please remove the mobile phone within 1 hour to avoid hidden dangers caused by overcharge.

## 5 Mobile network compatibility

Works with global unlocked carriers buyer must check with network if compatible with phone.

## 6 Warning and SAR

Any Changes or modifications not expressly approved by the party responsible

for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, tests for each phone are performed in positions and locations as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 5 mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.