



Printer manual

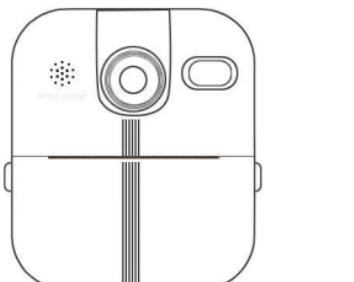

Please read the user manual carefully before using the product. Contains important information, please keep it safe for future use.

Warning: Contains small parts, suffocating. Dangerous, not suitable for children under three years old.

Button/Interface Description

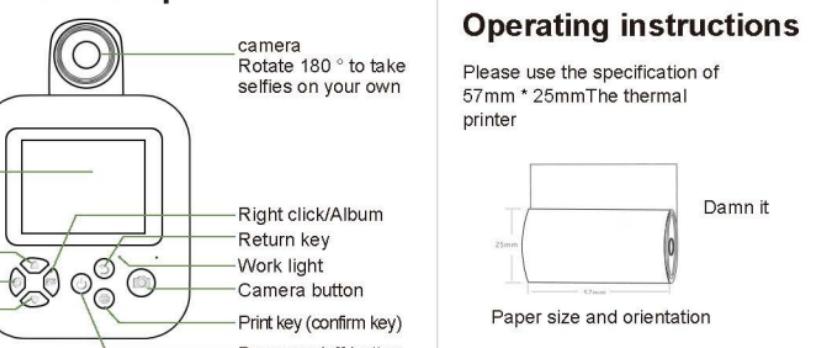

Power on

Press and hold the power button, and the machine will automatically turn on.

print

Instant shooting and shooting function
A. Press the print button a on the camera interface until it reaches the display screen

There is a print icon in the upper middle that appears as 'c'.


B. Press the shutter button b to take a photo. Print immediately after taking photos.

Replay printing

A. Press the replay button d to enter the replay interface;

B. Press the up and down arrow keys to select content;

C. Press the photo button b to print;

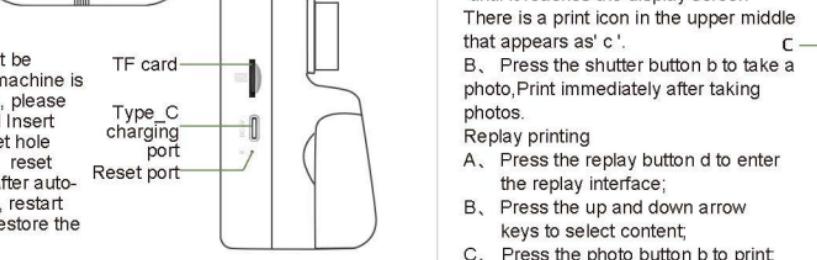

Important Notice:

If the camera cannot be turned on or off, if the machine is stuck or malfunctioning, please use a toothpick or steel. Insert the needle into the reset hole and press and hold the reset button for 2 seconds. After automatic power on and off, restart the machine. You can restore the factory settings.

Operating instructions

Please use the specification of 57mm * 25mm. The thermal printer

camera: Rotate 180° to take selfies on your own

display: Right click/Album

Up key: Return key

Left click: Work light

Settings: Camera button

Down key: Print key (confirm key)

Head sticker: Power on/off button, lock screen

Rotating lens: Paper size and orientation

Capable of taking selfies: Paper hole

Horn hole: Compensation lamp

Paper hole: Paper storage bin

Open cover groove: Paper storage bin

Take photos/selfies

1. Press the power button to turn on the device;

2. Enter the first icon in the first row and take a photo on the photo interface. The lens can be rotated 180° for selfie mode;

3. Press the shutter button to take a photo;

4. Press the replay button to view.



Press down on the opening slot with your fingers. Drive outward in the direction of the arrow



picture recording

1. Press and hold the power button to turn on the device;

2. Select the first and second row icons, press the photo button to confirm, and enter the recording mode;

3. Rotate the lens 180° to switch between selfie and video recording at any time;

4. Press the shutter button to start recording;

5. Press the shutter button again to save the recording;

6. Press the album button (right-click) to view captured videos;



print

Instant shooting and shooting function

A. Press the print button a on the camera interface until it reaches the display screen

There is a print icon in the upper middle that appears as 'c'.

B. Press the shutter button b to take a photo. Print immediately after taking photos.

Replay printing

A. Press the replay button d to enter the replay interface;

B. Press the up and down arrow keys to select content;

C. Press the photo button b to print;

time setting

1. Press the settings key, then press the down key to find the date and time option;

2. Find the formatting option and press the photo button to confirm;

3. Press the up and down keys to select the mode;

4. Press the photo button to confirm formatting, and press the return button to cancel;

Language settings

1. Press the settings button to enter and find the language settings option, then press the photo button to confirm;

2. The third icon in the first row allows you to view images or a certain video clip;

delete

1. Enter the third icon album in the first row; Press the photo button to confirm;

2. Left click to select the image or video that needs to be deleted;

3. Press the up and down keys to select the mode, and the photo button is the confirm button;

4. Press the return button to cancel the deletion;

charge

When the machine shows a low voltage prompt and shutdown, it needs to be charged,

The charging cable uses a Type-C plug, and the power adapter uses DC 5V/2A. When charging, the machine displays a blue light and goes out when fully charged.



Flash settings

1. Press the settings button to enter the settings interface, and confirm with the photo button;

2. Press the up and down keys to select the flash mode;

3. Press the photo button to confirm the selection;

Multiple effects shooting

Continuous shooting

Cancel the printing function and press the key twice in a row;

Big head sticker photoshoot

 
 
On the photo interface, press the up and down keys to switch between the headscarf filter;

Loop shooting

Cancel the printing function, press the key twice in a row, and press the down key to switch;

Scheduled shooting

Cancel the printing function, press the key twice in a row, and press the down key to switch;



Key tone control

1. Press the settings button to enter the settings interface, and confirm with the photo button;

2. Find the key tone and press the up and down keys to select the on or off state;

3. Press the photo button to confirm the selection;

Settings: print after capture, button sound, date stamp, etc

format

Print density

1 to 7 (Total 10 options);

Print mode

Gray print technology, Dot print technology

Image Quality

Sets the quality of photos.

11M, 8M, 5M, 3M, 1M, 2048M

Flash lamp

Open flash lamp: Off, it will not be open

Auto flash lamp: Open

Video resolution

1080P, it will show HD on video screen.

720P, it will show HD on video screen.

Date stamp

Enabled to display the time on photos

Language

Multiple languages are available

Beep/Beep sound

On the key tone is on

Off the key tone is off

Screen savers

0, 3mins, 5mins, 10mins

Auto power off

Set the automatic shutdown time

0, 3mins, 5mins

Format

Clear all data (Note: All data will be cleared and please be careful to set)

Date/time

Set the machine time

Default setting

Reset

Version

View the machine version number

FC WARNING

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

The built-in 7.4V battery is nonremovable and nonreplaceable. If it is damaged, please contact service or assistance repair. The charger is used by an adult or under adult supervision. The charger is not for playing. Use the device according to the charging specifications of 5V/2A. Toys should be charged before cleaning. The device is disconnected.

After entering photo mode: Timelapse: After this long [a], [b], [c] appears on the screen, short press the [d] key to achieve timelapse shooting. 3,5,10,15,20s. Burst shooting: After this long [a], [b], [c] appears on the screen, short press the [d] key to achieve burst shooting on the screen, 3pic, 5pic, 10pic. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Settings: print after capture, button sound, date stamp, etc