

# Smart Glasses User Manual


Thank you for choosing our company's smart glasses. You can comprehensively understand the usage of the device by reading this manual. This device mainly connects to your phone through Bluetooth for adaptation and provides various practical functions and services to facilitate your operation of the phone. Our company reserves the right to modify the content of this manual without prior notice.

This product does not support IP67 waterproof rating, and cannot be worn in rain, hand washing, swimming, hot showers or saunas to prevent water vapor. If the smart glasses are damaged due to water ingress caused by improper use, our company does not provide free warranty.


## Operating instructions:

### Touch button:

1 Left touch button: located on the left side of the glasses as follows.

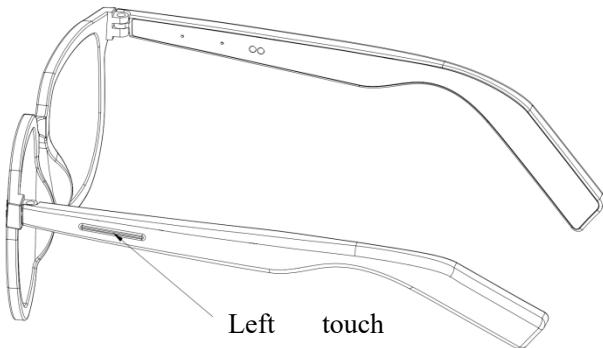

2 Right touch button: located on the right side of the glasses as follows.

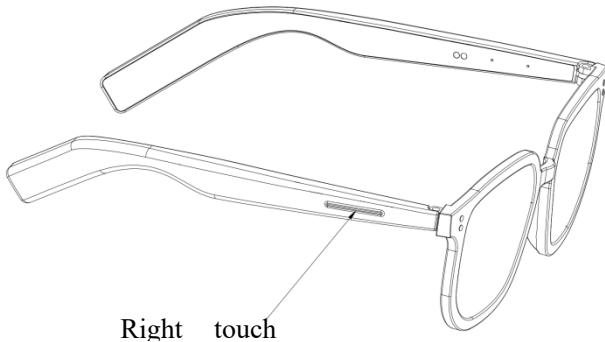

### Touch control mode:

Left touch button: single press, double press, triple press, long press.


Right touch button: single press, double press, triple press, long press.

Note: When the touch button is pressed, there will be a prompt sound.

### **Charging instructions:**

Magnetic charging: When charging, place the magnetic charging head on the corresponding charging contact points on the left and right legs of the glasses. The charging head will automatically attract and charge. The red light will light up during charging, and the green light will light up once fully charged. The device will remain turned off during charging. Supports computer USB or mobile 5V standard charger, which can be fully charged in about 120 minutes.

Note: Low battery warning: There is a warning sound for low battery, and the red light flashes once to turn off. The warning is given every 5 minutes until the device is turned off;

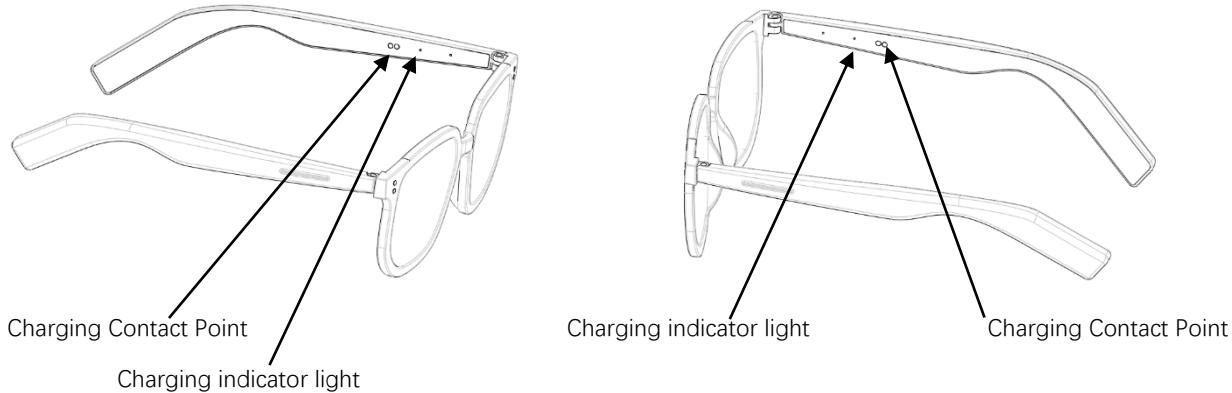

### **Connection between smart glasses on/off and mobile phone:**

This smart glasses does not support apps.

- 1 Power on: Long press the left touch button for 2 seconds to turn on the left glasses; Long press the right touch button for 2 seconds to open the right glasses; At this moment, the indicator light alternates between red and green;
- 2 Shutdown: Long press the left touch button for 5 seconds to turn off the left glasses; Long press the right touch button for 5 seconds to turn off the right glasses;
- 3 Standby: After turning on, if the timing is not correct, the traffic lights will flash for 3 minutes and then automatically shut down;
- 4 Connect your phone: Open the Bluetooth settings on your phone, turn on the Bluetooth switch, and start searching for smart glasses. The Bluetooth name for the smart glasses is V1 pro. Select V1 pro and start pairing. After successful pairing, the indicator lights on both sides of the smart glasses will turn off, and you will see that V1 pro is connected in the Bluetooth device list on your phone.

### **Smart glasses usage operation:**

First, make sure that both sides of the smart glasses are turned on and maintain a Bluetooth connection with the phone.

## 1 Phone answering/hanging up:

1. Answering incoming calls: Press the left touch button (or right touch button) once to connect the call;
2. Hanging up the phone during a call: Press the left touch button (or right touch button) twice to hang up the phone;
3. Three party phone call answering/hanging up:
  - 3.1. Press the left touch button (or right touch button) once to hold the current call and answer a third-party call;
  - 3.2. Press the left touch button (or right touch button) twice to maintain the current call and reject third-party incoming calls;
  - 3.3 Long press the left touch button (or right touch button) for 2 seconds to hang up the current call and answer the incoming call;
  - 3.4 Three party call switching: After a third-party call is connected, press the left touch button (or right touch button) once to switch the call;

## 2 Listening to music operation:

1. Play/Pause Music: Open the mobile music playback software, press the left touch button (or right touch button) once to play music.

Press the left touch button (or right touch button) once again to pause music playback.

2. Volume increase/decrease: When playing music, press the right touch button three times to increase the volume; Press the left touch button three times to reduce the volume.
3. Switch songs: When playing music, press the right touch button twice to switch to the next song, and press the left touch button twice to switch to the previous song.

3□ Open the voice assistant: Press and hold the left touch button (or right touch button) for 2 seconds to open the voice assistant.

4□ Remote control camera: First, turn on the camera function on the phone, press the left touch button (or right touch button) three times with a single button, and then remotely control the phone to take a photo.

Note: Some phone models may not be compatible with 3-press photography, and may be able to take photos with just one press (some phones have compatibility issues with photography).

## **Warranty Description:**

1. If there are any quality problems caused by manufacturing, materials, design, or other reasons during normal use of this product, the motherboard will be covered by a one-year free warranty from the date of purchase, and the battery and charger will be covered by a six-month warranty.

2. Due to personal faults caused by the user, free warranty is not provided, as follows:

1 Malfunctions caused by unauthorized disassembly, modification of glasses, etc.

2 Malfunctions caused by accidental dropping during use.

3 Any damage caused by human error or third-party negligence, misuse (such as motherboard water ingress, external shock cracking, damage to scratches on peripheral components, etc.), is not covered by the warranty.

3. When requesting free warranty, please provide a warranty card with the purchase date and purchase stamp.
4. When users repair products, please take the products to our company or our distribution points.
5. All functions of the product are primarily based on physical objects.

Purchase date:	Customer Signature:
Product barcode:	Shop assistant signature:
Purchase store:	Store seal:

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.