


单页尺寸：73x99mm

Notice to user

- Please use a 5V3A / 9V2A/ 12V1.5A fast charge adapter/ power plug (not included) that complies with your local safety standards to power this device.
- Wearing a Metal or overly thick phone case may block/impede wireless charging transmission. Please remove your phone case when wireless charging your mobile phone.
- Product should be kept away from fire and not exposed to environment of 60°C /140°F or higher to prevent fire or other unpredictable hazards.
- Please stop using the product immediately If it shows any sign of swells or deforms.
- Not compatible with non-magnetic phone cases.
- Magnetic and metal attachments such as cards, keys, and pop grips will interfere with charging.

Overview

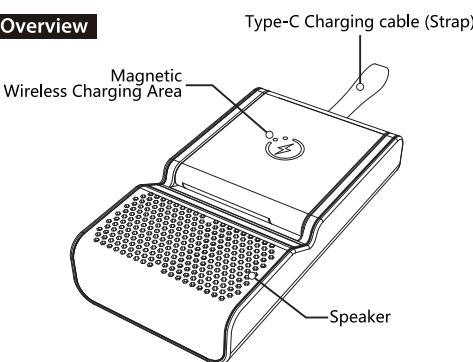

P1

Charge your mobile devices with the cables


- Connect devices that you wish to charge using the equipped Type-C charging cable (Strap) or;
- Connect the device that you wish to charge to the Type-C "In/Out" port on the LCB-801 with the device's charging cable. The LCB-801 will begin charging with the battery level indicator lights up showing the battery level.

*If charging does not start automatically, please press the **[]** button to activate the charger.

Phone Stand


Flip open the wireless charge area, it can be used as a phone stand.

▲Note: To use the stand, phone should be placed horizontally.

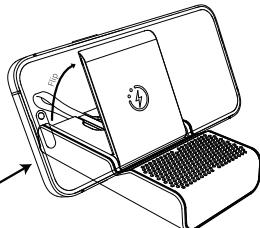

Using the speaker

 
Bluetooth Pairing



Press the [**◀**] or [**▶**] button to switch the songs. Press and hold the [**◀**] or [**▶**] button to decrease/increase volume. Press the [**▶▶**] button to play/pause the music.

*Long press the [**▶▶**] to disconnect Bluetooth.

P4

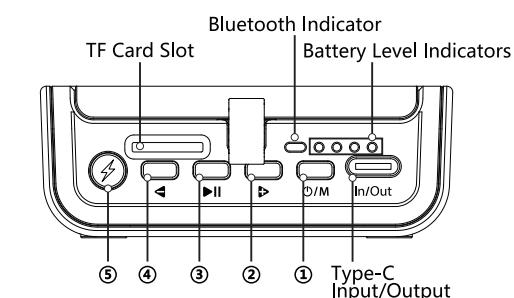

Quick guide

Speaker Controls:

①	<ul style="list-style-type: none">Long press: Bluetooth On/OffShort press: Switch between BT/TF card mode
②	<ul style="list-style-type: none">Short press: Play the next song.Long press: Increase volume.
③	<ul style="list-style-type: none">Short press: Play/PauseLong press: Disconnect/reconnect Bluetooth device.
④	<ul style="list-style-type: none">Short press: Play the previous song.Long press: Decrease volume.

Power Bank Control:

⑤	<ul style="list-style-type: none">Short press: Check battery level/Activate charging function.Press twice: Turn off charging function. (Battery level indicator off)
----------	---


What's included

LCB-801 Wireless charging power bank x1,
USB Type-c power cable x1.

Charge the LCB-801 before use

- Before first use, please fully charge this power bank.
- Use the provided USB charging cable and connect to the "In/Out" port on the LCB-801 and the other end to a qualified Fast Charge power plug/port/wall charger (Not included).
- The battery level indicator will blink when it is charging.
- All 4 battery level indicators light up when the power bank is fully charged

Wireless Charging

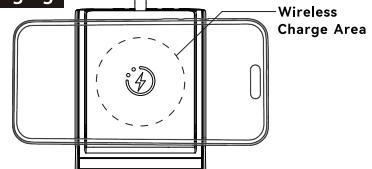

Place the phone on the magnetic wireless charger area to charge. Wireless charging will start automatically.

*If wireless charging does not start automatically, please press the [] button to activate the charger.

▲Note1: Metal or thick phone cases may block the wireless charging transmission remove the case if necessary.

▲Note2: Fast charge will be disabled when this power bank is charging more than one devices.

▲Note3: Fast charge will be disabled when this power bank is being charged.

P2

P3

TF Card Mode

Prepare a blank TF card (32GB or less) and save the songs (MP3 / WAV recommended) into the card. When the speaker is power on, insert the card into the TF slot of the device. The device will automatically play the music in the card. Press the [**◀**] or [**▶**] button to switch the songs in the TF card. Press and hold the [**◀**] or [**▶**] button to decrease/increase volume. Press the [**▶▶**] button to play/pause the music.

▲Note: The speaker automatically switches to Bluetooth mode if there is no song in the TF card.

Specifications

Model:	LCB-801
Bluetooth:	V5.3
Battery capacity:	5000 mAh
Power input:	5V3A/9V2A/12V1.5A
Type-C output:	4.5V5A/5V3A/9V2.2A/12V1.67A
Cable output:	5V3A/9V2.2A/12V1.67A
Wireless charge:	5W/7.5W/10W/15W
Speaker power:	3W
Size:	130x70x25.7mm



Wireless Power Bank With Speaker

LCB-801

USER GUIDE

P5

封面

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction