

• USB mode

Prepare a blank USB Drive and save the songs (MP3 / WAV recommended) into the USB Drive. Then insert the USB Drive into the USB port of the device. The device will automatically play the music in the USB Drive. Press the **【◀】** or **【▶】** button to switch the songs in the USB Drive. Press the **【●】** knob to play/ pause the music.

- Note:** 1. Too many files or folders stored in the USB Drive may prevent the device reading the songs in the USB Drive.
- 2. The speaker automatically switches to other mode if there are no songs in TF card.
- 3. Do not store other files except music files (MP3, Wav) in the USB Drive to avoid music reading failure.

• AUX-In mode

Please connect the AUX cable into AUX In jack of the VS-881, and connect the other end to an audio source. Press the **【Mode】** button repeatedly to switch to AUX Mode. You can short press the **【●】** knob to mute/unmute the speaker.

 
• EQ Mode

Press the **【EQ】** button to enter EQ mode. Press the **【◀】** or **【▶】** button to select your desired EQ presets. Once confirmed, wait a few seconds or press the **【●】** knob to exit EQ mode.

• Setting the time

- ① Short press the **【Time】** button to set the time.
- ② Press the **【◀】** & **【▶】** buttons or turn the **【●】** knob to adjust the parameters (hours / minutes). Press the **【Time】** button to confirm.


The setting process is as follows:



• Setting Alarm

- ① Press the **【●】** button to set the alarm.
- ② Press the **【◀】** & **【▶】** buttons or turn the **【●】** knob to adjust the parameters (hours / minutes / alarm tones / alarm volume). Press the **【●】** button or the **【●】** knob to confirm.
- ③ The alarm icon **【●】** will appear when alarm is enabled. Long press the **【●】** button to Enable/Disable the alarm.

 The setting process is as follows:



• Dismiss the alarm

When the alarm is ringing, press other buttons except the **【●】** Knob to stop ringing. The alarm will be dismissed for the current day but still enabled for the next day and after.

• SNOOZE

When the alarm is ringing, short press the **【●】** knob to snooze for 5 minutes. Then the alarm will ring again.

• Celsius/Fahrenheit Format

Long press the **【▶】** button in clock mode to switch the temperature display between Celsius or Fahrenheit format.

• Dimmer: Adjust screen brightness

In clock mode, short press the **【●】** knob to adjust the display brightness between 3 levels (OFF, medium, bright).

• Charge the speaker

This device has a built-in rechargeable battery. To charge this device, use the provided USB Type-C charging cable and connect the USB tip of the cable to a standard USB-A fast charging adapter (Not included). The charging indicator (red) on the display appears when charging, and disappear when it is fully charged. (There will be repetitive audible notifications when the battery level of the device is low, please charge the device immediately.)

Specification

- Product mode: VS-881
- Bluetooth distance: ≥10m
- Speaker power: 8w
- Bluetooth: V6.0
- Size: 165 x 71.5 x 121.5
- Driver: 50mm full range



Wooden Wireless Speaker

VS-881

USER GUIDE

Hello! Let's get started!

Safety Instructions

Please read the following instructions. Failure to follow the instructions listed below may damage the device and/or may result in electric shock, fire and/or personal injury.

- Do not expose the device to direct sunlight
- Do not remove screws from or open the device casing by yourself
- To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture.
- Keep the electronic device away from water and other liquids
- Never charge the device with a damaged power cable.
- It is important to avoid placing the device or charging cable in close proximity to open flames and high heat devices such as stoves, heaters, or radiators
- Always place the device on a stable and level surface to prevent accidental falls.


Welcome

We would like to congratulate you on the purchase of the VS-881 wireless speaker. Please read this manual carefully before use.

What's Included


VS-881 speaker x1, Type-C charging cable x1

Button Functions

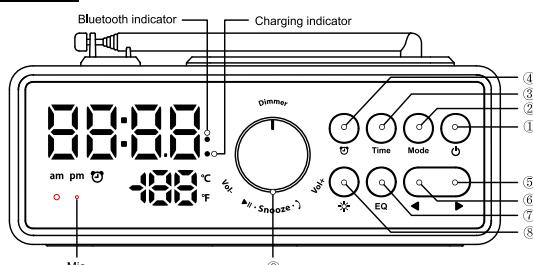

① Power	<ul style="list-style-type: none"> • Press & hold: Power on/off, • Press (when powered on): Enter/Quit clock mode.
② Mode	<ul style="list-style-type: none"> • Press to switch the mode: Pairing mode / Card player / FM radio / USB drive / Aux connection.
③ Time setting	<ul style="list-style-type: none"> • Press: Enter time setting; Confirm (When setting the time)
④ Alarm setting	<ul style="list-style-type: none"> • Press: Enter alarm setting; Confirm (When setting the alarm) • Press & hold: Enable/disable alarm
⑤ Next	<ul style="list-style-type: none"> • Press: Play the next song/radio station. • Press: Adjust parameters (time/alarm ringtones/alarm volume level) • Press & hold: Switch between Celsius/Fahrenheit
⑥ Previous	<ul style="list-style-type: none"> • Press: Play the previous song/radio station. • Press: Adjust parameters (time/alarm ringtones/alarm volume level)
⑦ EQ	<ul style="list-style-type: none"> • Press: Switch EQ presets
⑧ Light ring	<ul style="list-style-type: none"> • Press: Adjust the brightness of the LED light ring
⑨ Multi-function Knob:	<ul style="list-style-type: none"> • Press: <ul style="list-style-type: none"> ① "Snooze Button" (When the alarm rings) ② Play/Pause (BT mode, Card mode, USB mode) ③ Answer an incoming call/Hang up during a call ④ Confirm (When setting the time or an alarm) ⑤ Mute/Unmute (FM mode/AUX IN mode) ⑥ Dimmer: Adjust the brightness of display (In clock mode) • Press & hold: <ul style="list-style-type: none"> ① Reject an incoming call ② Full scan for radio stations ③ Disconnect paired device (BT mode) • Turn the knob: Increase/Decrease volume, adjust parameters (time/alarm ringtones/alarm volume level)

Overview

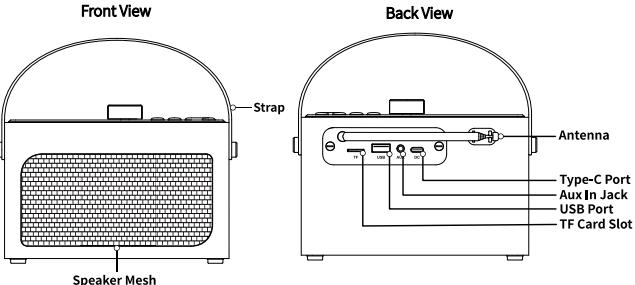

Operation

• Power on/off

Long press the **【●】** button for 3 seconds to power on the device. To use the device as a digital clock (clock mode), short press the **【●】** when the device is powered on.

• Mode

 
Repeatedly short press the **【Mode】** button to switch between five modes (Pairing mode / Card player / FM radio / USB drive / Auxiliary connection).

Note: 1. Card player mode or USB drive mode will be bypassed when card or USB drive is not detected.

2. The speaker will automatically switch to the related mode when a Card/USB is inserted.

• Bluetooth pairing

Use the **【Mode】** button to switch to Pairing mode → Turn on your phone's Bluetooth → Select "VS-881" on your phone → After successful pairing, the device prompts "paired" → Bluetooth pairing successfully.



*You can long press the **【●】** knob to disconnect Bluetooth.

• Handsfree speakerphone

The handsfree speakerphone function is enabled when the device is paired with your mobile device. Press the **【●】** knob to answer an incoming call. To decline a call without answering, press and hold the **【●】** knob during an incoming call. To end a call, press the **【●】** knob during a call.

Note: The user needs to face the front of the speaker, and it is better to keep the speaking distance from the "Mic" within 40cm.

• FM radio

Press the **【Mode】** button repeatedly to enter FM radio mode. Press and hold the **【●】** knob to discover stations automatically stations. Discovered stations will be saved automatically. Press the **【◀】** or **【▶】** button to switch channels. Press the **【●】** knob to mute and press again to unmute.

Note: Pull and expand the antenna when using the FM radio.

• TF Card mode

Prepare a blank TF card (32GB or less) and save the songs (MP3 / WAV recommended) into the card. Then insert the card into the TF slot of the device. The device will automatically play the music in the card. Press the **【◀】** or **【▶】** button to switch the songs in the TF card. Press the **【●】** knob to play/ pause the music.

Note: 1. Too many files or folders stored in the TF card may prevent the device reading the songs in the card.

2. The speaker automatically switches to other mode if there are no songs in the TF card.

3. Do not store other files except music files (MP3, Wav) in the TF card to avoid music reading failure.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.