

**Setting the time**

In clock mode → short press the [Time Set] to start setting time → Press the [ $\leftarrow$ ] & [ $\rightarrow$ ] or turn the knob to set hour → press the Multi-function Knob to confirm → Press the [ $\leftarrow$ ] & [ $\rightarrow$ ] or turn the knob set minute → press the Multi-function Knob to confirm.

**Note:** This device can automatically synchronize with your phone's time when it is connected to your phone by Bluetooth. However, this requires your phone to support the time synchronization function.

**Setting the alarm**

**1 Turn on the alarm**

In Clock Mode, long press the [Alarm] button to turn the alarm on or off. When the alarm is turned on, This icon [●] will appear and disappear when the alarm is turned off. The alarm is off by default.

**2 Set alarm**

In clock mode → short press the [Alarm] to start setting alarm → Press the [ $\leftarrow$ ] or [ $\rightarrow$ ] to set hour → press the Multi-function Knob to confirm → Press the [ $\leftarrow$ ] or [ $\rightarrow$ ] set minute → press the Multi-function Knob to confirm.

**3 Dismiss the alarm**

When the alarm is ringing, press other buttons except the multi-function knob to stop ringing. The alarm will be dismissed for the current day and ring again on the next day.

**4 SNOOZE**

When the alarm is ringing, short press the Multi-function Knob to snooze for 5 minutes. Then the alarm will ring again.

**EQ Mode**

Press & hold the Mode button to enter EQ mode. Turn the Multi-function Knob to select your desired EQ presets. Once confirmed, wait a few seconds or press the knob to exit EQ mode.

**Charge the speaker**

This device has a built-in rechargeable battery. To charge this device, use the provided USB Type-C charging cable and connect the USB tip of the cable to a standard USB-A fast charging adapter (Not included). The charging indicator on the display appears when charging, and disappear when it is fully charged. (There will be repetitive audible notifications when the battery level of the device is low, please charge the device immediately.)

**Specification**

Product mode: WD-700	Power input:
Bluetooth distance: ≥10m	Standard version (No wireless charger): Power input: 5V1A
Play time: 4-5 hours	15W wireless charger version:
Size: 200 x100 x 113.5mm	Wireless output: 5W/7.5W/10W/15W Power input: 9V3A
Frequency response: 50Hz-18kHz	
Speaker power: 8w	
Driver: 2.5"full range	

## Wooden Wireless Speaker

### WD-700 USER GUIDE

Hello! Let's get started!

#### Welcome

We would like to congratulate you on the purchase of your WD-700 Wireless Speaker. Please read this manual carefully before use.

#### What's Included

WD-700 device x1, USB Type-C x1, User guide x1

#### Safety Instructions

- Do not expose the device to direct sunlight
- Do not remove screws from or open the device casing by yourself
- To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture.
- The unit shall not be exposed to dripping or splashing and objects filled with liquids, such as vases shall not be placed on the unit.
- Never charge the device with a damaged power cable.
- Never put the device or charging cable near heat registers, radiators, stoves or heaters.
- Always put the device where it is not easily knocked over by persons in household or business.
- Never touch the device with wet hands.
- This device is only for the intended household or in-door use.
- Never use any detergents to clean any part of the unit.

P4 封底

P1 封面

**Overview**

**Button Functions**

- Long press [On/Clock] : Power On/Off
- Short press [Mode] : Switch mode
- Long press [Mode] : EQ mode
- Short press [Alarm] : Set alarm
- Long press [Alarm] : Enable/disable alarm
- Short press [Time Set] : Set time
- Short press [ $\leftarrow$ ] : Previous; Previous track/station (FM Mode)
- Short press [ $\rightarrow$ ] : Next; Next track/station (FM Mode);
- Multi-function Knob:**
- Short press: ① "Snooze Button" (When the alarm rings)
- Long press: ② Play/Pause (BT mode, Card mode, USB mode)
- Anti-clockwise rotation: ③ Answer an incoming call/Hang up during a call
- Clockwise rotation: ④ Confirm (When setting the time or an alarm)
- Long press: ⑤ Mute/Unmute (FM mode/AUX IN mode)
- Anti-clockwise rotation: ⑥ Reject an incoming call
- Clockwise rotation: ⑦ Auto search radio stations
- Long press: ⑧ Disconnect paired device (Bt mode)
- Anti-clockwise rotation: ⑨ Increase volume
- Clockwise rotation: ⑩ Reduce volume

**Operation**

**Power on/off**

Long press the [On/Clock] button for 3 seconds to power on the device. To use the device as a digital clock (clock mode), short press the [On/Clock] when the device is powered on.

**Mode**

Repeatedly short press the [Mode] button to switch between five modes (Pairing mode / Card player / USB drive / FM radio / Auxiliary connection).

**Note:** 1. Card player mode or USB drive mode will be bypassed when card or USB drive is not detected.  
2. When a card/USB drive is plugged into the speaker, it will automatically switch to the card/USB drive's relative mode.

**Bluetooth pairing**

Use the [Mode] button to switch to Pairing mode, which you see the word "BLUE" blinks on the display → Turn on your phone's Bluetooth → Select "WD-700" on your phone → After successful pairing, the device prompts "paired" → Bluetooth pairing successfully ("BLUE" on the display stays on)

\*You can long press the Multi-function Knob to disconnect Bluetooth

**Handsfree speakerphone**

The handsfree speakerphone function is enabled when the device is paired with your mobile device. Press the Multi-function Knob to answer an incoming call. To decline a call without answering, press and hold the Multi-function Knob during an incoming call. To end a call, press the Multi-function Knob during a call.

**Note:** The user needs to face the front of the speaker, and it is better to keep the speaking distance from the "Mic" within 40cm.

**FM radio**

Press the [Mode] button repeatedly to enter FM radio mode. Press and hold the Multi-function Knob to discover stations automatically. Discovered stations will be saved automatically. Press the [ $\leftarrow$ ] or [ $\rightarrow$ ] button to switch channels. Press the Multi-function Knob to mute and press again to unmute.

**Note:** Pull and expand the antenna when using the FM radio.

**TF Card mode**

Prepare a blank TF card (32GB or less) and save the songs (MP3 / WAV recommended) into the card. Then insert the card into the TF slot of the device. The device will automatically play the music in the card. Press the [ $\leftarrow$ ] or [ $\rightarrow$ ] button to switch the songs in the TF card. Press the Multi-function Knob to play / pause the music.

**Note:** 1.Too many files or folders stored in the TF card may prevent the device reading the songs in the card.  
2.The speaker automatically switches to other mode if there are no songs in TF card.  
3.Do not store other files except music files (MP3, Wav) in the TF card to avoid music reading failure.

**USB mode**

Prepare a blank USB Drive and save the songs (MP3 / WAV recommended) into the USB Drive. Then insert the USB Drive into the USB port of the device. The device will automatically play the music in the USB Drive. Press the [ $\leftarrow$ ] or [ $\rightarrow$ ] button to switch the songs in the USB Drive. Press the Multi-function Knob to play / pause the music.

**Note:** 1.Too many files or folders stored in the USB Drive may prevent the device reading the songs in the USB Drive.  
2.The speaker automatically switches to other mode if there are no songs in TF card.  
3.Do not store other files except music files (MP3, Wav) in the USB Drive to avoid music reading failure.

**AUX-In mode**

Please connect the AUX cable into AUX In jack of the WD-700, and connect the other end to an audio source. Press the [Mode] button repeatedly to switch to AUX Mode. You can short press the Multi-function Knob to mute, and press again to unmute the speaker.

**Wireless charging (Optional function only available in wireless charging version)**

Connection to a fast charging plug is required to power the wireless charging function. After the power is connected, place your mobile device on the top of the powered WD-700. Make sure your mobile device is centered according to the wireless charging icon for best wireless charge efficiency. You may try to adjust the position of your mobile device if charging is not stable. The wireless charge led indicator ([~]) lights up when charging.

P2

P3

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.