

H18说明书

尺寸: 90mm X 60mm (折好后尺寸)
工艺说明: 双面印刷, 105g铜版纸.

90mm

H18

H18

Thank you for purchasing H18. Please follow this user manual carefully in case of any doubts and difficulties this arise. Please note that play time varies depending on the selected volume level. You can stay plugged into the sound with Bluetooth wireless technology, TF Card & AUX wire compatibility. This portable speaker has been designed for smooth interface that requires the minimal of efforts.



TWS:

- You can connect two H18 and virtually merge them into one speaker for a greater impact. For **TWS** connection:
 - Turn on both the speakers
 - Press and hold **MFB** on one of the two speakers for about 2 seconds until you hear a beep
 - After releasing ">", it may take a few more seconds for the speakers to connect
 - Activate the phone's Bluetooth function and search for "H18" to establish pairing

Charging:

- "H18" beeps once every 5 minutes when the battery is low. After three such indications, the speaker automatically turns off
- Utilize the provided charging cable to charge the speaker
- The **LED** indicator turns into steady red while charging; the same goes off as soon as the speaker gets fully charged

Note:


Please avoid using the speaker while it is in charge as it may decrease the battery's performance

Specifications:

Speaker Type	Portable Wireless Speaker
Bluetooth Version	V5.3
Working Range	10m
Speaker Size	2.25"
Water Resistance	IPX5
Supported Profiles	Bluetooth V5.3+BR+EDR
SNR	80dB
Frequency	20Hz-20kHz

Package Contents

- Bluetooth Speaker x1
- TYPE-C Charging cable x1
- Standard audio cable x1
- Product manual x1

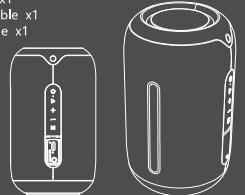

Functions:

- Answer Incoming Calls:** Short press the ">" Button
- End Calls:** Short press the ">>" Button
- Reject Incoming Calls:** Long press the ">" Button
- Redial:** Quickly press ">" twice to call back the last call
- Switch Modes:** Short press the **M** button to select modes:Bluetooth/AUX/TF Card
- Volume Increase:** Short press the "+" button in steps for increasing the volume
- Volume Decrease:** Short press the "-" button in steps for decreasing the volume
- Play/Pause:** Short press the ">" to play or pause the tracks
- Previous Track:** Long press the "-" button for returning to the previous track
- Next Track:** Long press the "+" button for skipping to the next track
- RGB Function:** Long Press **M** button for switch on and off RGB light. Click the power button to switch RGB light mode
- Voice Assistant:** Double click the power button to turn on or off the voice assistant
- Disconnect/connect devices:** Double click the "M" key to disconnect the connected device, and double click again to reconnect the disconnected device

Warning:

- Please charge the speaker according to the charging norms mentioned on packaging to protect the battery
- Do not disassemble the product
- Do not submerge the product inside water
- Please keep this product safe from coming in contact with any liquid
- Do not expose this product in extreme temperatures
- Please keep the product away from anything that generates heat, such as radiators, stoves, etc.
- In order to have hearing protection and an extended speaker life, avoid listening to songs on maximum volume
- Don't try to dismantle/repair the product on your own.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation

Bluetooth Connectivity:

- Turn the speaker on. Its LED indicator blinks white until the pairing is done
- Activate the phone's Bluetooth function and search for "H18". As soon as the speaker gets selected and paired by you, the connection gets indicated by a sound prompt

Note:

- The speaker can automatically reconnect to the last paired device
- If you are having connection troubles, then remove "H18" from the list of paired devices on your phone, keep the phone closer to the speaker and try pairing again

AUX Mode:

- You can switch to AUX mode by using the AUX cable to connect the phone and the speaker, and then short pressing the **M** button.
- In AUX mode, you can control audio playback media through the device (cannot answer calls, and the speaker cannot control mobile phones)

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

The limits in this rule are designed to provide reasonable protection against harmful interference in a residential installation.

This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.