 


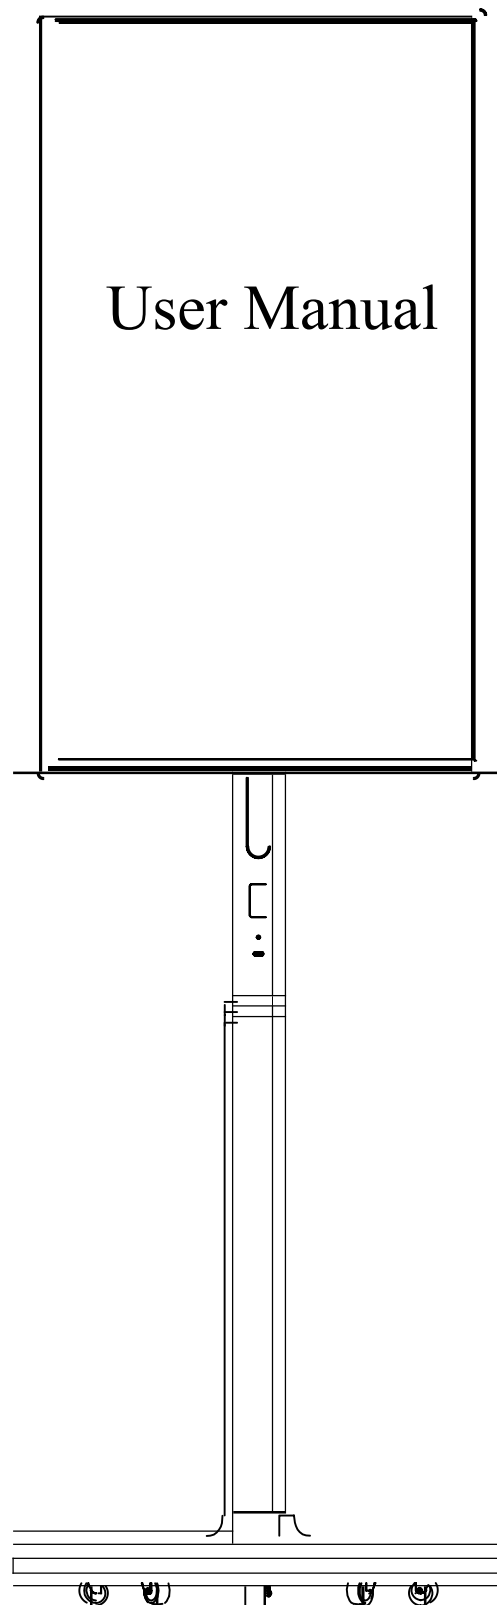

【This document may not fully reflect all the latest changes to the product, the actual product shall prevail.】

Catalogs

Safety Warning	1
Installation instructions	4
Product	7
Common Settings	10
Using the Software	11
Trouble shooting	17

Safety and Warning

1.Placement

- . Do not block any of the device's cooling vents .
- . Do not place the device in an unstable, tilting or falling place.
- . Do not place the device next to equipment that emits high levels of radiation.
- . Do not place the device in wet or dripping places.
- . Do not insert any objects into or inside the device .
- . Do not place heavy objects on the device

2. Power supply

- . Use a domestic power supply that meets the voltage value of the adapter included in the device's accessories, ensure proper grounding, and use only the accessories/accessories specified by the manufacturer.
- . Unplug the power cord in case of thunderstorms, lightning and prolonged use.
- . Unplug the power supply when the room is unoccupied or when it is not used for a long period of time.
- . Avoid physical or mechanical damage to the power cord, especially to the plug, and prevent it from being stepped on or crushed.
- . The power cord supplied with the device is for this device only, please do not use it for other devices.
- . The charging port of the device must be connected to the port specified in the instructions, otherwise it will cause a short circuit or open circuit.
- . Do not move the device while it is charging or connected to external cables.

Do not move the device while it is charging or connected to external cables. When unplugging the device, please hold the plug and do not pull the cable.

3.Screen

- . Do not use hard or sharp objects to write on the screen.
- . To clean the screen, unplug it from the power supply.
- . Wipe the screen with a soft, dust-free, dry cloth.
- . Do not use water or spray cleaners to clean the device.
- . Do not adjust the brightness to the maximum for a long time
- . Please use your finger to gently select the item when touching it
- . If the screen is wet or watery, the touch may not work properly.
- . Touching the screen while wearing gloves or touching the tip of a fingernail may prevent the touch from functioning correctly

4. Temperature

. Do not place the device near heat generating objects such as electric heaters or radiators or other heat sources.

. When the device is moved from a low-temperature area to a high-temperature area, please leave it for a while before turning it on to prevent condensation inside the device from fully radiating.

Please leave it for a while before turning on the device. Normal working temperature of the device is 0-40 °C storage temperature -20 °C -60 °C.

5. Humidity

. Do not expose the device to rain, humidity or near water Please make sure the room is dry and cool!

. Normal working humidity of the device is 10%—80%, storage humidity is less than 85%.

6. Ventilation

. Please place the device in a ventilated place to ensure good heat dissipation, the whole device left and right and 10 centimeters behind the top 20 centimeters above the space of the ventilation

7. Standby

. Short press of the button on the body will not completely shut down the device, but only let the device in standby mode.

8. Battery

. The batteries used in the remote control of this device must be disposed of properly and recycled.

. Do not allow children to touch the remote control battery, do not put the battery into the fire to avoid danger!

. Remote control battery installation should pay attention to the polarity, long time no use need to remove the battery.

. The built-in storage battery of the equipment bracket pole contains lithium, please do not disassemble, otherwise it will lead to electric shock, injury or fire.

. The storage battery is 10500mAh, it takes about 5 hours to fully charge the battery and should not exceed 12 hours.

. The battery life and usage time of the storage battery after charging will decrease proportionally with the time and length of use of the product.

. Energy Storage Battery batteries cannot be charged at temperatures below 0°C.

. Even when the storage battery is not in use, the remaining battery power will naturally decrease.

. In order to prolong the life of the battery, it is important to charge the battery after a period of time, rather than keeping it fully charged all the time.

. Maintaining a storage battery at 50% helps to extend battery life.

- . The maximum usage time of the storage battery after charging is 5 hours.
- . The standard operating times in this manual are based on measured values. Therefore, the actual time may vary depending on the conditions of use.
- . The operating time may vary depending on a variety of factors, such as the connected device, the operating temperature, the operating time and the user's settings.
- . If the storage battery is completely dead and not used for a long period of time, it may not be recharged at all in the future or the battery life may be reduced.
- . If the battery leaks, stop using it immediately and avoid contact with skin and eyes, which may cause blindness or burns.
- . Dispose of the battery in the correct manner depending on the country and region.

9. Cleaning Requirements

- . There are heat dissipation holes on the back of the product, please be careful of foreign objects penetrating into the battery when cleaning.
- . Do not spray or pour liquids directly into the device.
- . Use a soft, dry cloth and a moderate amount of water to clean.
- . Do not use chemicals for cleaning.

10. Maintenance Precautions

- . If the device is damaged in any way, such as the power cord or plug is damaged, liquid has been spilled or an object has fallen into the device, the device has been exposed to rain or moisture, or the device does not function properly, or if it has fallen to the ground, please contact the factory technical engineer for repair. The battery should be disposed of and recycled properly after use. Do not allow children to touch the battery, and do not put the battery into fire to avoid danger.

11. For children

- . Use the equipment manufacturer's rack or mounting method
 - . Do not allow children to climb onto the stand, risk of falling by touching the monitor.
 - . Organize cords and cables connected to the device before and after charging so that they cannot be tripped, pulled, or grabbed.
 - . Do not place the device in an unstable position.
 - . If you are placing the device on a high piece of furniture (such as a cabinet or bookshelf), you must secure the furniture to the monitor at a suitable support point.
 - . Do not place the device on a cloth or other object that may come between the monitor and the supporting furniture.
 - . Children under 2 years of age should not look at the screen, and those over 2 years of age should not look at the screen for more than 1 hour per day
- ### 12 Wireless Features
- . Legal Communications: No company, firm, or user may change the frequency, increase the power, or change the characteristics of the original design without authorization.
 - . The use of low-power radio frequency equipment shall not affect flight safety, radar systems or interfere with legitimate communications.

- . If interference is found, it should be stopped immediately and improved until there is no interference before continuing to use.
- . High gain directional antennas should only be used in fixed point-to-point system.

 
12 Wireless Features

- . Lawful communication: Unauthorized companies, firms or users are not allowed to change the frequency, increase the power or change the characteristics of the original design.
- . The use of low-power RF equipment shall not affect flight safety, radar systems or interfere with legitimate communications.
- . If interference is found, it should be stopped immediately and improved until there is no interference before continuing to use.
- . High gain directional antennas should only be used in fixed point-to-point system

Installation Instructions


1. Take out the installation tool

Open the package, take out the base, remove the bottom center tool cover and take out the tool.

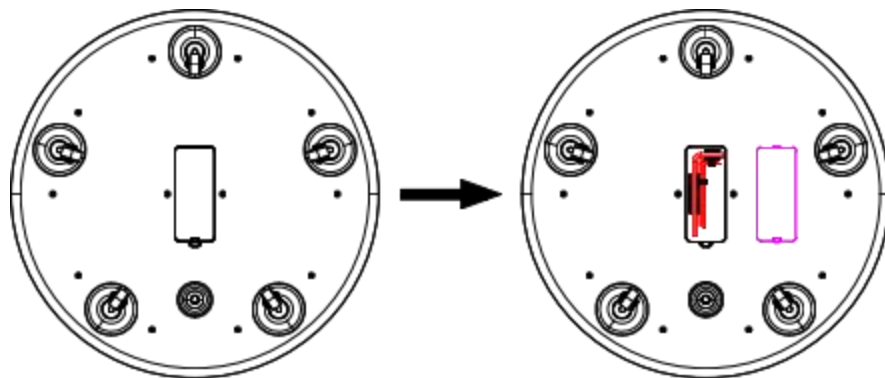

2.Installation of floor stand

 Take out the folded pole and unfold it and use a tool to lock the 2 screws at the joint.

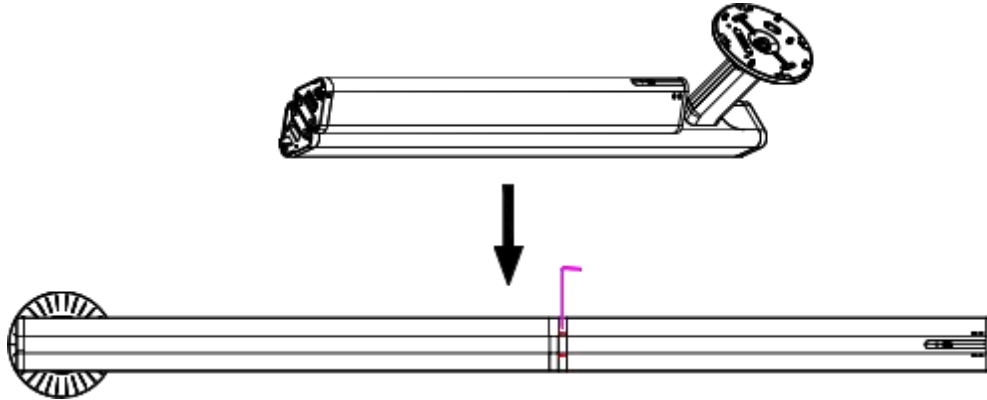


3.Installation of base

A) Take out the M10 accessory screws and $\Phi 20$ spacers.

B) Insert the riser into the base with the riser charging port aligned with the edge of the base.

 C) Use a large tool to secure and lock it in place.

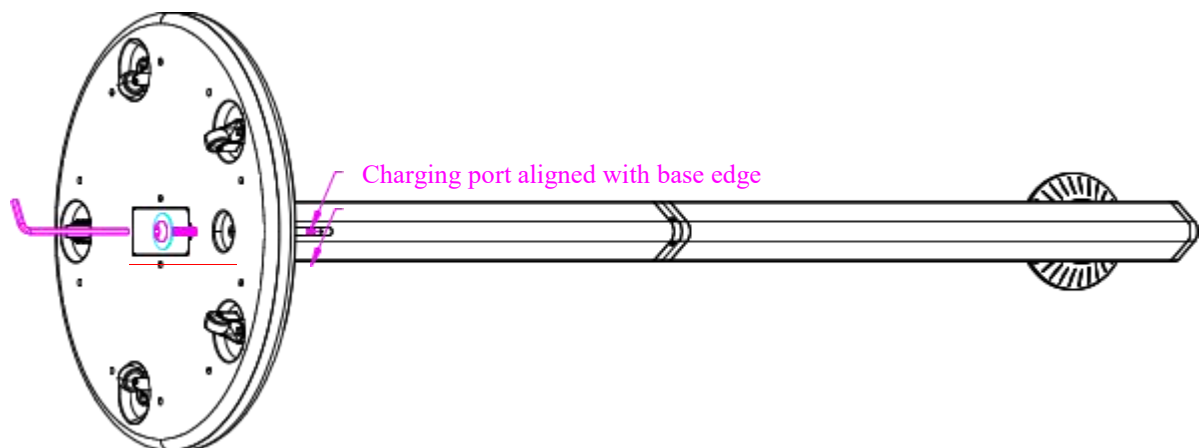

4.Installation of display screen

 
 
 
A) Take out the monitor and the M5 screws from the accessories, it need two peoples.

B) Align the holes on the back of the monitor with the VESA limiters (one person is required to prevent the monitor from sliding down).


C) Turn the dial clockwise

D) Lock the 4 M5 screws with a medium tool.

E) Assemble the turntable counter-clockwise.

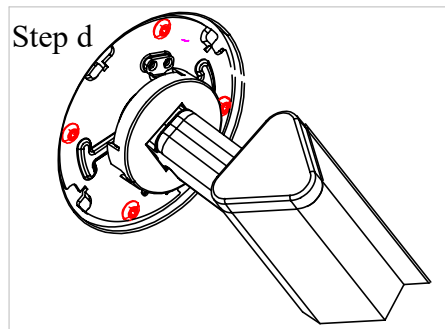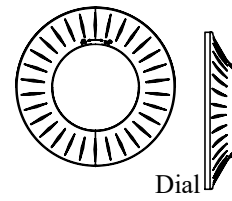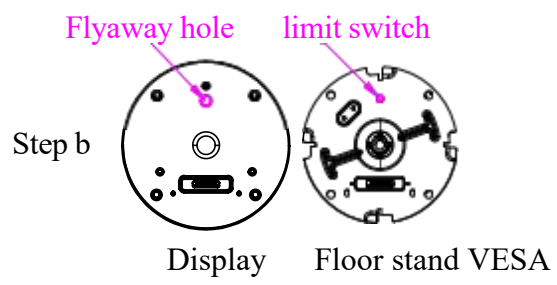

 
Fixed M5 screw
Assemble the turntable then done

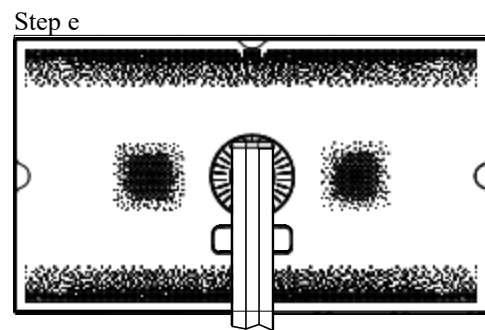

Products Introduction

1.Height adjustment

 Screen lift adjusted to 180mm

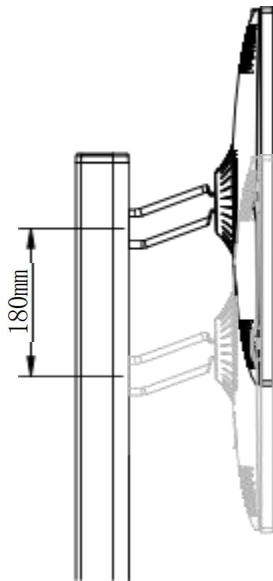


2.Slope

mobile device should $\leq 18^\circ$




3.Angle adjustment

 Screen pitch angle within 30°

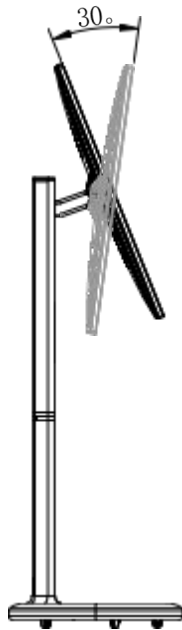


4.Rotate

 Horizontal and vertical
conversion angle within 90°

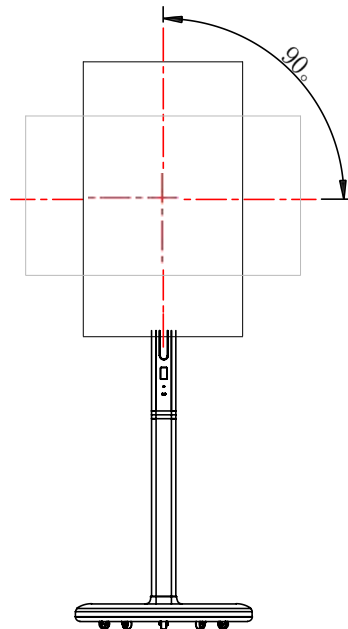

5.Display screen Interfaces

 
Note: The camera can only use the original; charger port can not be plugged into other TYPE-C interface

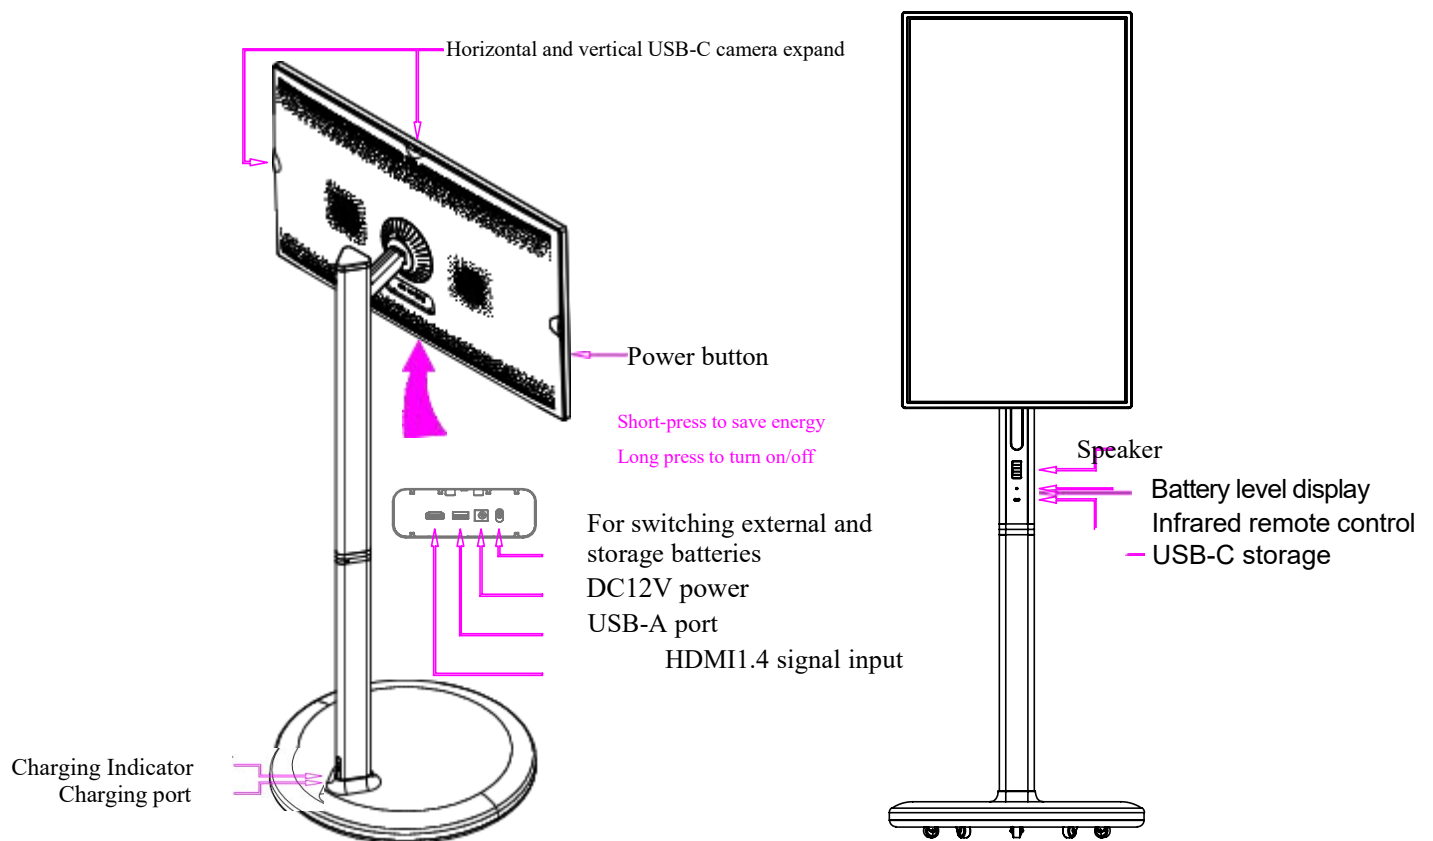

6.Home Page

Press the button  on the device for 3 seconds to display the home screen.

 When using the application, press the button on the remote control to display the home screen.

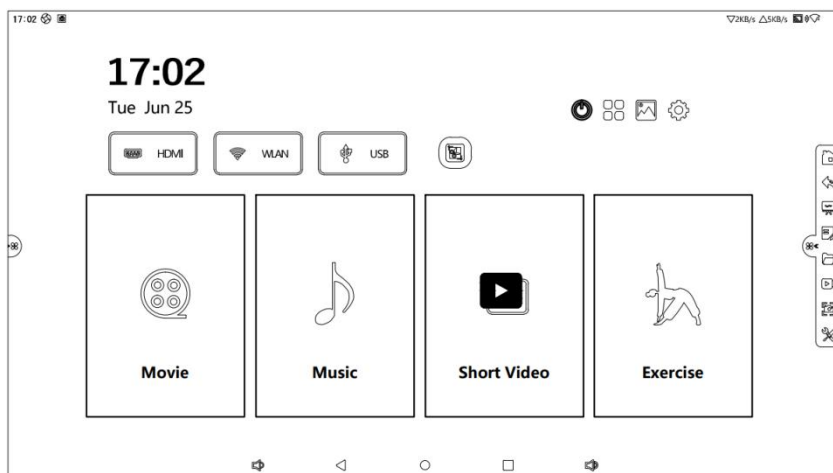

 Show all programs

 Wallpaper selection

 Setup menu

 Volume down

 
 Volume up

 Back to previous page

 Back to home page

 Multi-task window


 Status bar

 Message

 Time

 External link status display,click then enter the relevant interface

  Application history, tap to quickly access applications



App shortcut entry

Hidden operation

Swipe up and down on the left side of the screen to adjust the brightness; swipe up and down on the right side of the screen to adjust the sound volume; swipe down at the top of the screen to open the shortcut commands and notification signals.

Tap the shortcut card for more than one second and let go, you can change the application.

Under the display of all programs, tap the corresponding icon for more than one second and let go, you will enter the application information to uninstall.

Navigation bar on the left and right sides

	Homepage
	Return to previous level
	Whiteboard software
	Annotation
	Screen casting software
	Screen Recording
	Screenshots (full screen screenshot, area screenshot, screenshot folder)
	Tools (sound, brightness, settings)

Common Settings

1. Network Connection

 
 
 
- Click the Home Settings button
- Networks and the Internet
- WLAN
- Open the search network, select the network you want to connect, enter the password and click Connect.

2. Bluetooth connection

- Click on Home
- Connected Bluetooth devices
- Pairing with new devices
- Select the device that needs to be paired.

3. Bluetooth remote control

- Plug the USB receiver into the USB port of the device
- For first time use, you need to wait 20-60 seconds for USB receiver driver installation.
- Move the mouse, if the cursor will move in the screen, then the match is successful
- d. If the match is unsuccessful, first press and hold the "ok" key, then press and hold the  key.
- e. Wait for the red indicator light to stop flashing, then the match is successful.

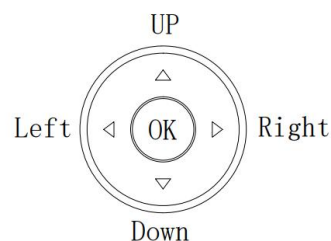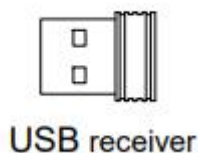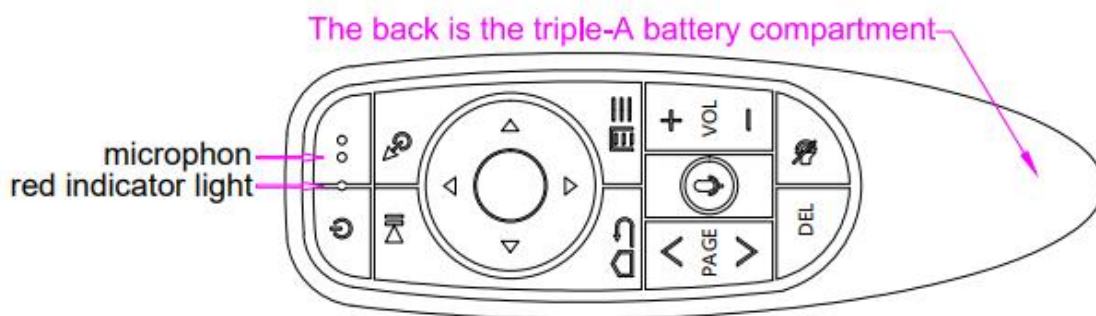

-  Long press to turn off/short press to standby
-  Multimedia Play/Pause
- S** Turning the wireless mouse on and off
-  Long press to return to home page/short press to return to previous level
-  Menu key
-  Page up and down
-  Sound amplification and subtraction
- DEL** Backspace delete key
-  Turn mute on and off
-  Press to turn on the voice. Release to turn off the voice.

Software Usage

1.APP Installation

- a.Click on All Programs 
- b.Google Play Store
- c.Enter the APK you want to find in the search bar
- d.Select the APK to download
- e.Install the APK

 
2.Screencasting software

- a.Click the left and right navigation bars 

- b.Open the screencasting software

The terminal needs to scan the code to download the corresponding APK, or you can download it through the website <https://transcreen.app/mobile.php>

Main interface

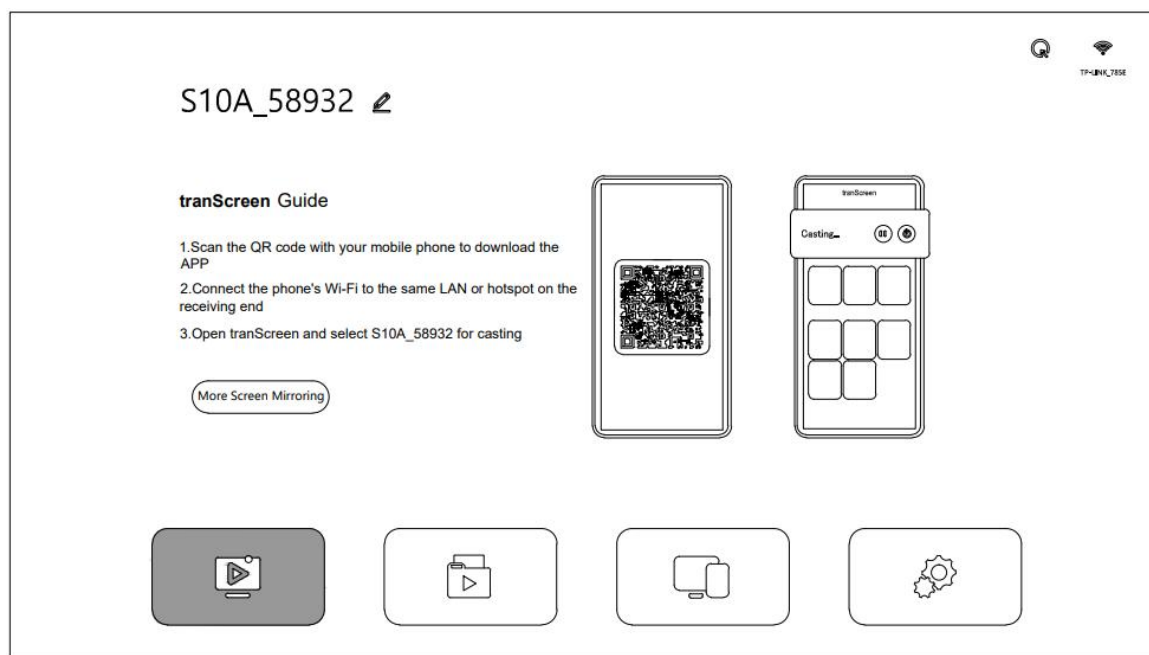

Fanconn_65908  Modify the device name (the device name selected for terminal screen projection)

 The numerical value of the software activation code

 The WIFI that the device is currently connected to (the terminal must be connected to the same WIFI as the device)

[More Screen Mirroring](#)

 
 
Go to more screen casting instructions

Main interface

Quick File Transfer

Remote Control

Screencasting settings



Note: The difference between terminal and device side

The terminal refers to mobile phones, computers, MAC, etc., and the device refers to the currently introduced model.

More ways to cast the screen

 **More Screen Mirroring**  TP-LINK_785E

DLNA screencasting tutorial

 
- 1.Connect to local hotspot or the same LAN
- 2.In the APP video playback window, click the TV button
- 3.Select S10A_58932 to cast screen

Airplay Guide

- 1.Connect to local hotspot or the same LAN
- 2.Open the Control Center and click Screen Mirroring
- 3.Select S10A_58932 to cast screen

HUAWEI Cast screencasting tutorial

- 1.Connect to local hotspot or the same LAN
- 2.Open the Control Center and find the "Screen Projection" shortcut entrance
- 3.Select S10A_58932 to cast screen



More Screen Mirroring

DLNA screencasting tutorial

1. Connect to local hotspot or the same LAN
2. In the APP video playback window, click the TV button
3. Select Fanconn-65908 to cast screen

Airplay screen casting tutorial

1. Connect to local hotspot or the same LAN
2. Open the Control Center and click Screen Mirroring
3. Select Fanconn_65908 to cast screen

HUAWEI Cast screencasting tutorial

 
1. Connect to local hotspot or the same LAN
2. Open the Control Center and find the "Screen Projection" shortcut entrance
3. Select Fanconn_65908 to cast screen

Note: Some Huawei phones do not support Cast

Quick File Transfer

It is to transfer the terminal file to the device. The left side is the viewing area.

Terminal installation software here do not need to scan the code, directly click on the terminal tranScreen-Fanconn_65908-File Transfer

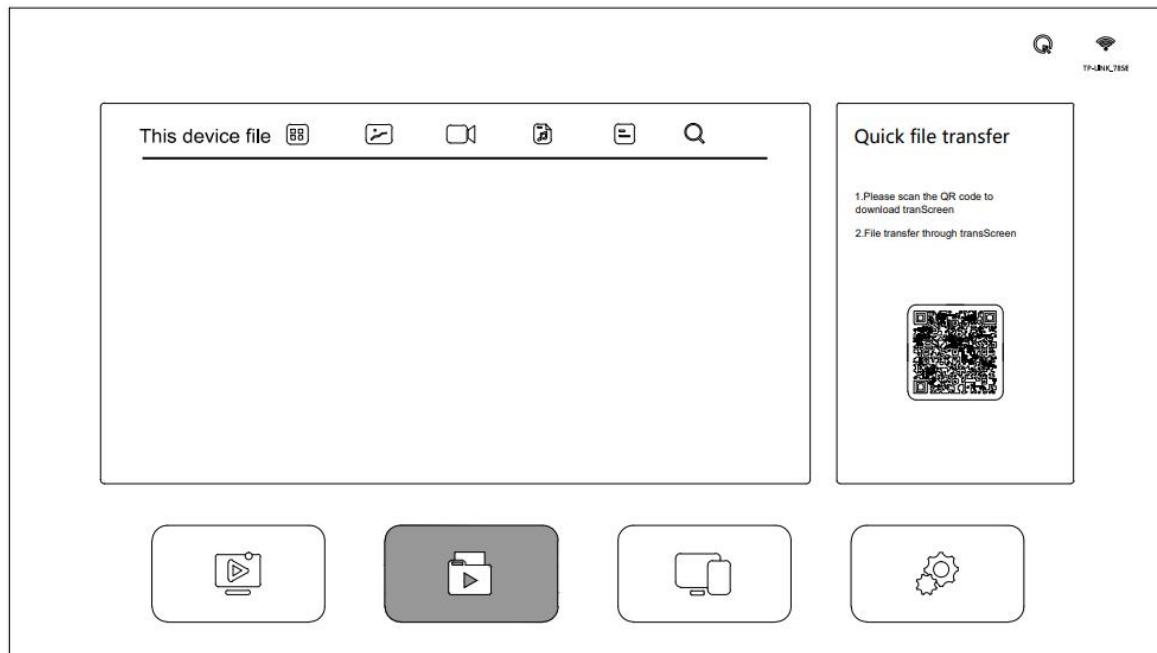


-  View All Files
-  View Music Files
-  View Text File
-  View Image Files
-  View Video File
-  Searching

□


Remote control

Reverse operation of the device through the terminal

 Click on the terminal tranScreen-Fanconn_65908-mirror reverse control

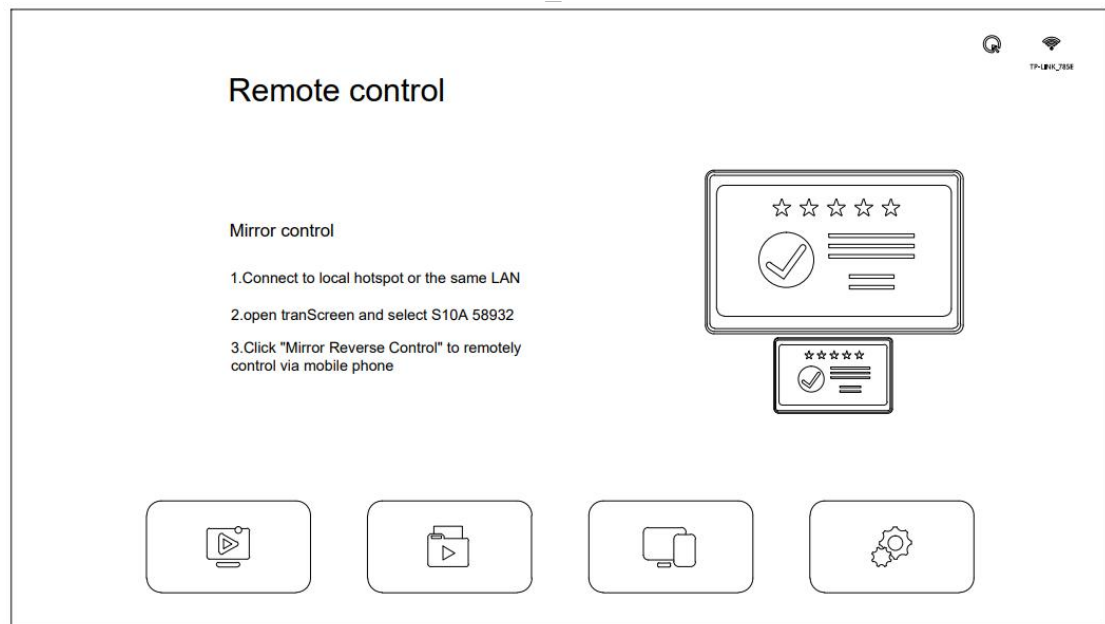

Projection Settings

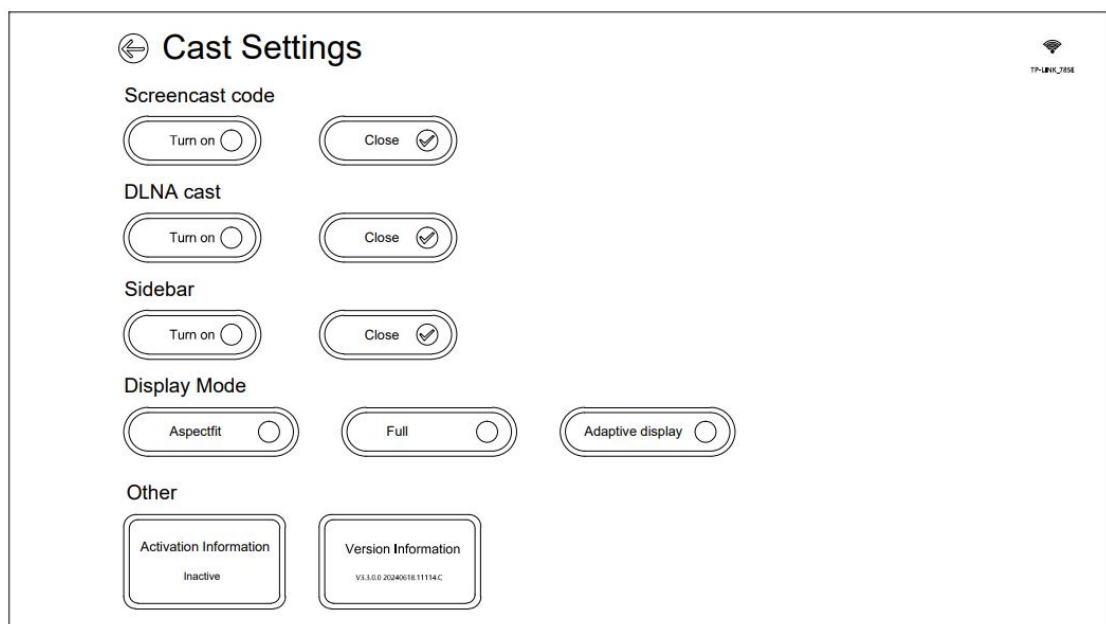 

Screen code: the terminal connected to the device to increase the password, after opening the device will automatically display the 6-digit number in the upper right corner.

DLAN casting: If you turn it off, you can't cast via DLAN.

Miracast: If you turn it off, you can't cast via OS system mirroring.


Sidebar: On/Off navigation bar

Display Mode:

Isometric - the image is in the same proportion on the device side as on the terminal side.

Full - Stretch and compress the image on the device so that it can be displayed in full screen.

Adaptive - the image on the device side of the screen is processed and analyzed by the system, automatically adjusting the processing. Activation Information, MAC

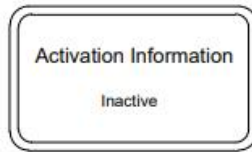 


Address, Viewing the number of split screens




Version information and latest version view, update software

4. Whiteboard software

 Click on the left or right navigation bar ➡ Open the whiteboard software

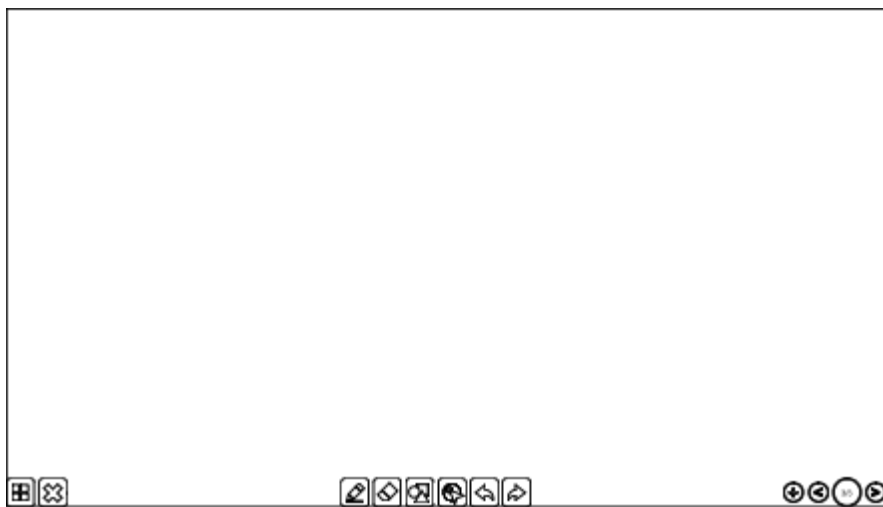


Click the icon in the lower left corner, you can load, save, illustrate, share, change the background of the drawing board into the document.

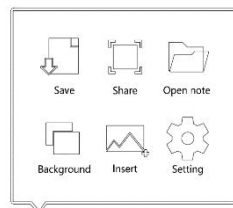 

Exit Whiteboard; Name, format of the saved file



 Brush Style, Thickness, Color, and Multipoint can be set.

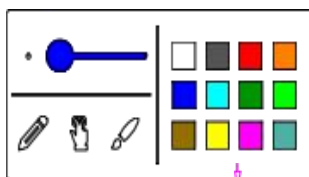

Handwriting color



Slide left or right to change brush thickness



Paintbrush



Single-point and multi-point switching (brush must be selected)



writing brush



Blackboard eraser



Dot erase: system default size erase



Circle Erase: Circle the area you want to erase



Slide clean Swipe right to clear the current page.



Select to draw straight lines, dotted lines, squares, circles, and triangles.



Option: You can copy, zoom, and rotate the selected content.



Delete Undo the previous step



Restore undo operations



 
Add page



Multiple Pages, Page up and down



Current page/total number of pages, click to select pages and delete pages

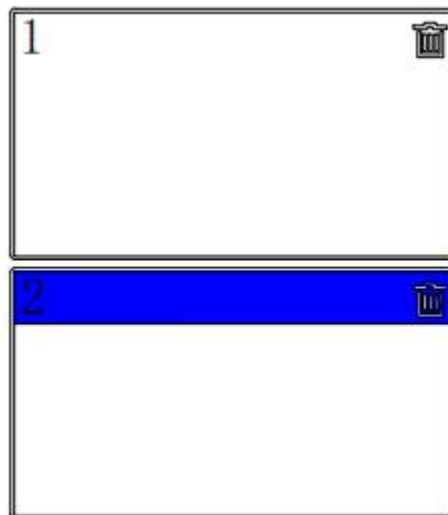

Problem shooting

1.Unable to turn on device

- . Button indicator light on, can not be turned on, test external wiring.
- . New model won't turn on, the contact magnet is not in place.
- . If the battery is too low, it will not turn on. Connect to power source or charge battery.
- . If the battery temperature is too high, it will not turn on. Please stop using it and wait for the battery to cool down before turning it on again.
- . The storage battery is consumed to its own power off, then plug in the adapter to charge, need to wait for a certain period of time to turn on the power.
- . Rear end toggle switch is correctly positioned.

2.The power is on, but the screen comes on later

- . This is due to a noise removal procedure that eliminates any possible noise that may occur during power-up. This does not indicate a product failure.

3.Unable to use the remote control

- . Replacing the batteries in the remote control.
- . Too far away from equipment.
- . There are obstacles between the remote control and the equipment, such as wall obstacles, metal partitions, etc.
- . Bluetooth remote control needs to be matched to the device.
- . Interference between the same frequencies within the premises, e.g. microwave ovens, radios, etc.
- . Check battery polarity.

4.Sudden power off

- . Unplugging External Connections Causes Internal Board Protection.
- . It is possible that the internal protection circuit is activated by an abnormal or excessive increase in the internal temperature of the device.
- . If the battery is too low, the unit will shut down, connect to a power source or charge the battery.

5.No signal from external HDMI

- . Determining if an external signal source is normal
- . This device HDMI1.4 version, receive 1920 * 1080 resolution below
- . Check the version of HDMI access cable
- . Checking the power-on setting of the external signaling device

6.Display Exception

- . Determine the original image
- . External HDMI device best resolution 1920*1080
- . The external HDMI cable is version 1.4 or higher and is not damaged
- . Determine whether the HDMI signal 16:9 picture
- . Check if the HDM signal is under the corresponding channel
- . Check whether the set-top box is set and HDMI signal is output.
- . Check if the color inversion or eye protection mode is enabled in the shortcut commands.
- . Make sure whether the app supports horizontal and vertical screen.

7.USB flash drive won't play

- . Make sure the flash drive is working. The file won't be a copy
- . Make sure the picture playback format and resolution are supported
- . Make sure that the video format, decoding, subtitle format and stream are supported by the computer
- . Determining if the playback audio format, bit rate, and sampling frequency are natively supported

8.Unable access the internet

- . The network is not connected to the network when the network is blocked in the external connection status area.
- . The network is connected, but you cannot access the Internet.
 - Check the network settings for DHCP
 - Reboot the router
 - Set the SSID and wireless channel of the router
 - Turn on hotspot on cell phone - troubleshooting device problems

9.No sound

- . Determine if the source file format is supported
- . Adjust volume to mute
- . Determine if the signal outputs are supported under HDMI
- . Determining the cable version under HDMI
- . Make sure the front-end device volume is on under HDMI

10.Reset Options

- . After a certain period of time, the hard disk and memory are not cleaned, resulting in a slow startup, and the user does not know how to clean them.
- . Delete system default apps and system files by mistake
- . Mistakenly set, without remembering where it was set

If there is any damage to the unit, such as a damaged power cord or plug, spilled liquids or objects falling into the unit, the unit has been exposed to rain or moisture or is not functioning properly, or if the unit has been dropped on the ground, please contact the original manufacturer's technical engineer for repair.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.