


# Detachable Bluetooth Speaker

## User Manual

### BS-36



Graphic illustration

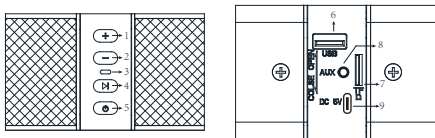

Function Indicator

1. Volume up / previous song
2. Volume down / next song
3. LED indicator light
4. Music Play / Pause
5. Power on/off button & Mode switching button
6. USB 2.0 socket
7. TF card reader
8. AUX/3.5mm audio input socket
9. USB-C charging port, DC 5V

## Installation


### How to install the detached speakers?




**STEP 1** Put the speaker on the right way to the dock

#### Attention:

To avoid short circuit of the speaker, don't turn on the speaker before installing the base.

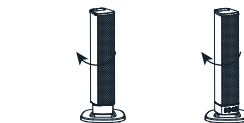


**STEP 2** Turn to this direction to lock on the dock

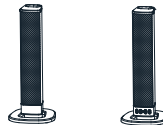

**STEP 3** Finished and Enjoy your music!


### How to assemble the speakers?

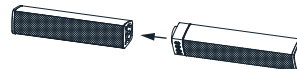

**STEP 1** Making two parts parallel, one part turns a little bit



**STEP 2** Make sure two parts can plug together without barriers

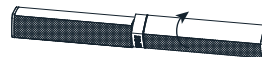

**STEP 3** Plug in and turn to lock



**STEP 4** Finished and Enjoy your music!

#### Attention:

To avoid short circuit of the speaker, it must be installed both of the host and auxiliary speaker together before using.

## Operation Instruction

### Bluetooth mode

1. Power on: long press ON/OFF button for 3 to 5 seconds. Then you will hear the voice prompt with the indicator light flashing. Bluetooth searching mode starts automatically after power on.
2. Switch on Bluetooth searching mode on the cell phone. After pairing successfully, the device name (BS-36) will be shown connected on the cell phone, then you can open phone player and play songs. Due to different brands of mobile phone and Bluetooth versions, the searching and pairing time will be various. Under normal circumstances, it only takes 30 seconds. If pairing password is needed, please type "0000" on the cell phone.
3. Long press "+" "-" to volume up / down.
4. Short press "+" "-" to switch song.
5. Short press "► |" button to play or pause music.

### 3.5mm audio input mode

1. Using 3.5mm line to connect the cell phone / MP3 / computer, plug the cable into audio input socket on speaker.
2. Turn on the speaker. It will automatically switch to the AUX mode. If the speaker is in other mode, please press the mode switching button to AUX mode.
3. Long press "+" "-" to volume up / down.
4. Short press "► |" button to play or mute the speaker

**NOTE:** 1) Make sure the TV has RCA audio output socket

### TV Mode

1. Connect the 3.5mm plug to the speaker, and connect the RCA plug to the TV RCA audio output socket.
2. Turn on the speaker, it will automatically switch to the AUX mode. If the speaker is in other mode, please press the mode switching button to AUX mode.
3. Long press "+" "-" button to volume up / down
4. Short press "► |" button to play or mute the speaker

**NOTE:** 1) Make sure the TV has RCA audio output socket

2) Make sure the RCA plug connect correctly to the TV RCA audio output socket

3) If the TV has 3.5mm audio output socket, please refer to **3.5mm audio input mode** connect method

4) The speaker can not switch the TV channel and previous/next song in AUX mode

### FM radio mode

1. Insert the charging cable into the charging port of the speaker as a radio antenna, and then press the mode switch button to switch to FM mode.

2. FM radio searching: long press "► |" button to search the channel and the indicator light starts flashing at the same time.
3. Short press "► |" button to stop searching.
4. Long press "+" "-" to volume up / down.
5. Short press "+" "-" to switch the radio channel. If fail to switch more than 2 channels, please search the channel again.
6. Short press "► |" button to mute or play the speaker

### TF Card Mode

1. Put the TF card into the TF card reader.
2. Turn on the speaker. It will automatically switch to the TF card music play mode. If the speaker is in other mode, please press the mode switching button to the TF card mode.
3. Long press "+" "-" to volume up / down.
4. Short press "+" "-" to switch song.
5. Short press "► |" button to play or pause the music.
6. TF card insert direction: please refer to below picture.



### USB Mode

1. Plug the USB flash drive into the USB socket
  2. Turn on the speaker. It will automatically switch to the USB music play mode
- If the speaker is in other mode, please press the mode switching button to USB drive mode.
3. Long press "+" "-" to volume up / down.
  4. Short press "+" "-" to switch song.
  5. Short press "► |" button to play or pause the music.

### Battery Charge

Use the offered USB charging cable to charge the speaker by connecting to the computer or 5V/1A-2A power source. The indicator light will turn red while charging. When the battery is full charged, the red indicator light will turn off.

### Connect to TV

- ① Turn on the TV.  
(Not limited to televisions, such as game consoles, projectors, computers, etc)
- ② Use the cable which provided to connect the soundbar and television. Ensure that the audio port of the TV is on the audio out output port.
- ③ Ensure that the audio output selected in TV is same as the soundbar audio output.
- ④ Set the digital audio output format of the TV to "PCM" or "AUTOMATIC".

### Common problems and solving method

1. Connecting for many times still unsuccessful?

- (1) Check the speaker whether is in Bluetooth searching mode.
- (2) If there are too many Bluetooth receivers around, it may cause the difficulty on searching. Please turn off other Bluetooth receivers.
- (3) Open the Bluetooth settings on your phone, cancel pairing and reconnect.
2. The volume of speaker is too low or appear distortion? Please check the volume settings of your phone and adjust the volume.
3. Discontinuities appear when playing music? Please check the distance whether is out of effective range or there are barriers between your phone and the speaker.
4. The buttons have no effect to the speaker? Please try to use the player on phone or other players.
5. When a low battery reminder appears, please connect the charger immediately to charge, and reduce the playback volume to 50%. It can be used while charging.

### NOTE:

1. If connected to tablet, please refer to the phone connection method.
2. Laptop connection: Due to having many laptop's Bluetooth versions, the connecting method would be various. If fail to connect or play at the first time, please download the latest Bluetooth driver.
3. When the speaker is not operated within 5 minutes, it will automatically turn off to save the power.

**FCC Warning:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.