

尺寸: 50\*60 mm

材质: 105g铜版纸

折叠方式:24p 骑马订

**T14 WIRELESS EARBUDS**

**USER MANUAL**

**Power On**

**Method 1**  
Take out the earbuds from the charging case, they will power on automatically and prompts "power on, connected".

**Method 2**  
When the earbuds are OFF, keep pressing the touch button of L/R earbud for 5 seconds. (If you want to use two earbuds together, you need to power on them separately.)

**Bluetooth Pairing**

**1.** Open the charging case and take the earbuds out of the case. Make sure they are "power on".  
**2.** Select the [T14] from device list in your bluetooth list.  
**3.** After connection, the Bluetooth icon on the top left of the LCD screen will change to white and prompt "connected".

**Control Phone Calls**

**Answer/End Calls**  
Press the touch button on the right or left earbud twice.

**Reject Calls**  
Press and hold the touch button on the right or left earbud three times.

**Music Control**

**Play/Pause**  
Press the touch button on the right or left earbud once.

**Skip Forward**  
Press the touch button on the right earbud twice.

**Skip Back**  
Press the touch button on the left earbud twice.

**Active Siri**  
Press the touch button on the right or left earbud four times.

**Set the ANC Mode**  
Press the touch button on the right or left earbud three times.

**Volume Up**  
Press and hold the touch button on the right earbud.

**Volume Down**  
Press and hold the touch button on the left earbud.

**Packing List**

**Product Overview**

**Power Off**

**Method 1**  
Put the earbuds into the charging case, they will power off automatically.

**Method 2**  
When the device is disconnected, press the left or right earbud for 5 seconds until it prompts "power off".

**Reset**

**Method 1**  
Without pairing the left and right earbuds, tap the touch button on the left or right earbud 5 times to receive the "power off" prompt.

**Method 2**  
Put earbuds back to charging case, and delete pairing record on the phone.

**Method 3**  
Repeat the pairing operation.

**LCD Touch Screen**

**Multi-Funton Button**

**Power Once**  
Screen Lock/Unlock

**Power Twice**  
Power Off/Reset/Factory Reset

**Long Press**  
Reset

**NOTE:**  
When you turn off both earphones on both sides, the Bluetooth icon on the top left of the LCD screen of the charging device will change to red.

**NOTE:**  
If the earbuds are away from the phone or the phone's Bluetooth is turned off, earbuds automatically switches off after 5 minutes.

**Equalizer**

**Music Playback Control**

**Volume Control**

**Light Level**

**Language Switch**

**Screen Lock**

**10**

**11**

**Find My Earphone**  
When the earbud is lost, select the left/right earbud by pressing the button, and the lost earbud will make a sound to help you find it.

- The earbud can only make a sound when it is still charged.
- The earbuds will only make a sound when they are within the range of the Bluetooth connection.

**Time Setting**  
You can set the time and date.

**Photo Remote Control**  
You can remotely press the shutter button of the connected smartphone by pressing the camera icon.

- To use this function, you will be given permission on your smartphone when you first pair it.

**Flash Light**  
When you tap the OPEN button, the touch screen lights up in white.

**Charging**

**Charging Earbuds:**  
Place the earbuds in the charging case and close it. The earbuds will start charging and the remaining power will show upper on the LCD screen.

**Charging the charging case:**

- When the power level of the charging case is below 10%, the LCD screen will show a low battery warning.
- Connect the Type-C cable to the Type-C port on the charging case. Connect the charging cable to the USB port of your PC, or a commercially available USB-compatible power supply AC adapter to connect to a power outlet.

**Specification**

Model No: T14  
Version: V5.4  
Effective Wireless Range: 10 meters  
Charging Case Battery Capacity: 3.7V/0.38Ah  
Charging Case Recharging Time: About 1.5 hours  
Charging Port: Type-C  
Control Mode: Touch Control  
Storage Temperature: -10~45°C

**Safety Instructions**

**NOTE:**

- Please separate the charging cable and charging case when fully charged.
- 5V adapter is the best choice for charging to avoid battery damage. Improper current and voltage may damage earbuds and charging case and void the warranty.
- If the power level of the headset is less than 10%, please charge the headset immediately or the headset will automatically turn off due to low power. In this case, the headset screen will show 100% power after charging. If this happens, please continue charging for half an hour. After half an hour, long press the Multi-Funton Button and select Factory Reset to display the correct power level.

**Q&A**

**If you are unable to connect your Bluetooth earphones to your computer or tablet, you can do the following:**

- Pay close attention to the surrounding traffic when using it on foot. It may cause traffic accidents.
- Reduce the volume to a minimum before use. Sudden loud noises can damage your hearing.
- To protect your ears, do not turn up the volume too high.
- Do not use this product if it falls into flammable or liquid (such as water). Continued use may cause fire, malfunction or electric shock.

**described?**

- Make sure your case is fully charged.
- The volume during use or battery wear after long-term use will affect the duration.
- Try to connect to another device. If you have another device that can connect to the earphones, such as a smartphone or tablet, try to connect to see if there is a problem with the earphones or computer. Reset the earphones.
- Contact Seller" button.

**The audio quality of Bluetooth earphones may deteriorate over time with use. There may be several reasons for this problem:**

- Low battery: Audio quality may be degraded when the earphones' battery are low. This is because when the battery is low, the earphones cannot transmit or receive signals effectively.
- Interference: Bluetooth earphones use radio waves to transmit audio signals. If there are other electronic devices nearby that also use radio waves, such as a Wi-Fi router or microwave, they may cause interference and degrade audio quality.
- Physical damage: If the earphones get wet, the internal components may be damaged, which can affect the audio quality.
- If none of the above solutions work, or if you receive your package with missing items or other issues not listed, please follow the steps below to contact Brand Support for further assistance:

**WARNING**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- Go to the Amazon website and sign in to your account.
- Click the "Orders" button in the upper right corner of the screen.
- Find the order you need help with and click the

**Why is the play time different from what is described?**

**(2)** This device must accept any interference received, including interference that may cause undesired operation.

**Change or modification not expressly approved by the responsible party can void the user's authority to operate the equipment.**

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

**NOTE:** This device and its antenna(s) should not be located or operated near any other antenna or transmitter. This device has been evaluated to meet general exposure requirements. The device may be used without restriction under portable exposure conditions.

**(1)** This device may not cause harmful interference, and

**If this equipment does not cause harmful interference to radio services reception, it can be**

**12**

**13**

**14**

**15**

**16**

**17**

**18**

**19**

**20**

**21**

**22**