

W5

PORTABLE CHARGER

FUTURE MOTION DESIGN



USER MANUAL

CONTENTS

English

01-08

Deutsch

09-16



Manufacturer:

Anshishengying (Shenzhen) Technology Co., Ltd



Address:

Chuanghui Building 1408 , Wuhe Community, Bantian Street, Longgang District, Shenzhen

UK

OVERSEA WALKERS LIMITED

Oversea Walkers, 7 Bell Yard,
London, WC2A 2JR United
Kingdom

REP

ip@overseawalker.com
+447808 715841

EC

EC REP SERVICES SL

C/GRAN VIA 49, 7 DCH,
28013 MADRID (SPAIN)

REP

ecrepsservice@hotmail.com
0034682797075



MADE IN CHINA

Product Overview



Specifications

Model :	W5
Battery type:	Lithium-Polymer
Capacity:	5000mAh 3.85V (19.25Wh)
Rated capacity:	3000mAh 5V/2A
Dimensions:	6.76 × 1.18 × 10 cm
Input port:	USB Type C, Lightning
Output port:	USB Type C
Input:	5V---3A
Output:	5V---3A
Charging time:	Approx. 3h (5V/3A)

Package



1. Power Bank



2. USB Cable

 


3. User Manual

Charging Your Power Bank

Before using the power bank for the first time, please fully charge it.

Connect the included USB charging cable to the power bank's Type-C port, then plug the other end into your own AC adapter or PD charger (not included). The LED indicator will blink to show the charging progress. Once the power bank is fully charged, disconnect it from the adapter.

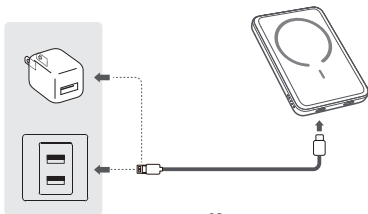



- Charging time may vary depending on your charging adapter.
- It is not recommended to charge the power bank through a computer port.
- An AC adapter with 2A output or more is recommended to charge this power bank.
- The power bank switches to trickle charging around 95% power, meaning it will take longer for the 4th LED to light.

LED Indicators

To check the battery status, press the side button. The LED lights will indicate the remaining charge according to the chart below.



LIGHT ON



LIGHT OFF



75%-100%



50%-75%



25%-50%



0%-25%



Wireless Charging Mode

 


Power Button

Using the Power Bank

Cable charging

1. Charge your mobile device directly via the Lightning or Type-C port. Press the power button and W5 will start charging your device.
2. After the mobile device is fully charged, disconnect the USB cable from both devices.

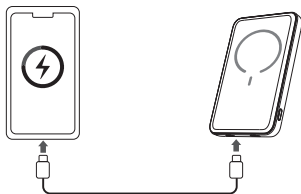

Wireless charging

1. Place a supported mobile device on the wireless charging surface. Charging will begin when the charging coil comes into contact with the wireless charging coil of the mobile device. For iPhone 12 and other newer iPhones, W5 supports magnetic suction.



The wireless charging does not compatible with the non-magnetic phone case.



Magnetic Cases



Non-magnetic



- Check the charging icon displayed on the screen of the mobile device for the charging status.
- If the charger is not connected, you must press the Battery level / Wireless charging button to charge the mobile device.

2. When the mobile device is fully charged, remove the mobile device from the power bank.



- Do not place your mobile device on the power bank if there are conductive materials such as metal objects, magnets, credit cards, transit cards, or key cards between the device and the power bank. This may cause charging issues, overheating, or damage to your device or the cards.
- If conductive materials are placed on the power bank, you may hear a slight noise from the battery pack. This is a normal response but should be avoided for safety and performance.



- Charging time may vary depending on usage and charging conditions.
- Fast charging is not available when using wired and wireless charging at the same time.
- When the charger is connected, both wired and wireless charging are supported. Once wired charging is complete, wireless charging will continue using the remaining battery power. If the battery level is too low, wireless charging may stop.
- Making calls while wirelessly charging may cause connection issues. For optimal performance, remove the device from the power bank before answering a call.

Troubleshooting

Q: The power bank is not charging.

A: Please check the connection between the power bank and your AC adapter. Make sure both the adapter and the charging cable are functioning properly. Try using a different cable or adapter if necessary.

Q: The device is not charging from the power bank.

- A:
1. The power bank's battery may be low—please recharge it before use.
 2. The device may not be compatible with the output voltage—check device compatibility.
 3. There may be a loose connection—ensure the cable is properly connected on both ends.
 4. The charging cable may be damaged—try using a different cable.
 5. If using wireless charging, make sure your device supports wireless charging and is properly aligned on the power bank. Remove any thick or non-compatible phone cases that may interfere with charging.

Safety Information

Please follow these safety guidelines to ensure proper use of the product:

1. Do not touch the device with wet hands or expose it to liquids.

 
2. Avoid dropping or subjecting the charger to impact, which may cause internal damage.
3. Use the power bank in environments between 32°F and 95°F (0°C to 35°C). Do not expose the product to fire or temperatures above 140°F (60°C). Exposure to extreme temperatures may damage the battery or reduce its lifespan.
4. Keep ports and connectors away from conductive materials like dust, metal particles, or pencil lead to prevent malfunction.
5. Keep out of reach of children and pets. Do not allow chewing or sucking on the device.
6. Do not disassemble, crush, puncture, or attempt to repair the power bank.
7. This device contains a lithium-ion battery. Tampering with the internal cell may result in safety hazards.
8. Keep magnetic stripe cards (e.g., credit cards, ID cards) away from the device, as magnetic interference may cause data damage.

Warranty & After-Sales Service

We offer a 12-month warranty from the date of purchase.

- If you have any questions or need support, please feel free to contact us.
- To reach us: Log in to your Amazon account, go to "Your Orders," find your order for our product, and click "Contact Seller."

Produktübersicht

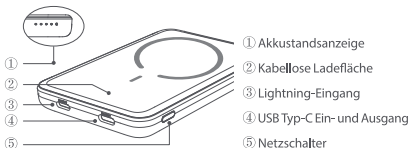

Spezifikationen

Modell:	W5
Akkutyp:	Lithium-Polymer
Kapazität:	5000 mAh 3,85 V (19,25 Wh)
Nennkapazität:	3000 mAh 5 V/2 A
Abmessungen:	6,76 × 1,18 × 10 cm
Eingang:	USB Typ C
Ausgang:	USB Typ C, Lightning
Eingang:	5 V $\equiv$ 3 A
Ausgang:	5 V $\equiv$ 3 A
Ladezeit:	ca. 3 Std. (5 V/3 A)

Lieferumfang



1. Powerbank



2. USB-Kabel

 


3. Bedienungsanleitung

Laden der Powerbank

Bitte laden Sie die Powerbank vor der ersten Verwendung vollständig auf.

Schließen Sie das mitgelieferte USB-Ladekabel an den Typ-C-Anschluss der Powerbank an und stecken Sie das andere Ende in Ihr Netzteil oder PD-Ladegerät (nicht im Lieferumfang enthalten). Die LED-Anzeige blinkt und zeigt den Ladevorgang an. Sobald die Powerbank vollständig geladen ist, trennen Sie sie vom Netzteil.

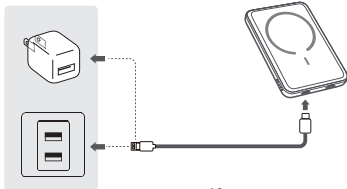



- Die Ladezeit kann je nach Ladeadapter variieren.
- Es wird nicht empfohlen, die Powerbank über einen Computeranschluss zu laden.
- Zum Laden dieser Powerbank wird ein Netzteil mit mindestens 2 A Ausgangsleistung empfohlen.
- Die Powerbank schaltet bei etwa 95 % Leistung auf Erhaltungsladung um. Dadurch dauert es länger, bis die vierte LED leuchtet.

LED-Anzeigen

Um den Akkustand zu prüfen, drücken Sie die seitliche Taste. Die LEDs zeigen die verbleibende Ladung gemäß der untenstehenden Tabelle an.



LICHT AN



LICHT AUS



75%-100%



50%-75%



25%-50%



0%-25%



Wireless Charging Mode

 


Power Button

Powerbank verwenden

Laden per Kabel

1. Laden Sie Ihr Mobilgerät direkt über den Lightning- oder Typ-C-Anschluss. Drücken Sie die Einschalttaste, und W5 beginnt mit dem Laden.
2. Sobald das Mobilgerät vollständig geladen ist, trennen Sie das USB-Kabel von beiden Geräten.

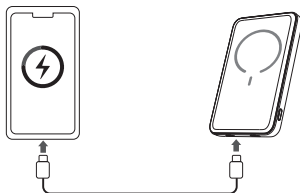

Kabelloses Laden

1. Legen Sie ein unterstütztes Mobilgerät auf die kabellose Ladefläche. Der Ladevorgang beginnt, sobald die Ladespule die des Mobilgeräts berührt. Für das iPhone 12 und andere neuere iPhones unterstützt W5 magnetische Saugkraft.



Das kabellose Laden ist mit der nicht magnetischen Handyhülle nicht kompatibel.



Magnetische Hüllen



Nicht magnetisch



- Überprüfen Sie den Ladestatus anhand des Ladesymbols auf dem Bildschirm Ihres Mobilgeräts.
- Wenn das Ladegerät nicht angeschlossen ist, müssen Sie die Taste Akkustand/Drahtloses Laden drücken, um das Mobilgerät aufzuladen.

2. Sobald das Mobilgerät vollständig geladen ist, nehmen Sie es von der Powerbank.



- Legen Sie Ihr Mobilgerät nicht auf die Powerbank, wenn sich zwischen Gerät und Powerbank leitfähige Materialien wie Metallgegenstände, Magnete, Kreditkarten, Fahrkarten oder Schlüsselkarten befinden. Dies kann zu Ladeproblemen, Überhitzung oder Schäden an Ihrem Gerät oder den Karten führen.
- Wenn leitfähige Materialien auf der Powerbank platziert werden, hören Sie möglicherweise ein leises Geräusch vom Akku. Dies ist normal, sollte aber aus Sicherheits- und Leistungsgründen vermieden werden.



- Die Ladezeit kann je nach Nutzung und Ladebedingungen variieren.
- Schnellladen ist nicht verfügbar, wenn kabelgebundenes und kabelloses Laden gleichzeitig verwendet werden.
- Wenn das Ladegerät angeschlossen ist, werden sowohl kabelgebundenes als auch kabelloses Laden unterstützt. Sobald das kabelgebundene Laden abgeschlossen ist, wird das kabellose Laden mit der verbleibenden Akkuleistung fortgesetzt. Wenn der Akkustand zu niedrig ist, wird das kabellose Laden möglicherweise abgebrochen.
- Telefonieren während des kabellosen Ladens kann zu Verbindungsproblemen führen. Für optimale Leistung nehmen Sie das Gerät vor dem Annehmen eines Anrufs aus der Powerbank.

Fehlerbehebung

F: Die Powerbank lädt nicht.

A: Bitte überprüfen Sie die Verbindung zwischen der Powerbank und Ihrem Netzteil. Stellen Sie sicher, dass sowohl das Netzteil als auch das Ladekabel ordnungsgemäß funktionieren. Verwenden Sie gegebenenfalls ein anderes Kabel oder Netzteil.

F: Das Gerät lädt nicht über die Powerbank.

A:1. Der Akku der Powerbank ist möglicherweise schwach – laden Sie ihn vor Gebrauch auf.

2. Das Gerät ist möglicherweise nicht mit der Ausgangsspannung kompatibel – überprüfen Sie die Gerätekompatibilität.

3. Möglicherweise liegt eine lose Verbindung vor – stellen Sie sicher, dass das Kabel an beiden Enden richtig angeschlossen ist.

4. Das Ladekabel ist möglicherweise beschädigt – verwenden Sie ein anderes Kabel.

5. Wenn Sie kabelloses Laden verwenden, stellen Sie sicher, dass Ihr Gerät kabelloses Laden unterstützt und korrekt auf der Powerbank ausgerichtet ist. Entfernen Sie dicke oder nicht kompatible Handyhüllen, die den Ladevorgang beeinträchtigen könnten.

Sicherheitshinweise

Bitte beachten Sie diese Sicherheitshinweise für die ordnungsgemäße Verwendung des Produkts:

1. Berühren Sie das Gerät nicht mit nassen Händen und setzen Sie es keinen Flüssigkeiten aus.

2. Vermeiden Sie es, das Ladegerät fallen zu lassen oder Stößen auszusetzen, da dies zu internen Schäden führen kann.
3. Verwenden Sie die Powerbank bei Temperaturen zwischen 0 °C und 35 °C. Setzen Sie das Produkt keinem Feuer oder Temperaturen über 60 °C aus. Extreme Temperaturen können den Akku beschädigen oder seine Lebensdauer verkürzen.
4. Halten Sie Anschlüsse und Stecker von leitfähigen Materialien wie Staub, Metallpartikeln oder Bleistiftminen fern, um Fehlfunktionen zu vermeiden.
5. Außerhalb der Reichweite von Kindern und Haustieren aufbewahren. Kauen oder Lutschen Sie nicht auf dem Gerät.
6. Zerlegen, zerdrücken, durchstechen oder versuchen Sie nicht, die Powerbank zu reparieren.
7. Dieses Gerät enthält einen Lithium-Ionen-Akku. Manipulationen am Akku können Sicherheitsrisiken bergen.
8. Bewahren Sie Magnetstreifenkarten (z. B. Halten Sie Karten (z. B. Kreditkarten, Ausweise) vom Gerät fern, da magnetische Störungen zu Datenschäden führen können.

Garantie & Kundendienst

Wir bieten 12 Monate Garantie ab Kaufdatum.

- Bei Fragen oder Support kontaktieren Sie uns gerne.
- So erreichen Sie uns: Melden Sie sich in Ihrem Amazon-Konto an, gehen Sie zu „Meine Bestellungen“, suchen Sie Ihre Bestellung und klicken Sie auf „Verkäufer kontaktieren“.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.