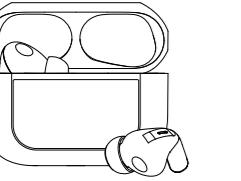


T20 英 说明书

尺寸: 50*60 mm

材质: 80g铜版纸

折叠方式: 风琴十折页

<p>User Manual Wireless Noise-Canceling Stereo Earphones</p>  <p>Thank you for purchasing the T20 wireless earphones. Please read this manual carefully before use, as it includes key specifications, operating instructions, and precautions. After reading, keep this manual in a convenient place for future reference.</p> <p>Personal Precautions While Using</p> <p>To prevent accidents, please adhere to the following guidelines. Carefully read the manual and use this product safely.</p> <ul style="list-style-type: none">Do not insert the earphones deeply into your ears. Never use the earphones without the appropriate earphone adapters. When removing the earphones, handle them carefully and slowly.Always use manufacturer-approved installation components, accessories, and replacement parts.Do not open the casing of the product without authorization. Unauthorized modifications voids the warranty.Avoid subjecting the product to strong impacts or pressure.Use the product only under the operating conditions specified in the technical data.Keep liquids and conductive objects away from the product and its connection ports.When unplugging the charger, hold the plug instead of pulling on the charging cable.This product may interfere with hearing aids, pacemakers, other medical devices, fire alarms, automatic doors, and other automated control systems. Avoid using this product near such equipment to prevent malfunctions or accidents.To protect your hearing, do not use this product at high volumes for extended periods. <p>Regarding Lithium-Ion Rechargeable Batteries</p> <p>Do not disassemble, open, or crush secondary cells or batteries. Keep cells and batteries out of reach of children. Children should only use batteries under adult supervision. Store small batteries in a location inaccessible to children. Do not expose batteries or battery packs to heat or fire. Avoid storing them in direct sunlight.</p> <p>Product Overview</p> <p>Charging Case:</p> <p>LCD Touch Screen:</p> <p>Accessories</p> <p>Charging Instructions</p> <p>Before the first use, please fully charge the product using the included Type-C cable.</p> <p>Batteries are consumables. Even with proper charging and discharging methods, their usable time will gradually decrease. Charging and playback times may vary depending on the operating environment.</p> <p>Charging the Earphones</p> <p>Place the earphones into the charging case and close the lid.</p> <p>Ensure the earphones are correctly placed in the charging case. If the left and right earphones are placed incorrectly in the charging case, the charging contacts on the earphones will not connect to the charging pins in the case, resulting in the earphones not charging.</p> <p>Wearing Instructions</p> <p>Rotate the earphone body and insert it into your ear.</p> <p>Instruction Manual</p> <p>Power On</p> <p>Method 1: When the earbuds are removed from the charging case, you will hear the English prompt "Power on," and the power will automatically turn on for Bluetooth connection.</p> <p>Method 2: Press and hold the touch button (when not connected) to manually turn on the power.</p> <p>The icon in the top-left corner of the charging case's LCD screen will change to a white Bluetooth icon when overlapping "[A]."</p> <p>Power Off</p> <p>Method 1: Place both earbuds into the charging case and close the lid to automatically power off.</p> <p>Method 2: Press and hold the touch button (when power is on and not connected) to manually turn off.</p> <p>Once both earbuds are powered off, the Bluetooth icon in the top-left corner of the charging case's LCD screen will turn red.</p> <p>Low Battery Alert</p> <p>When the earphone battery drops below 20%, a voice prompt will say, "Battery is Low, Please Charge." Please charge promptly.</p> <p>Do not place the earphone directly on the touch button. When wearing the device at night, touching the button may cause accidental activation due to the movement of the touch function.</p>	<p>Product Overview</p> <p>Charging Case:</p> <p>LCD Touch Screen:</p> <p>Accessories</p> <p>Charging Instructions</p> <p>Before the first use, please fully charge the product using the included Type-C cable.</p> <p>Batteries are consumables. Even with proper charging and discharging methods, their usable time will gradually decrease. Charging and playback times may vary depending on the operating environment.</p> <p>Charging the Earphones</p> <p>Place the earphones into the charging case and close the lid.</p> <p>Ensure the earphones are correctly placed in the charging case. If the left and right earphones are placed incorrectly in the charging case, the charging contacts on the earphones will not connect to the charging pins in the case, resulting in the earphones not charging.</p> <p>Wearing Instructions</p> <p>Rotate the earphone body and insert it into your ear.</p> <p>Instruction Manual</p> <p>Power On</p> <p>Method 1: When the earbuds are removed from the charging case, you will hear the English prompt "Power on," and the power will automatically turn on for Bluetooth connection.</p> <p>Method 2: Press and hold the touch button (when not connected) to manually turn on the power.</p> <p>The icon in the top-left corner of the charging case's LCD screen will change to a white Bluetooth icon when overlapping "[A]."</p> <p>Power Off</p> <p>Method 1: Place both earbuds into the charging case and close the lid to automatically power off.</p> <p>Method 2: Press and hold the touch button (when power is on and not connected) to manually turn off.</p> <p>Once both earbuds are powered off, the Bluetooth icon in the top-left corner of the charging case's LCD screen will turn red.</p> <p>Low Battery Alert</p> <p>When the earphone battery drops below 20%, a voice prompt will say, "Battery is Low, Please Charge." Please charge promptly.</p> <p>Do not place the earphone directly on the touch button. When wearing the device at night, touching the button may cause accidental activation due to the movement of the touch function.</p>	<p>Pairing</p> <p>Power on the earbuds, then go to the Bluetooth settings on your device → "Bluetooth" → select "T20" from the device list.</p> <p>Once connected, you will hear the English prompt "Connected," and the Bluetooth icon in the top-left corner of the charging case's LCD screen will turn to a white Bluetooth icon.</p>  <p>Reset</p> <p>If the connection is not working or you want to return to the initial state, follow the reset steps:</p> <ol style="list-style-type: none">When the left/right earbud is not paired, press the touch button on the left/right earbud five times. You will hear the English prompt "[Power off]," then place the earbud back into the charging case.On your Bluetooth device's Bluetooth settings screen, select "T20" and disconnect, then restart the compatible device.The earbuds will automatically re-pair with the compatible device. <p>Earphone Operation Instructions</p> <table border="1"><thead><tr><th>Left Earbud</th><th>Control Device</th><th>Right Earbud</th></tr></thead><tbody><tr><td>Play/Pause</td><td>Tap Once</td><td>Play/Pause</td></tr><tr><td>Volume Down</td><td>Double Tap</td><td>Volume Up</td></tr><tr><td>Reject Call</td><td>Hold Long Press</td><td>Reject Call</td></tr><tr><td>Answer/End Call</td><td></td><td></td></tr><tr><td>ANC</td><td>Triple Tap</td><td>ANC</td></tr><tr><td>Switch ANC Mode</td><td></td><td>Switch ANC Mode</td></tr><tr><td>Activate Voice Assistant</td><td>Press Four Times</td><td>Activate Voice Assistant</td></tr></tbody></table> <p>LCD Touch Screen Operation</p> <p>The Bluetooth icon is displayed in the top-left corner of the LCD screen.</p> <p>ANC Mode Settings</p> <p>(Normal Mode / ANC Mode / Adaptive Mode / Transparency Mode)</p> <p>You can select the optimal noise cancellation mode based on your usage.</p> <p>Find Earbuds Function</p> <p>Tap the "Find My Earbud/R Earbud" icon, then follow the on-screen instructions to locate each earbud.</p> <p>Volume Control</p> <p>Adjust the volume following the on-screen instructions to decrease or increase the sound.</p> <p>Alarm Settings</p> <p>Set alarms as needed.</p> <p>Camera Function</p> <p>Press the camera icon to remotely trigger the shutter button on connected devices.</p> <p>Brightness Settings</p> <p>Adjust the brightness as instructed on the screen to make it clearly visible.</p> <p>Equalizer Settings</p> <p>The equalizer offers five modes: Normal, Rock, Pop, Classical, and Jazz. You can switch between these modes to find your preferred sound.</p> <p>Language Settings</p> <p>Switch between languages of your choice.</p> <p>Wallpaper Settings</p> <p>You can set the wallpaper to an image of your choice.</p> <p>Lighting Function</p> <p>After pressing the "Power On" button, the touch screen will emit a white light.</p> <p>Time and Date</p> <p>In addition to confirming the time and date, you can also set time calibration.</p> <p>Frequently Asked Questions</p> <p>No Power</p> <ul style="list-style-type: none">The battery in the earbuds/charging case is low. Place the earbuds in the charging case to charge.If Bluetooth is turned off on the device you want to connect to. <p>Find Earbuds Function</p> <p>Tap the "Find My Earbud/R Earbud" icon, then follow the on-screen instructions to locate each earbud.</p> <p>No Sound</p> <ul style="list-style-type: none">Disconnect the earbuds from your smartphone or other audio sources, then try pairing them again. Restart your phone or computer if necessary.Wireless interference may be causing the issue. Try moving the earbuds closer to the sound source. (2) Move away from phones, microwaves, or Wi-Fi routers.If there are other Bluetooth devices nearby, they may cause interference. Try turning off Bluetooth or powering off other devices. <p>Unable to Pair with Bluetooth Device</p> <ul style="list-style-type: none">The device is already connected to another device. Try turning off Bluetooth or powering off the unused device.Check if Bluetooth is turned off on the device you want to connect to.If the device's operating system is outdated, please update it to the latest version.Remove the existing pairing settings and start the pairing process from scratch.Check if the earbuds are out of battery. <p>Warranty and After-Sales Service</p> <p>30-Day Free Return + 6-Month Warranty</p> <p>This product comes with a 6-month warranty. However, if you encounter any initial defects or natural malfunctions within 30 days from the date of purchase, please contact us for a free replacement or a full refund.</p> <p>After-Sales Service Guide</p> <p>If you have any questions about the device, encounter technical issues, or suspect a malfunction, please contact your distributor.</p> <p>Specifications</p> <p>Model: T20 Bluetooth: 5.4 Maximum Communication Range: Up to approximately 10 meters (line of sight) Frequency Response: 20Hz - 20KHz Supported Profiles: A2DP, AVRCP, HFP, SPP, GAP, RCFCCOMM, SDP Compatible Devices: iOS, Android, Windows Battery: 380mAh Earphone Charging Time: Approximately 1.5 hours Individual Earbud Weight: Approximately 3.7g Charging Case Weight: Approximately 56.6g</p>	Left Earbud	Control Device	Right Earbud	Play/Pause	Tap Once	Play/Pause	Volume Down	Double Tap	Volume Up	Reject Call	Hold Long Press	Reject Call	Answer/End Call			ANC	Triple Tap	ANC	Switch ANC Mode		Switch ANC Mode	Activate Voice Assistant	Press Four Times	Activate Voice Assistant
Left Earbud	Control Device	Right Earbud																								
Play/Pause	Tap Once	Play/Pause																								
Volume Down	Double Tap	Volume Up																								
Reject Call	Hold Long Press	Reject Call																								
Answer/End Call																										
ANC	Triple Tap	ANC																								
Switch ANC Mode		Switch ANC Mode																								
Activate Voice Assistant	Press Four Times	Activate Voice Assistant																								

<p>Pairing</p> <p>Power on the earbuds, then go to the Bluetooth settings on your device → "Bluetooth" → select "T20" from the device list.</p> <p>Once connected, you will hear the English prompt "Connected," and the Bluetooth icon in the top-left corner of the charging case's LCD screen will turn to a white Bluetooth icon.</p>  <p>Reset</p> <p>If the connection is not working or you want to return to the initial state, follow the reset steps:</p> <ol style="list-style-type: none">When the left/right earbud is not paired, press the touch button on the left/right earbud five times. You will hear the English prompt "[Power off]," then place the earbud back into the charging case.On your Bluetooth device's Bluetooth settings screen, select "T20" and disconnect, then restart the compatible device.The earbuds will automatically re-pair with the compatible device. <p>Earphone Operation Instructions</p> <table border="1"><thead><tr><th>Left Earbud</th><th>Control Device</th><th>Right Earbud</th></tr></thead><tbody><tr><td>Play/Pause</td><td>Tap Once</td><td>Play/Pause</td></tr><tr><td>Volume Down</td><td>Double Tap</td><td>Volume Up</td></tr><tr><td>Reject Call</td><td>Hold Long Press</td><td>Reject Call</td></tr><tr><td>Answer/End Call</td><td></td><td></td></tr><tr><td>ANC</td><td>Triple Tap</td><td>ANC</td></tr><tr><td>Switch ANC Mode</td><td></td><td>Switch ANC Mode</td></tr><tr><td>Activate Voice Assistant</td><td>Press Four Times</td><td>Activate Voice Assistant</td></tr></tbody></table> <p>LCD Touch Screen Operation</p> <p>The Bluetooth icon is displayed in the top-left corner of the LCD screen.</p> <p>ANC Mode Settings</p> <p>(Normal Mode / ANC Mode / Adaptive Mode / Transparency Mode)</p> <p>You can select the optimal noise cancellation mode based on your usage.</p> <p>Find Earbuds Function</p> <p>Tap the "Find My Earbud/R Earbud" icon, then follow the on-screen instructions to locate each earbud.</p> <p>Volume Control</p> <p>Adjust the volume following the on-screen instructions to decrease or increase the sound.</p> <p>Alarm Settings</p> <p>Set alarms as needed.</p> <p>Camera Function</p> <p>Press the camera icon to remotely trigger the shutter button on connected devices.</p> <p>Brightness Settings</p> <p>Adjust the brightness as instructed on the screen to make it clearly visible.</p> <p>Equalizer Settings</p> <p>The equalizer offers five modes: Normal, Rock, Pop, Classical, and Jazz. You can switch between these modes to find your preferred sound.</p> <p>Language Settings</p> <p>Switch between languages of your choice.</p> <p>Wallpaper Settings</p> <p>You can set the wallpaper to an image of your choice.</p> <p>Lighting Function</p> <p>After pressing the "Power On" button, the touch screen will emit a white light.</p> <p>Time and Date</p> <p>In addition to confirming the time and date, you can also set time calibration.</p> <p>Frequently Asked Questions</p> <p>No Power</p> <ul style="list-style-type: none">The battery in the earbuds/charging case is low. Place the earbuds in the charging case to charge.If Bluetooth is turned off on the device you want to connect to. <p>Find Earbuds Function</p> <p>Tap the "Find My Earbud/R Earbud" icon, then follow the on-screen instructions to locate each earbud.</p> <p>No Sound</p> <ul style="list-style-type: none">Disconnect the earbuds from your smartphone or other audio sources, then try pairing them again. Restart your phone or computer if necessary.Wireless interference may be causing the issue. Try moving the earbuds closer to the sound source. (2) Move away from phones, microwaves, or Wi-Fi routers.If there are other Bluetooth devices nearby, they may cause interference. Try turning off Bluetooth or powering off other devices. <p>Unable to Pair with Bluetooth Device</p> <ul style="list-style-type: none">The device is already connected to another device. Try turning off Bluetooth or powering off the unused device.Check if Bluetooth is turned off on the device you want to connect to.If the device's operating system is outdated, please update it to the latest version.Remove the existing pairing settings and start the pairing process from scratch.Check if the earbuds are out of battery. <p>Warranty and After-Sales Service</p> <p>30-Day Free Return + 6-Month Warranty</p> <p>This product comes with a 6-month warranty. However, if you encounter any initial defects or natural malfunctions within 30 days from the date of purchase, please contact us for a free replacement or a full refund.</p> <p>After-Sales Service Guide</p> <p>If you have any questions about the device, encounter technical issues, or suspect a malfunction, please contact your distributor.</p> <p>Specifications</p> <p>Model: T20 Bluetooth: 5.4 Maximum Communication Range: Up to approximately 10 meters (line of sight) Frequency Response: 20Hz - 20KHz Supported Profiles: A2DP, AVRCP, HFP, SPP, GAP, RCFCCOMM, SDP Compatible Devices: iOS, Android, Windows Battery: 380mAh Earphone Charging Time: Approximately 1.5 hours Individual Earbud Weight: Approximately 3.7g Charging Case Weight: Approximately 56.6g</p>	Left Earbud	Control Device	Right Earbud	Play/Pause	Tap Once	Play/Pause	Volume Down	Double Tap	Volume Up	Reject Call	Hold Long Press	Reject Call	Answer/End Call			ANC	Triple Tap	ANC	Switch ANC Mode		Switch ANC Mode	Activate Voice Assistant	Press Four Times	Activate Voice Assistant
Left Earbud	Control Device	Right Earbud																						
Play/Pause	Tap Once	Play/Pause																						
Volume Down	Double Tap	Volume Up																						
Reject Call	Hold Long Press	Reject Call																						
Answer/End Call																								
ANC	Triple Tap	ANC																						
Switch ANC Mode		Switch ANC Mode																						
Activate Voice Assistant	Press Four Times	Activate Voice Assistant																						