144*98mm

产品使用说明

序号	实现功能	耳机状态	操作	提示音	指示灯
1	开机	关机	长按 ″ ∪ / M ″ 键 2S	"蓝牙模式"	蓝红交替闪烁
2	关机	开机	长按"∪/М"键 3S	·关机·	指示灯灭
3	进入配对	关机	开机后自动进入搜索状态	"蓝牙模式"	红蓝交替闪烁
4	配对成功	配对	/	"叮咚"声	蓝灯常亮
5	与手机连接 断开	连接	/	"咚" 声	红蓝交替闪烁
6	开机回连	关机	开机后自动回连先前配对成功的设备	"叮咚"声	蓝灯常亮
7	远距离断开 回连	远距离断 开	耳机离手机超出连接范围,自动断开蓝 牙,红蓝灯交替闪,在约1分钟内耳机 靠近手机到连接范围内则自动回连,不 然5分钟后自动关机	"叮咚"声	蓝灯常亮
8	音量调整	播放音乐	长按音量 ∨+/ ▶▶1 、 ▶◀ /∨-键	最大/最小音量: 提示 "滴滴"	/
9	上一曲	音乐播放中	短按 "I◀◀/V-" 键	/	/
10	下一曲	音乐播放中	短按 "∀+/▶▶]"键	/	/
11	音乐播放/暂停	音乐播放中	短按 " 【 / ▶ ■ " 键	/	/
12	电话提醒	来电话	/		/
13	接听电话	来电话	短按 "【" 键	/	/

14	拒接来电	来电话	长按 " 🖍 键	/	/
15	末码重拨	待机	双击 "【" 键	/	/
16	挂断电话	通话中	短按 "【"键	/	/
17	低电报警	各种开机 状态中	电池电压低于 3.3V	每个20秒提示 一下"电量低, 请充电"	/
18	低电关机	各种开机 状态中	电池电压低至约 3.0V	关机	/
19	充电中指示灯	充电	只要一充电就亮红灯	/	红灯常亮
20	LIN	任何状态下	先插耳机一端 , 再插音源	关机	指示灯灭
21	充电饱和	充电	电池充满电	/	红灯灭
22	FM 模式	开机状态中	短按。①/M。键	"FM 模式"	/
23	FM 自动搜索模式	FM 模式	短按 " ✔ / ▶ 1 " 键	/	蓝灯闪烁
24	SD 卡模式	蓝牙模式 下有插入 TF卡	短按 " 也/ M" 键	"SD 模式"	/
25	蓝牙模式	在 FM 模式 下	短按"也/// 键	"蓝牙模式"	/
26	关/开耳灯			/	/
27	切换音效			/	/

Instructions

No.	Function Realization	Headphone status	Operate	voice prompt	Indicator
1	Power On	Headphone Off	Long Press " U/M " about 2s	"bluetooth mode"	Blue and red lights flicker alternately
2	Power Off	Headphone on	Long Press " 也/M " about 3s	"Power Off"	Indicator off
3	Paring	Headphone off	Enter Paring Status when Power On	"bluetooth mode"	Blue and red lights flicker alternately
4	Pairing Sucessful	Paring	/	"Ding Dong"	Blue light on
5	Disconnect	connected	1	"Dong"	Blue and red lights flicker alternately
6	Auto Paring	Power Off	Auto pairing when power on	" Ding Dong"	Blue light on
7	Out of distance disconnect	Out of distance disconnect	Out of distance disconnect (headphone enter into paring status, Blue and red lights flicker alternately, headphone will be auto connected if move to working range within 1 mins, or will automatic power off after 5 mins without connection	"Ding Dong"	Blue light on
8	volume adjustment	Playing music	Long press V+/ ▶▶ ◀◀ /V-	Maximum/Minimum Volume: "D D"	/
9	Previous Track	Playing Music	Short press « I◀◀ / V- "	/	/
10	Next Track	Playing Music	Short Press " V+/▶▶ "	/	/
11	Paly/Pause Much	Playing Music	Short Press "	/	/

12	Incoming call prompt	Incoming Calls	/	Ling Ling…»	/
13	Answer Calls	Incoming Calls	Short Press " 🖍 "	/	/
14	Reject Calls	Incoming Calls	Long Press " 🖍 "	/	/
15	Redial the last number	On State	Double Press " 🖍 "	/	/
16	Hangs up Calls	On Calling	Short Press " 🕻 "	/	/
17	Low Electricity Prompt	On State	Battery voltage lower than 3.3V	Prompts please charge every 20s	/
18	Low Electricty Power Off	On state	Battery voltage lower than 3.1V	"Power Off"	1
19	Charging Indicator	Charing	Red Light when Charging	/	Red Light On
20	AUX IN	Any status	One Plug in Headphone, another plug into the audio devices	"Power Off"	Indicator Off
21	Fully Charge	charing	Fully Charge	/	Red Light Off
22	FM Mode	Headphone On	Short Press" U/M "about 2s	FM Mode	/
23	Automatic Station Searching	FM Mode	Short Press " C /▶■"	/	Blue light flash
24	SD Card Model	Insert SD Card when on bluetooth mode	Short Press" Ů/M "	"SD Card Mode"	/
25	Bluetooth Mode	FM Mode	Short Press" 🖖/M "	"Bluetooth Mode"	/
26	Turnon/Off LED light	·		/	/
27	Switching Sound Effects			1	/

FCC Warning Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.