

400*140mm

Bluetooth Headset



Product code: TEX-19

INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

Description of Parts:



3	LED Light Indicator / Built-In Microphone
4	Volume Control
5	Charging Port
6	Micro SD (TF) Card Slot
7	Volume Decrease (V-) / Previous Track
8	Volume Increase (V+) / Next Track
9	Play/Pause/Phone/Scan Button
10	ON/OFF / Mode Button

INSTRUCTIONS FOR USE

Charging instructions
The headset comes with a built-in rechargeable battery. Before using it for the first time, we recommend to charge the battery fully. It takes 2-3 hours to fully charge the battery. Only use the supplied USB Cord to charge the Bluetooth Headphones.

Connect the USB charging cord to USB power source (SV24), and the Type-C plug to the Charging port of the device. The Red LED light turns on while the device is charging. It takes about 2-3 hours for the headphones to fully charge. When the battery is fully charged, the LED light will turn blue.

Switching on/off the device

Long press the ON/OFF button to turn on/off the device.

Getting started

- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Package Contents

- Bluetooth Headset
- USB Charging Cable
- Auxiliary Audio Cable
- Instruction Manual

Key Features

- Built-in Headset headphones with Micro SD card slot, FM radio & aux-in
- Built-in Bluetooth connects to any Bluetooth enabled devices
- Listen to music wirelessly
- Built-in mic allows you take phone calls while enjoying music; don't miss any calls!
- Optimized for Google Assist and Siri
- Supports any audio format for easy use of use
- Adjustable and foldable headband for ease-of-use
- Large padded ear-cups for comfort
- Built-in rechargeable battery 200mAh provides play time for up to 8 hours at max volume
- Type-C interface, charging cable & aux cable included

Safety instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may cause fire or electric shock.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, dirt etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit away from children.
- This product is not a toy.
- Do not use the handset at excessive volume levels, as damage to hearing may occur.

An indication tone will alert you when the volume is adjusted to maximum level.

Listening a call with the Bluetooth Headphones in Bluetooth mode

Function	Operation	Button
Answer a call	Incoming Call	Press the Phone button once to answer an incoming call
Reject a call	Incoming Call	Long press the Phone Button
End a call	Incoming Call	After your phone conversation, short press the Phone button.
Increase Volume	During a call	Press and hold the V+ button will increase the volume
Decrease Volume	During a call	Press and hold the V- button will decrease the volume
Redial last number	Standby mode and connected to a device	Short press the Phone button twice

Phone Note

- Not all mobile phones support all the functions listed above. Please refer to your cell phone's user manual for further information.
- Certain functions and indication tone may vary depending on your mobile phone.

Listening FM radio

- Turn on the speaker.
- Short press the Mode button repeatedly until it reaches FM radio mode with sound from a FM radio station.
- Short press the Scan button once for searching and recording all radio stations within frequency range.
- Short press the Next Track button or Previous Track button for listening next or previous already saved radio station.

Stream music from Micro SD (TF) Card

- Turn on the speaker.
- Micro SD (TF) Card (included with song) into the Micro SD (TF) Card Slot.
- Speaker will automatically start playing song from the Micro SD (TF) Card.
- To Skip Track Forward – Short press the Next Track button.
- To Skip Track Backwards – Short press the Previous Track button.
- To Pause the Track – Short press the Play/Pause button.
- To Play the Track – Short press the Play/Pause button.

Note: Micro SD (TF) Card: Supports up to 32GB; Supports music file format: MP3, WAV, Micro SD (TF) Card not included.

Tip!

- Short press the Mode button to switch different functions of the speaker. The functions are - Bluetooth / Micro SD (TF) / FM radio.
- When the speaker is not in use, turn OFF the device to save battery power.
- Do not overcharge the speaker.

Voice Assistant Operation

Google Assist, short press the button three times on your device.

This feature enables you to ask questions and seek assistance on a number of things from your Voice Assistant, even when you're several feet away from your phone. Below are some examples.

Note: Google Assist is available on eligible Android 5.0 devices or later. Works on Lollipop, Marshmallow and Nougat Android Phones with Google Play Services. >1.5GB of memory and 720P or higher screen resolution. Please ensure Google Assist App is downloaded and is listed as the default Voice Assistant on your mobile device.

While the headphones are paired using Bluetooth, an indication tone will sound before you speak to start a conversation with Siri or Google Assist. An indication tone will sound before you speak into the headphones.

- Example 1: Short press the Play/Pause button three times and then speak into the headphones, what's the weather today?
- Example 2: Short press the Play/Pause button three times and then speak into the headphones, what's the current time?
- Voice Assistant will reply with something like "mually cloudy with a few showers."
- Voice Assistant will reply with something like "it is 8pm."
- Set an alarm for 7am tomorrow.
- Play some music.
- What's in the news?

Listening to Music using AUX-in Mode

Connect the AUX-in cable to the audio input of the Headphones. The other end of the cable connects to the audio device (such as a computer, tablet, etc.)

Select your favorite song at the source device and play.

Note: Using this Aux-in mode, you do not need to turn on the Headphones, and you need to control the volume increased/decreased, play/pause, next/previous track through your source device only.)

Pairing the device with Bluetooth devices (phone or music device)
Connect the Bluetooth Headphones to your phone or music device. Turn on the device, you will hear an indication tone and the LED will flash red and blue. Place the Bluetooth Headphones and Bluetooth device (phone or music device) so that they are no further than 1m apart.

Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instructions on how to enable Bluetooth on your device.

When the headphones are in pairing mode, select "TEX-19" from the list of available Bluetooth devices.

You might be prompted with "Pair with TEX-19" message on your source device, with "Cancel" and "OK" options. Please click "OK".

Once paired successfully, you will hear another indication tone, and the LED will flash blue slowly.

If pairing is unsuccessful, turn off the device first and then re-pair following the above steps.

Once you have paired the Bluetooth Headphones with a device, the headphones will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.

When you want to use the headphones with another device, you need to disconnect the headphones with what is switched on. If you want to pair it with a new device, please follow the steps outlined above.

Once the Bluetooth Headphones are paired with your device, the music will transmit through the Bluetooth Headphones. Please refer to your device's user manual for further information.

Function Summary

Listening to Music

Once the Headphones are paired with your device you can stream music wirelessly through the Bluetooth Headphones. Should you encounter any problems while streaming please refer to your device's user manual for further information.

Control Function	Function	Operation	Button
Increase Volume	Playing music	Press and hold the V+ button will increase the volume	
Decrease Volume	Playing music	Press and hold the V- button will decrease the volume	
Pause	Playing music	Short press on the Play/Pause button will pause the music	
Play	Playing music	Short press on the Play/Pause button will restart the music	
Previous track	Playing music	A short press each time on the previous track button will return you to the previous track	
Next track	Playing music	A short press each time on the Next Track button will take you to the next track	

- Do not dispose of the device in a fire, as it will result in an explosion.
- Do not use the device near flammable liquids or gases, such as gasoline, kerosene, and damage.
- Do not let the device face the floor. The device may slip and fall, causing physical damage.
- Do not attempt to disassemble the device as it may get damaged if you are not a professional.

Specifications

Bluetooth specification	Bluetooth 5.3
Bluetooth version	5.3
Operating distance	Up to 8 hours
Charging time	US-5022A
Charging time voltage/current	About 2-3 hours
Built-in Battery	200mAh

(Note: Battery life & charging time may vary based on usage & type of devices used.)

FCC Instructions

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the device is operated in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to take one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.