

Device Connection and Pairing		Function Operations		Technical Data		MAINTENANCE		Compliance Information		Troubleshooting									
1. Automatic Connection Press and hold the button on the camera and the button on the monitor to power them on. The camera's blue light is flashing quickly. It will begin the automatic connection process. Once the camera's blue light is on, the connection is successful, and the screen will display the icon.	2. Manual Connection ① After powering on the monitor, press the button to select Pairing Camera. ② Search for and pair the connection. When the connection is successful, the camera's blue light will stay on, and the icon will appear on the screen. 	1. Live Monitoring and Recording After the camera and monitor are powered on and successfully connected, the live view will automatically display. Press the button briefly to start recording (the "REC" icon will flash). Press the button again to stop recording. Press the button to enter the video playback interface. 2. Live Monitoring and Photo Capture After the camera and monitor are powered on and successfully connected, the live view will automatically display. Press the button briefly to capture a real-time image from the live monitoring screen. 3. Music "In live monitoring mode, press the button briefly to play music. The music icon will appear in the top right corner of the screen." "Press the button briefly to switch to the next song, press the button to decrease the volume, and press the button to increase the volume." 4. View Video "Press the button briefly to enter video playback. Press the button briefly to browse forward/backward through the video. Press the button to confirm and play the selected video. Press the button again to pause playback. Press the button to exit the playback interface and return to the live monitoring screen." "When the video is paused, pressing the button briefly to choose to delete the current video. In the video browsing interface, pressing the button will also allow you to delete the current video."	5. View Photos "Press the button briefly to enter video playback, then press the button to switch to the photo browsing interface." "Press the button briefly to browse forward/backward through the photos. Press the button to confirm and view the selected photo. Press the button briefly to exit the viewing interface." "Press the button briefly to delete the current photo. In the photo browsing interface, press the button to delete the current photo."	Menu Settings List Press the button briefly to enter the menu settings list. Press the or button to navigate up or down through different settings options. Press the button to confirm and enter the selected settings menu. Display Brightness: Press the button briefly to adjust different brightness levels. Press the button briefly to exit the current setting. Language: Press the button briefly to select and switch between multiple languages. Press the button briefly to exit the current setting. Camera Volume: Press the button briefly to adjust the camera's volume. Video Resolution: Press the button briefly to select and switch between different resolutions. Press the button briefly to confirm the selected video resolution.	Day/Night Mode: Press the button briefly to select and switch between Night, Day, or Auto modes for live monitoring. Press the button briefly to confirm the selected mode. Press the button briefly to exit the current setting. (When Night/Day mode is selected, the icon will appear at the top of the screen.) Alarm: Press the button briefly to select different alarm groups. Press the button briefly to activate the current alarm, and press the button briefly to enter the alarm setting interface. Press the button to select the time value, press the button to confirm the set time value. Once the time value is set, press the button to confirm. Press the button again to turn off any alarm. (When the alarm is successfully activated, the icon will appear in the top right corner of the monitor screen.) Date and Time: Press the button briefly to select year, month, day, hour, or minute. Press the button briefly to adjust the values for year, month, day, hour, and minute. Once the values are set, press the button briefly to confirm. Default Setting: Restore to factory settings. Format: Format and clean the files stored on the SD card. It is recommended to back up important files before formatting. Date Stamp: Press the button briefly to toggle the timestamp on or off.	Pairing Camera: Press the button briefly to search for and connect to the camera (ensure both the camera and monitor are powered on). Version: The device version number. Connecting Camera to PC When this is an SD card in the camera, use the Type-C cable included in the package to connect the camera (powered on) to the computer USB port. (After connecting to the computer, the connection between the camera and the monitor will be automatically disconnected. After unplugging the data cable, the camera's blue light will flash slowly, and the camera needs to be reconnected to the monitor.) Date and Time: The computer screen will display the icon, indicating that the PC has detected the SD card and is automatically installing the camera driver. After opening the task, you can see that there are 2 folders inside. Format: VIDEO: The video you monitor and record will be stored in this folder. PHOTO: The photo you monitor and record will be stored in this folder. VIDEO: You can copy the video files to the computer for backup. (The built-in memory card will overwrite recorded content in a loop by default. It is recommended to export data and format it once a month to ensure read and write performance.)	US Importer: TECHNOLOGY INC Name: See-Mew Consulting GmbH Contact Person: kiki hu Post Code: 80303 Address: 1942 Broadway St STE 314C Boulder, CO 80302 United States EU REP: Name: See-Mew Consulting GmbH Contact Person: kiki hu Address: 1942 Broadway St STE 314C Boulder, CO 80302 United States UK REP: Name: See-Mew Consulting Ltd Contact Person: Bily Han Address: Electric Avenue Vision 25, London, EN13 7GD MADE IN CHINA FCC ID: 2AB9M-AB5-60 UKCA: FCC ID: 2AB9M-AB5-60 CE: CE UK: UK EU: EU UK: UK EU: EU WARNING: STRANGULATION HAZARD: Cords can strangle children. Keep cords out of the reach of children (more than 3ft (0.9m) away).												
No Display on Screen ① Press the power button briefly to wake up the screen. ② Check if the camera and monitor are disconnected. ③ Force restart the monitor by pressing and holding the reset button for 5 seconds.	Device Freezing /No Response ① Immediately press and hold the reset hole to restart. If that doesn't work, contact customer support.	Battery (Camera unit) 10000mAh 3.7V	FCC Warning This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications made to this device without express written permission of the FCC is illegal and void. It is recommended to disassemble the host in a high-temperature exposure environment to prevent damage to the equipment. If you forget to disassemble the device, you need to cool it down to room temperature before turning it on to avoid damaging the circuit board due to sudden temperature differences. Do not dismantle, crush, or expose the battery to high temperatures. It is recommended to use a 5V / 1A adapter to charge the camera. Charge the device (display) using the provided 5V/2A adapter. Charging with other power sources may affect performance.	MAINTENANCE This equipment complies with FCC radiation exposure limits set for an uncontrolled environment. These limits are designed to be met under normal operating conditions. The device should be positioned so that the distance between the user and the device is at least 6" (15 cm). The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. (Monitor screen) Product Name: Baby monitor Model: ABS-60 Manufacturer: Shenzhen Aobanhai Electronic Technology Co., Ltd Address: 6 Floor, Yushuanyi Science Park, No.8 South Lane, Xishanjiagou Street, Guihua Community, Shenzhen, China Contact Person: Meng Feng Tel: +86 15217034875 E-mail: mengfeng@163.com	Problem Can't power on Solution ① Check if the charging indicator is flashing not during charging; the red light should stay on once fully charged. ② Try powering on the device after charging it for 1 hour. ③ If the device still won't power on after charging, press and hold the reset hole for 5 seconds to force a restart. Unable to Automatically Connect to Camera Solution ① Confirm that the camera's blue light flashes quickly when the monitor is powered on. ② Try unplugging and plugging the data cable again. ③ Turn off potential interference sources in the car (e.g., WiFi, Bluetooth, etc.). ④ If the camera and monitor cannot connect, please check if the camera's blue light is in sleep mode (e.g., slow flash mode). ⑤ Press and hold the reset hole (use a pin) for 5 seconds to reset both devices, then reconnect.														
Monitor Displays "Signal weak or disconnected" The blue light of the camera flashes when it is connected, but it cannot connect to the monitor	The video files/photos cannot be saved ① Verify the camera is powered on (the blue LED should flash quickly). If off, restart the camera. ② Adjust the direction of the monitor's antenna.	Item Parameters	TECHNICAL DATA <table border="1"><thead><tr><th>Item</th><th>Parameters</th></tr></thead><tbody><tr><td>Display</td><td>4.3"IPS</td></tr><tr><td>Power Adaptor</td><td>INPUT: 12V~24V DC OUTPUT: 5V~2.0A</td></tr><tr><td>Working temperature range</td><td>-10°C~60°C (Extreme temperatures may cause screen display abnormalities)</td></tr><tr><td>Picture transmission distance</td><td>Open Area: 18.6 meters (61 feet) Obstructed Area: 15.4 meters (50.5 feet)</td></tr><tr><td>Battery (Monitor unit)</td><td>2000mAh 3.7V</td></tr><tr><td>WiFi</td><td>2.4G</td></tr></tbody></table>	Item	Parameters	Display	4.3"IPS	Power Adaptor	INPUT: 12V~24V DC OUTPUT: 5V~2.0A	Working temperature range	-10°C~60°C (Extreme temperatures may cause screen display abnormalities)	Picture transmission distance	Open Area: 18.6 meters (61 feet) Obstructed Area: 15.4 meters (50.5 feet)	Battery (Monitor unit)	2000mAh 3.7V	WiFi	2.4G	US Importer: TECHNOLOGY INC Name: See-Mew Consulting GmbH Contact Person: kiki hu Post Code: 80303 Address: 1942 Broadway St STE 314C Boulder, CO 80302 United States EU REP: Name: See-Mew Consulting GmbH Contact Person: kiki hu Address: 1942 Broadway St STE 314C Boulder, CO 80302 United States UK REP: Name: See-Mew Consulting Ltd Contact Person: Bily Han Address: Electric Avenue Vision 25, London, EN13 7GD MADE IN CHINA FCC ID: 2AB9M-AB5-60 UKCA: FCC ID: 2AB9M-AB5-60 CE: CE UK: UK EU: EU WARNING: STRANGULATION HAZARD: Cords can strangle children. Keep cords out of the reach of children (more than 3ft (0.9m) away).	US Importer: TECHNOLOGY INC Name: See-Mew Consulting GmbH Contact Person: kiki hu Post Code: 80303 Address: 1942 Broadway St STE 314C Boulder, CO 80302 United States EU REP: Name: See-Mew Consulting GmbH Contact Person: kiki hu Address: 1942 Broadway St STE 314C Boulder, CO 80302 United States UK REP: Name: See-Mew Consulting Ltd Contact Person: Bily Han Address: Electric Avenue Vision 25, London, EN13 7GD MADE IN CHINA FCC ID: 2AB9M-AB5-60 UKCA: FCC ID: 2AB9M-AB5-60 CE: CE UK: UK EU: EU WARNING: STRANGULATION HAZARD: Cords can strangle children. Keep cords out of the reach of children (more than 3ft (0.9m) away).
Item	Parameters																		
Display	4.3"IPS																		
Power Adaptor	INPUT: 12V~24V DC OUTPUT: 5V~2.0A																		
Working temperature range	-10°C~60°C (Extreme temperatures may cause screen display abnormalities)																		
Picture transmission distance	Open Area: 18.6 meters (61 feet) Obstructed Area: 15.4 meters (50.5 feet)																		
Battery (Monitor unit)	2000mAh 3.7V																		
WiFi	2.4G																		
Screen Image Lagging/Freezing Device Noise	Device has no sound ① Press the Volume + button to increase the volume. ② Check if the device is in Mute Mode: Enter Menu → Audio Settings or short-press Volume +/− buttons to toggle mute. ③ Force restart the device by pressing the reset hole. Loose/Detached Mount ① Clean the suction cup contact surface and windshield thoroughly. ② Resecure the straps tightly around the seatback. ③ Check if the telescopic bracket buckle is fully engaged.																		