

(In the alarm list, press the NI button to uncheck the box and turn off the alarm.) 9. Settinas

1.Set the time& date:Use the Up, Down, Left, and Right buttons to select time and date settings. Press OK to enter the time and date SD card icon 1 , indicating that the PC has detected the SD card setup interface. Use the remote $\Delta \nabla \bigcirc \bigcirc$ buttons to adjust the time and is automatically installing the camera driver. or date values, and press OK to confirm and save.

- 2.Set target language. 3.Set different volume levels.
- 4. Adjust the screen brightness and set the time when the screen is it
- without working condition. Restore factory settings.
- 6. View version number. 7. Connect to Bluetooth
- ① Click "OK" to check the Bluetooth checkbox.
- Select the paired device
- ③ Click "OK" to add a new device and search for a pairable device. 4 Make sure the wireless Bluetooth pairing is turned on and within the pairing range.
- 5 Click "OK" and pairing will succeed after a while (if pairing fails, please start again from step ①).

7.OK Button 2.Display Screen 8.Right Button 3.Microphone/Charging Ind Light 9.Speaker 4.Working Light 10.TF Card Slot 11.Reset Hole 6.Power Button 12.TYPE-C Charging Port

*Use a Type-C data cable to connect the computer and TV (with SD

transfer. When selecting data transfer, the PC screen will display an

VIDEO folder on the TV's SD card. You can also delete or copy videos,

card). A pop-up will appear on the TV with options for charging/data

*You can download MP4 format videos from the internet to the

JPG

DC-5V

English, German, French, Spanish,


photos, and other content from the SD card.

10.Connect to Computer

Photo format

Charge voltage

Language

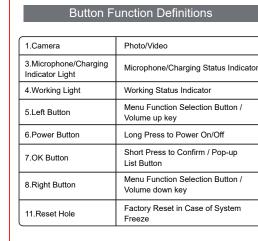

ΓV Won't Turn On

Connect the TYPE-C cable to charge

please back up the content on the SD

Try turning up the volume or unmuting

2 Check that the batteries are installed

correctly, ensuring the correct polarity.

3 Make sure there are no obstructions

between the remote control and the TV.

and that the signal can be transmitted

ard before deleting or expanding storage.


the device for 1-2 hours.

Can't Take Photos or Check if the SD card is properly inserted

Remote Control Not

① Replace the batteries

Record Videos or if the memory is full. If the memory is full,

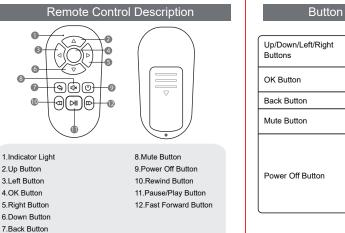

Check if the downloaded video is in MP4

format and placed in the root directory of

2 Check if the video file itself is corrupted

Try restarting the TV and reloading the

Ensure that the Bluetooth audio device

devices on the TV to ensure it is connecte

Try disconnecting and re-pairing the

s turned on and in pairing mode.

Check the list of paired Bluetootl

Use a pin tool (not included in the acce


s shown in the figure below).

ies) to press the reset hole to reset it.

Downloaded Videos | by trying to play a different video file

to the correct one

Button Function Definitions		Operation Guide
Up/Down/Left/Right Buttons OK Button Back Button Mute Button	Menu switch/left and right switch playback content/up and down keys to adjust volume ①Short press to confirm selection. ②Press to bring up the list. Return to the previous menu. Toggle sound on/off. (Only works in Story and Music modes.)	1.Power On/Off: *Press and hold the ① Power Button on the TV to turn it on or off. *Press the ② Power Off Button on the remote control to quickly turn off the TV. *In standby mode, press any button on the TV or press any button on the remote control (except the Power Off Button) to wake the TV screen. *If the device does not power on after receiving it, please connect th original charger and charge it for 1-2 hours to activate the device, ensuring the battery is in optimal working condition. *If the product has not been used for over 20 days, please charge the device for 1-2 hours every 20 days to avoid deep discharge that mat damage the battery. *Before long-term storage, it is recommended to turn off the device and disconnect any external connections, and store it in a dry, cool environment.
Power Off Button	Quick power off button. This button is used solely to turn off the TV via the remote control. When the TV is on, press this button to turn it off. This button cannot be used to turn the TV on. To turn the TV on, use the Power Button on the TV itself.	

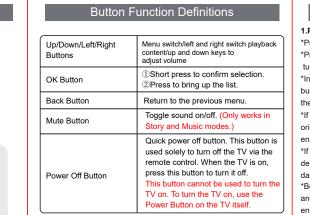

This is a toy and does not receive real television broadcasts.

*Keep away from water or heat sources.

tightened under adult supervision.

FCC Warning

following two conditions:

*Do not disassemble or attempt to repair the product

*Do not use the device for extended periods to protect eyesight.

The battery compartment of the remote control contains a safety

screw. Please ensure that the battery is replaced and the screw is

1) This device may not cause harmful interference, and (2) this device must

Note1: This equipment has been tested and found to comply with the limits

are designed to provide reasonable protection against harmful interference in a

frequency energy and, if not installed and used in accordance with the instru-

there is no guarantee that interference will not occur in a particular installation.

which can be determined by turning the equipment off and on, the user is

sidential installation. This equipment generates, uses and can radiate radio

or a Class B digital device, pursuant to part 15 of the FCC Rules. These limits

accept any interference received, including interference that may cause

Remote Control Usage:

standby mode, press any button on the TV or press any tton on the remote control (except the Power Off Button) to wake up

ginal charger and charge it for 1-2 hours to activate the device, suring the battery is in optimal working condition. the product has not been used for over 20 days, please charge the vice for 1-2 hours every 20 days to avoid deep discharge that may

ncouraged to try to correct the interference by one or more of the following

NOTE 2: Any changes or modifications to this unit not expressly approved by being in a protective state of low power over-discharge and the party responsible for compliance could void the user's authority to operate

The device has been evaluated to meet general RF exposure requirement. The This device complies with Part 15 of the FCC Rules. Operation is subject to the device can be used in portable exposure condition without restriction. 5.Do not expose to high temperatures or place near a heat

For battery power indication, please refer to the illustration.

Full Slightly low Low Insufficient Use Type-C cable to charge the battery, with 5V1A charger.

If this equipment does cause harmful interference to radio or television reception

2. When your product has not been used for a long time and can Reorient or relocate the receiving antenna. not be powered on normally, please charge it with (5V1A) charger

Increase the separation between the equipment and receiver -Connect the equipment into an outlet on a circuit different from that to which -Consult the dealer or an experienced radio/TV technician for help.

> unable to power on. 4. Please keep the phone shell and interface dry, and do not use it in a damp environment.


1. When the product indicates that the battery is Low power. please charge it with (5V1A) charger in time to better protect the battery and prolong the life of the product.

The remote control requires 2 AAA batteries (not included). For child safety, the battery compartment is secured with screws. Please use a screwdriver (not included) to open the cover and install

Charging Method:

the batteries correctly, ensuring the correct polarity.

*Connect the TV to a USB power source using a TYPE-C cable for charging. The charging indicator will light up red during charging, and the light will turn off when fully charged (as shown in the image below).

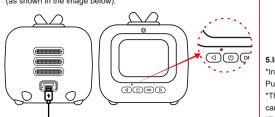

for 15 minutes, and then press the Reset button to power it on

3. When your product completely powers off, please charge it in

source. Do not leave in direct sunlight for any length of time.

6. The built-in battery cannot be removed or replaced. If it is

damaged, please contact the merchant or customer service for

maintenance. The charger should be used under the supervision

of adults. The charger is not a toy. Please keep it dry and use it

7 If the SD card space is used up, please clear videos or photos

9. The product contains small accessories, which children need

8.Do not mix old and new batteries. Do not mix alkaline.

standard(carbon-zinc), or rechargeable batteries.

to use under the supervision of their parents.

according to the specifications.

from the SD card in time.

time for 1-2 hours to keep the battery in a high level state, to avoid

4.Reset Operation:

*If the TV freezes due to incorrect operation, use a thin pin (not

5.Inserting the Memory Card

*Insert the memory card. Make sure to insert the metal contacts first. Push the memory card inward until you hear a click. *The memory card can only be inserted in one way. Do not force the


card in if it will not go in smoothly. *To remove the memory card, simply push in and the card will eject out.

EN: Warning! Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities. Never leave dead or weak batteries in the controller of this toy. If you do not plan to use the toy for several days, remove the batteries. Dispose of batteries proptly and properly, do not bury or burn them.

FR: Attention! Ne convient pas aux enfants de moinsde 36 mois. Contient des petites pieces pouvantetre avalees etre avalees Ne mélangez pas des piles anciennes et neuves, différents types de piles (Standard, Alcaline ou Rechargeable) ou Rechargeable capacités différentes. Ne laissez jamais une batterie morte ou faible.dans l'appareil Le contrôleur pour ce jouet. Si vous n'allez pas utiliser le jouet plus d'une fois Mon Dieu, enlevez la batterie. Jetez les piles rapidement et Eh bien, ne

les enterrez pas ou ne les incinérez pas.

included) to press the reset hole to turn the TV off and restart it.

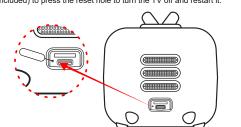

After turning on the TV, press △ ♥ ④ b to select a desired function,

and press OK to confirm and enter the selected feature.

Fairy Tale, or Animal stories. Press OK to confirm and enter the selected story category.

*Press the 1 button on the TV or the $\triangle \nabla$ button on the remote

Contiene piezas pequenas. Peligro deobstruccion. No mezcle pilas viejas y nuevas, diferentes tipos de pilas (estándar, alcalinas o recargables), o baterías recargables de diferentes capacidades. Nunca deje baterías agotadas o débil en el controlador de este juguete. Si no planea usar eljuguete durante variosdias, retire las baterías. Deseche las baterías de manera adecuada y adecuada, no las entierre ni

ES: iAtencion! No indicado para menores de 36meses.

DE: Achtung! Fur Kinder unter 36 Monaten nichtgeeignet. Beinhaltet Kleinteile. Verschluckungs-gefahr. Mischen Sie nicht alte und neue Batterien, verschiedene Batterietypen (Standard-batterien.

Alkalibatterien oder Batterien) wiederaufladbar) oder wiederaufladbare. Batterien unterschiedlicherd Kapazität. Lassen Sie niemals leere oder schwache Batterien in der Steuerung dieses Spielzeugs. Wenn Sie das Spielzeug mehrere Tage lang nicht benutzen, nehmen Sie die Batterien heraus. Entsorgen Sie

current story.The ⊲⊳ button on the remote control can switch the play-

nd press to rewind or fast forward the playback content.

Batterien ordnungsgemäß, vergraben oder

-back content, and press to rewind or fast forward the playback content.Press (ok) to bring up the list. *Press the S button on the remote or the Power Button on the

TV to return to the previous menu. be used to move up, down, left, or right. *Select the music icon, and press OK to confirm and enter the

on the remote to select the target you want to swap. music playback interface.Press the 🗇 🕞 button on the TV or the he 🕙 🕞 button on the TV can only be used to move up or down △ ▽ button on the remote control to adjust the volume. Press the utton on the remote control to mute the sound. ose the target to swap.) *Press the | button to play/pause the current music. *Press \bigcirc K to confirm the selected target, and use the \triangle ∇ \bigcirc \bigcirc The ⊲⊳ button on the remote control can switch the playback content.

*Press OK to confirm the swap. Once the positions are swapped. ress (ок) to bring up the list. connected targets of the same type will disappear, and points ssical Music" folder of the TF card Only MP3, AAC and WAV will be awarded

*Press the $\Delta \nabla$ @ buttons to select between Bedtime, Inspirational, *Select the Video icon, and press oK to confirm and enter the *Select the Album icon and press OK to enter the album interface. recording interface. Camera and Album to either take photos or view saved ones.

*Press OK to start or stop the recording. *Recorded videos can be played back in the Cartoon Playback feature.

verbrennen Sie sie nicht. Attenzione! Non adatto ai bambini di eta inferiora 36 mesi. Contiene piccole parti. Rischio disoffocamento. Non mescolare batterie vecchie e nuove, tipi diversi di batterie (Standard, Alcalino o Ricaricabile) o Ricaricabile diverse capacita. Non lasciare mai una batteria scarica o scarica nel dispositivo II controller per questo giocattolo. Se non utilizzerai il giocattolo più

di una volta Dio, rimuovi la batteria. Smaltire le batterie tempestivamente e Bene, non seppellirli o incenerirli. Product Name: Children's TV Toys

Nom du produit: Jouets télévisés pour enfants Produkt Name: Kinderfernsehspielzeug Contact: us-proservice@outlook.com eu-proservice@outlook.com ■ Manufacturer: Shenzhen Aobaisen Electronic Technology

Address: 6 Floor, Yuanshuo Science Park, No.8 South Lane, Xinshiqiao Street, Guihua Community, Shenzhen, China Contact Person: Meifeng Feng Tel: +86 15217034875

control to adjust the volume. Press the (button on the remote 4. Games

buttons to select another target to swap.

E-mail: mgyaya@163.com

♠WARNING:

CHOKING HAZARD

DE: IN CHINA HERGESTELLT FCC ID: 2BN9M-TV1

UK: MADE IN CHINA Manufacture Date: 07/2025

IT: FATTO IN CINA SN: 202507001

FR: FABRIQUÉ EN CHINE FCC ID: 2BN9M-TV1-1

control to mute the sound. Press the (DI) button to play/pause the *Select the Games icon and press (OK) to confirm and enter the

*Use the $\Delta \nabla$ @ buttons on the remote to select a game, and 6.Cartoon Playback press OK to start playing. *Supports playing MP4 format videos downloaded by users and saved *During gameplay, the △ ▽ ④ ▷ buttons on the remote control can

in the SD card. *Videos recorded on the TV will also be played here. *In the games Super Pets and Candy Box, press the △ ▽ ④ D button

automatically saved to the album.

Note: Please save the downloaded MP4 video file to the "Video" folder of the TF card

*In the Camera interface, press OK to take a photo. The photo will be

*While browsing the album, press OK briefly to select and delete the

Calendar

*Select the Calendar icon and press OK to view the calendar. *Use the Up, Down, Left, and Right buttons to select the date and time. 8. Alarm

*Select the Alarm icon to enter the alarm setup interface, where you can set multiple alarms

*In the alarm list, select an alarm and press OK to enter the alarm setup interface. Here, you can set the alarm time, ringtone, and other

*Once inside, use the ③⑤ buttons on the remote to navigate between options. Once set, press OK to confirm. *When the alarm rings, a prompt will appear. Choose "Off"

or "Snooze" in the prompt, and confirm to turn off or snooze the alarm.

 Children 0-3 years old should use this product under the supervision of their parents

Do not use while charging Do not put the product near fire





Attention: This is a toy, not an electronic television.No digital display or broadcasting functions.