



MODEL:C57


AMBIENT LIGHT PORTABLE SPEAKER

User manual

Dear customer:

Please read the user manual carefully and keep it for your records

Presentation of the product

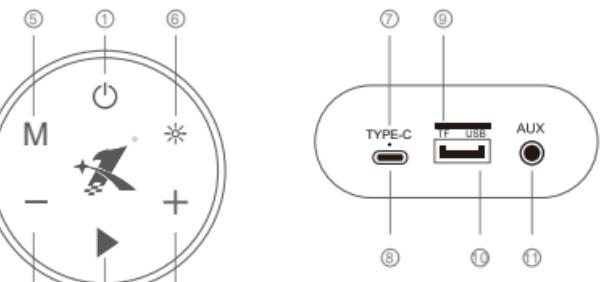

① Long press: On/Off switch

② Short press: Previous track
Long press: Volume decrease

③ Short press: Next track
Long press: Volume increase

④ Short press: Pause/Play
Long press: TWS connection

⑤ Mode switch

⑥ Light mode switch

⑦ LED indicator

⑧ Type-c charging port

⑨ Micro TF card slot

⑩ USB Flash drive slot

⑪ AUX input

Charging the speaker

The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn off automatically. Please recharge the battery.

Plug the Micro USB and of the USB rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged. Once the speaker is fully charged LED Light would turn OFF.

Important reminder

- Please do not disassemble, repair or transform the product.
- The product used Lithium battery, please do not discard or put it in the fire.
- Do not expose this product to rain or humidity, so as to avoid the damages to the device.
- Please do not recharge the device repeatedly, otherwise the Lithium battery inside would be aging quickly.
- In the Fm radio mode, please insert the charging line to the charging port, to get better radio signals and better listening experience.

Pairing the device

- Long press key ① to power on the speaker.
- You will hear beeping sound and words "The wireless device is ready to pair". The status LED will flash blue, indicating that the device is in pairing mode.
- Set your wireless-enabled device to search for wireless devices.
- When the wireless-enabled device finds the wireless devices, select "C57" from the list of found devices connection pairing to connect and pair.
- After a successful pairing, words "The wireless device is connected successfully" will be heard, indicating that the device is paired and the status LED will stay solid blue.

Listening to music wirelessly

Please ensure that your device (Mobile phone, tablet or other devices) is paired with the Wireless speaker to stream music wirelessly. once it is paired, play music from your device.

Music mode	Function	Operation buttons
Playing music	Increase Volume	Long press + key
Playing music	Decrease Volume	Long press - key
Playing music	Pause	Short press II key
Pause	Play	Short press II key
Playing music	Previous track	Short press - key
Playing music	Next track	Short press + key

Note: the above functions can be used in all mode, such as wireless play mode, USB flash drive play mode, Micro TF card play mode, as well as FM radio mode. In AUX input mode, you need to control the medias through the media source devices. you need to operate with the source devices for previous / next track.

TWS connection

- Turn ON two speakers.
- Long press the ⑤ button on two speakers and when you hear the "beep", be assured that the device is successfully paired, connected successfully in TWS mode.
- Search for "C57" in your mobile phone and pair it with this device.
- Enjoy your music.
- Note: 5 minutes after turning to the device, the device will go into sleep mode if there is no pairing. To get the device working again, press the power button.

Stream music from TF card or USB flash drive

- Turn ON the speaker.
- Insert the micro TF card or USB flash drive preloaded with songs, into the micro TF card slot or USB flash drive slot of the speaker correspondingly, sound message "USB mode" or "TF card mode" respectively will be heard. Speaker would automatically start playing songs from the micro TF card or USB flash drive.

Play music through "Auxiliary" mode

- Turn ON the speaker.
- Insert one end of the auxiliary cable (included) into the auxiliary port, sound message "AUX mode" will be heard. Plug the other end to the audio device (such as phone / MP3 / Player / computer / tablet...etc)
- Select your favorite song at the source device to play.
- Long press key  or  to decrease or increase the volume.

Note: media can be controlled only through the source devices, while playing music in auxiliary mode.

Tips!!

When the speaker is not in use, turn it OFF in order to save the battery life.

Troubleshooting

Problem	Possible cause	Solution
Low sound level	Source (Tablet, Mobile phone, Laptop, etc.) Volume too low.	Adjust source volume
	Low battery or battery dead	Low battery or replace battery
Sound distorted	Low battery or battery nearly dead	Low battery or replace battery
No sound at all	Source (Tablet, Mobile phone, Laptop.) turned off.	Turn the source on
	Speaker turned off	Turn the speaker on
	Media paused on source	Play media from source
Wireless BT cannot connect	There are short functional obstacles in the product	Restart the speaker
	Product has been connected with other devices	Disable wireless BT of other source devices and search for wireless BT again

Specification

Wireless version	Mvsilicon + DSP
Wireless distance	up to 10 metres
Output power / Horn type	1 X 30 Watts / 4Ω 113mm
FM frequency range	87-108MHz
Unit size	195*195*173mm
Power input	DC 5V (1A)
Charging time	4.5 hours
Play time	up to 8-9 hours
Built-in rechargeable battery	7.4V / 4000mAh
Micro TF card/USB flash drive	Support up to 32GB
Multiple functions	Wireless play / USB flash drive / Handsfree calling / Micro TF card / AUX input / TWS connection

Safety instructions

- keep the speaker away from direct sunlight, fire, and high voltage equipment.
- Do not operate the speaker if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and / injury to yourself and damage to speaker.
- Do not use the speaker if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may please the user at serious risk.
- Do not use the speaker with wet hands.
- Do not put objects into any of the openings.
- Keep the speaker free from dust.
- Do not use this speaker for anything other than its intended use.
- Keep the speaker out of reach of children.
- This product is not a toy. Use extra caution while children are using this product.

Care and maintenance

Read the following recommendations before using the wireless speaker, following these you will be able to enjoy the product for many years.

Do not expose this product to liquid, moisture or humidity to avoid the product's internal circuit being affected.

Don't use abrasive cleaning solvents to clean this product.

Do not expose this product to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.

Don't let this product fall down into the floor the internal circuit might get damaged.

Don't attempt to disassemble this product as it may get damaged if you are not professional.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



MADE IN CHINA